


Steering Column Multifunction Switch LH

Removal

1. Remove the steering column shrouds.
Refer to: [Steering Column Shrouds](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. If equipped, remove the steering column control switch.
Refer to: [Steering Column Control Switch](#) (211-05 Steering Wheel and Column Electrical Components, Removal and Installation).
3. Remove the screw(s) and the steering column multifunction switch.

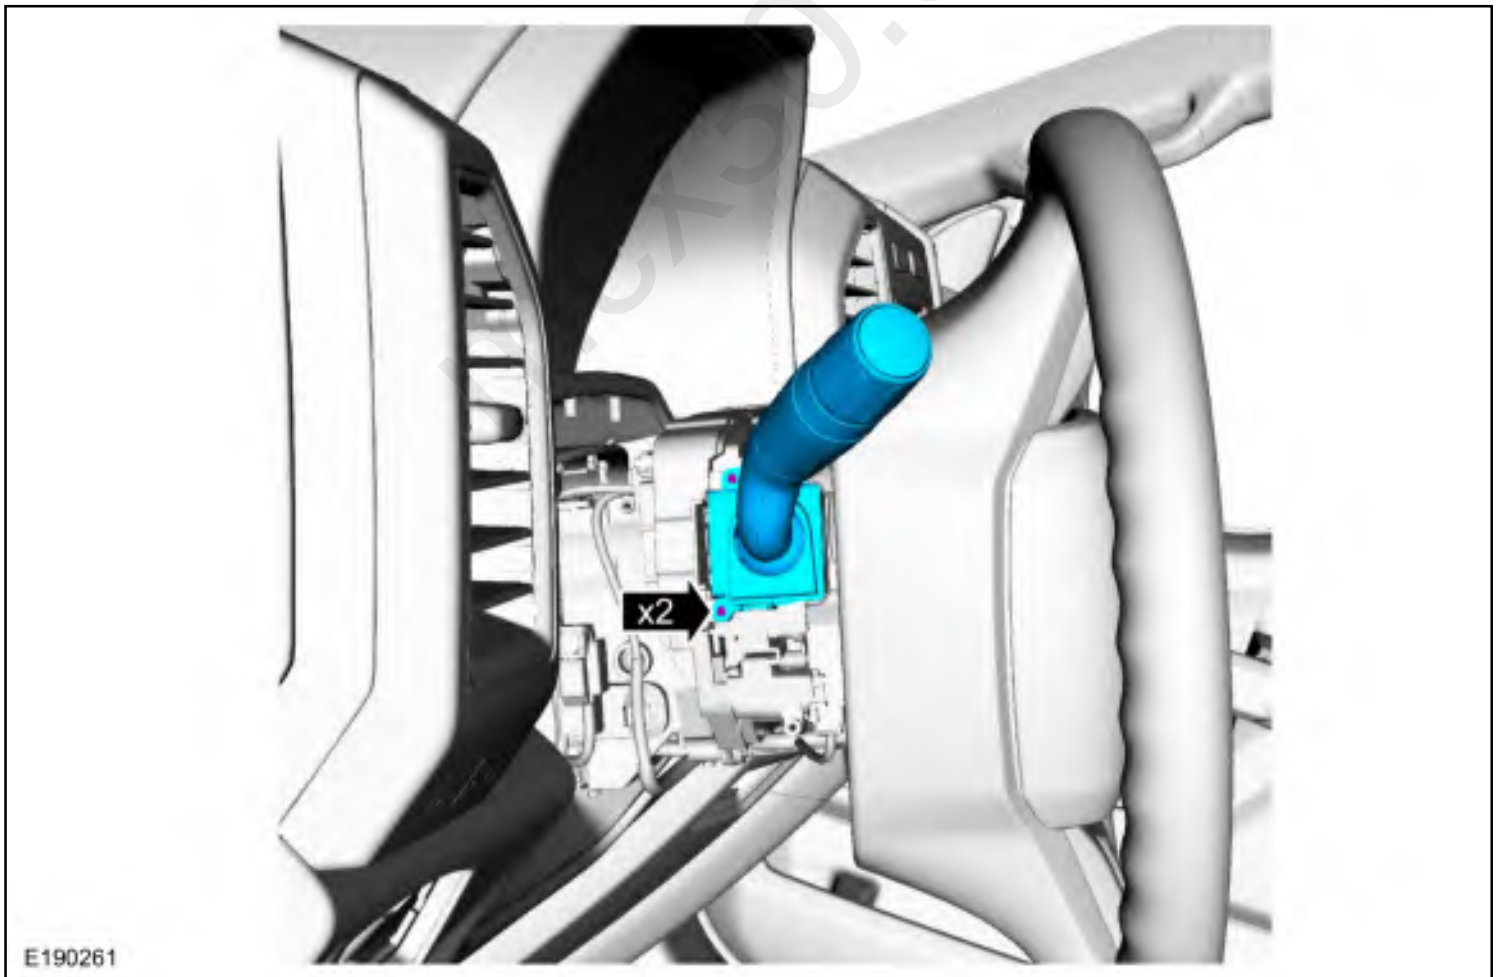

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

mcx30.com