

# Ignition Switch - Vehicles With: Keyless Vehicle System


## Removal

1. Lower the steering column opening trim panel.



E190185

2. Remove the start/stop switch
  1. Disconnect the start/stop switch electrical connector.
  2. Release the start/stop switch tabs.
  3. Push the start/stop switch out of the steering column opening trim panel.

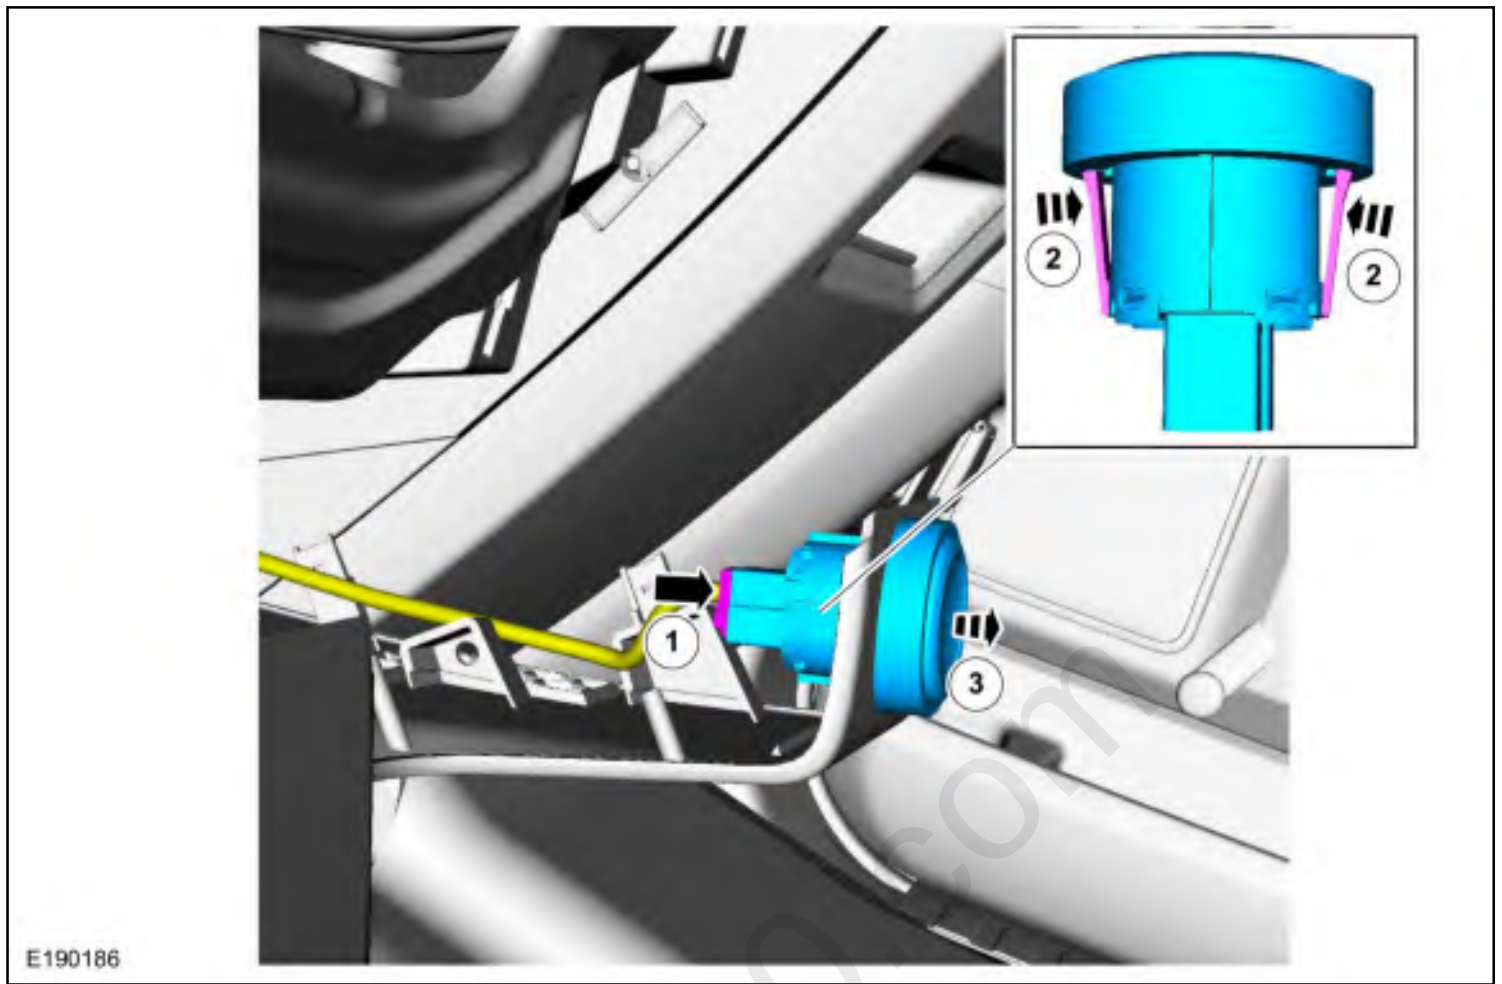

## Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company