

Steering Column Control Module (SCCM)

Removal

NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. **NOTE:** This step is only necessary when installing a new component.


NOTE: The PMI process must begin with the current SCCM installed. If the current SCCM does not respond to the diagnostic scan tool, the tool may prompt for As-Built data as part of the repair.

Using a diagnostic scan tool, begin the PMI process for the SCCM following the on-screen instructions.

2. Remove the steering wheel.
Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).
3. Remove the steering column shrouds.
Refer to: [Steering Column Shrouds](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


Vehicles with selector lever

4. Release the selector lever electrical connector retainer from the SCCM.

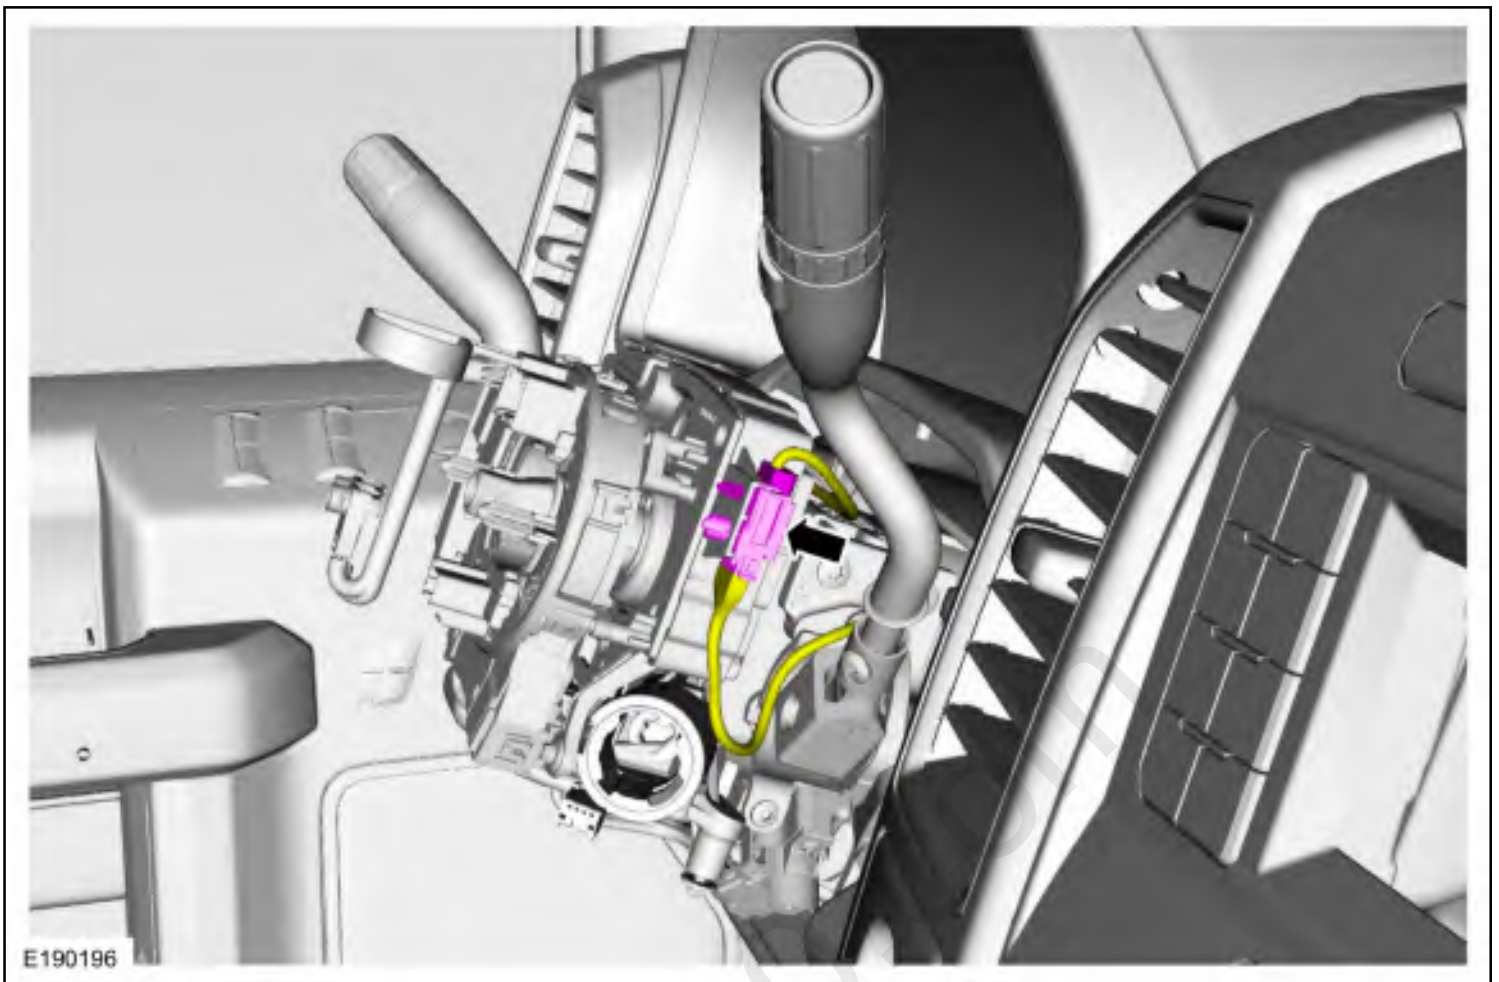


All vehicles


5. Disconnect the SCCM electrical connectors.

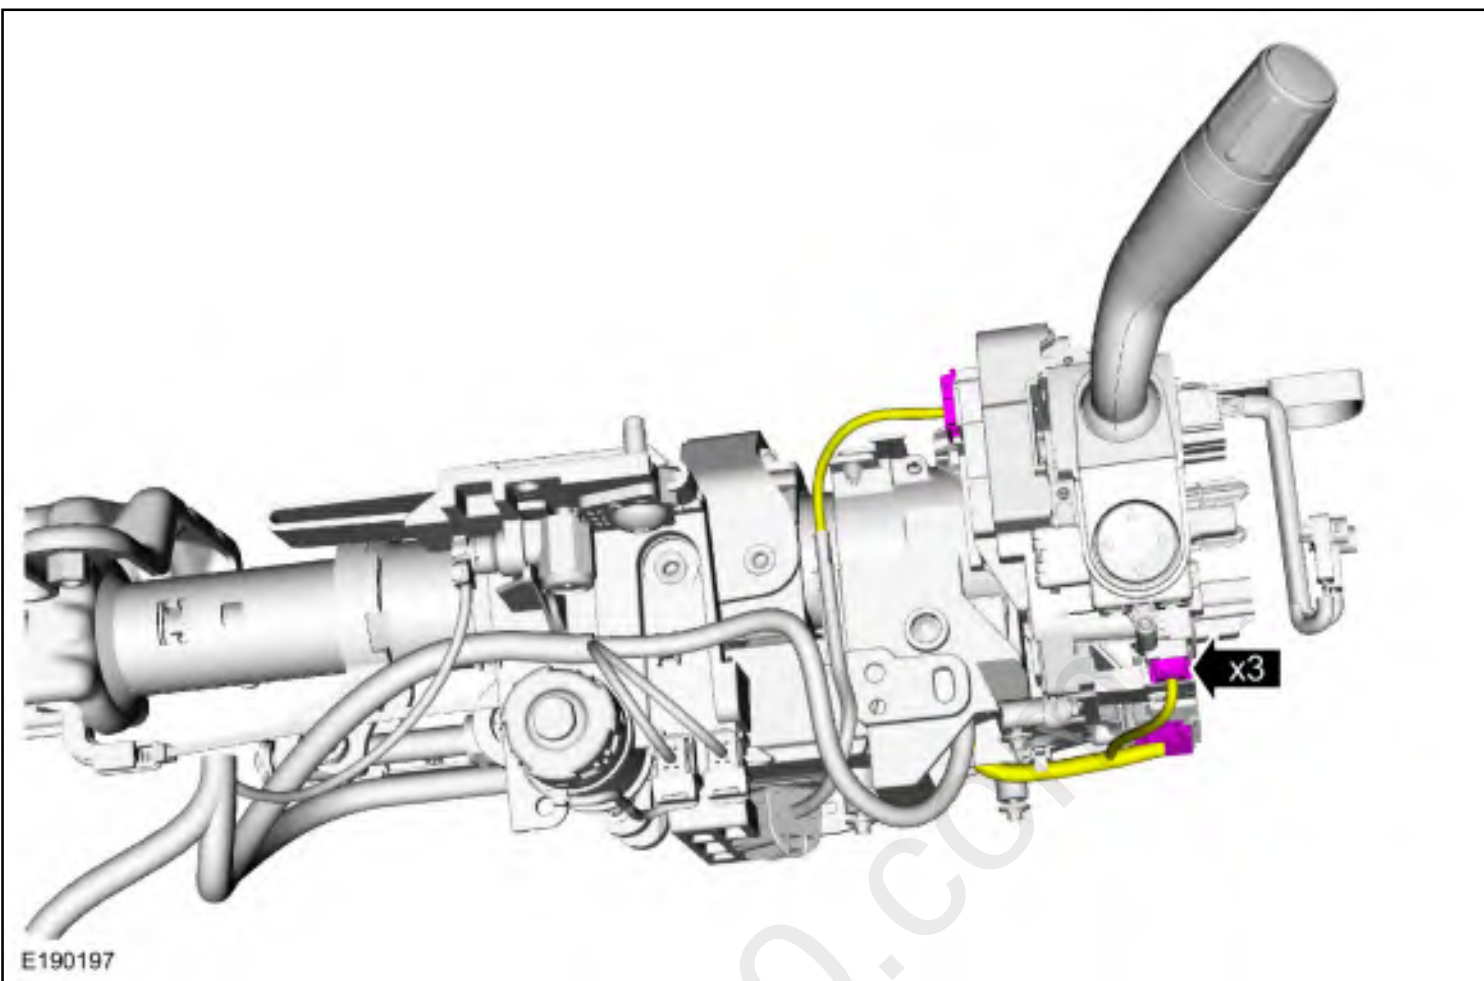

6. Remove the SCCM screw.
Torque: 22 lb.in (2.5 Nm)

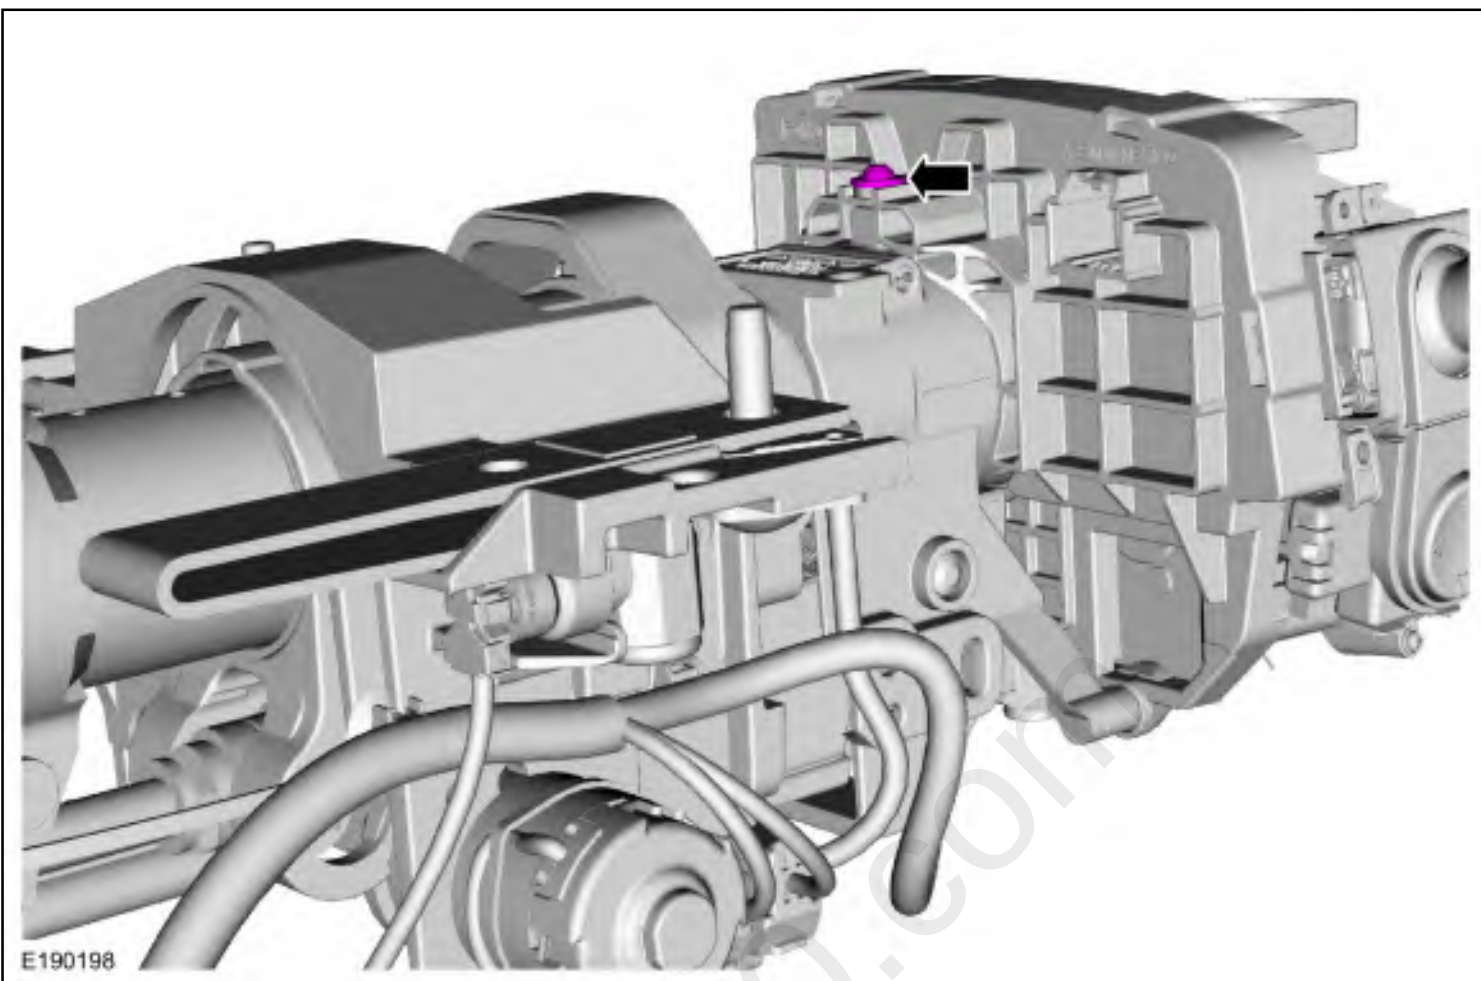

7. Remove the screws and the SCCM.
Torque: 22 lb.in (2.5 Nm)

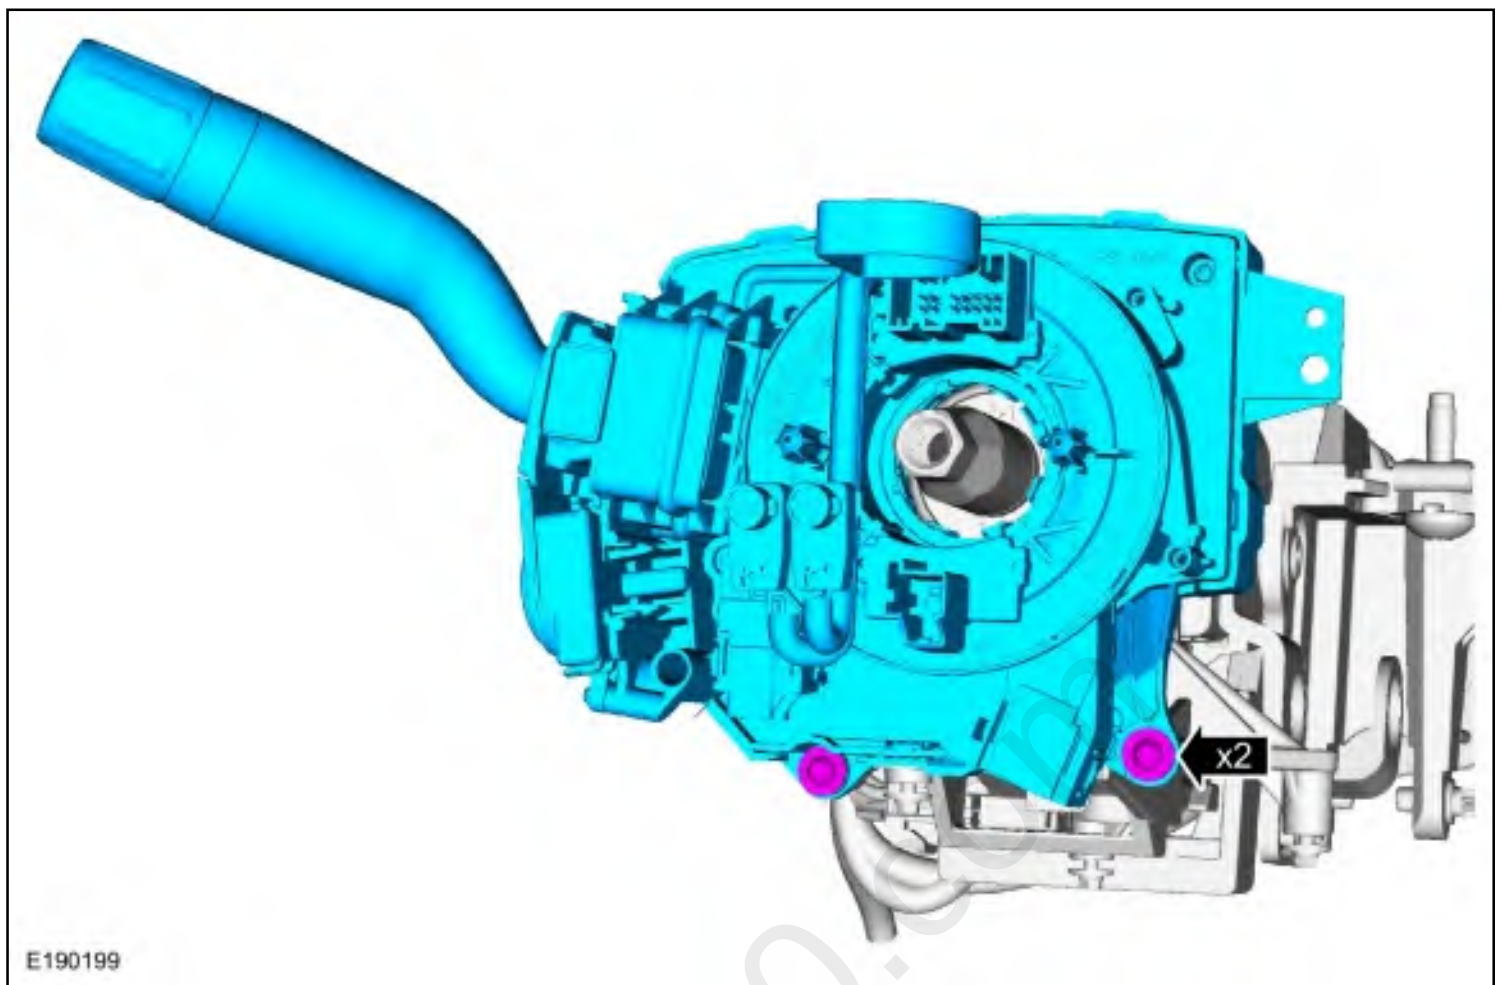

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Using a diagnostic scan tool, complete the PMI process for the SCCM following the on-screen instructions.