

Intermediate Speed Sensor B (ISSB)

Base Part Number: Base Part Number: 7H103

Removal

1. Remove the main control valve body.
Refer to: [Main Control Valve Body](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).
2. Remove the intermediate speed sensor B.
 1. Slide the plastic lock to the unlocked position. While pressing the plastic tab, disconnect the electrical connector.
 2. Remove the bolt and the intermediate speed sensor B.