

Transmission Fluid Temperature (TFT) Sensor

Removal


1. Remove the main control valve body.

Refer to: [Main Control Valve Body](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).


Refer to: Main Control Valve Body (307-01) .

2. Disconnect the TFT sensor.

1. Slide the plastic lock to the unlocked position. While pressing the plastic tab, disconnect the electrical connector.

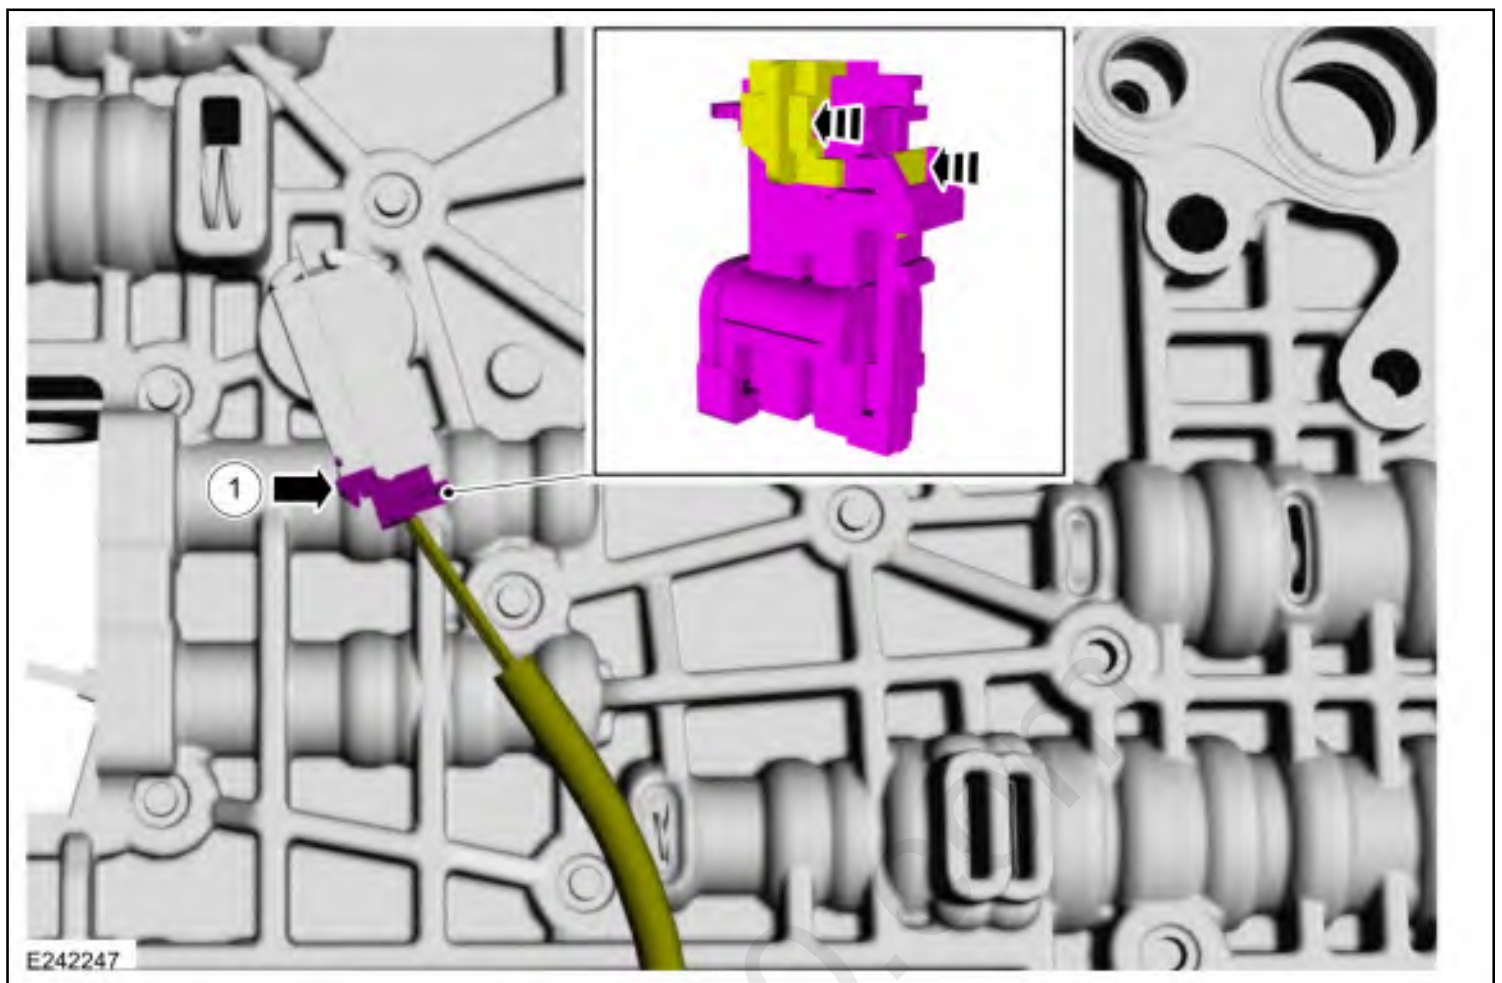


3. Remove the TFT sensor.
 1. Lift plastic tab.
 2. Rotate the TFT sensor clockwise.
 3. Remove the TFT sensor.

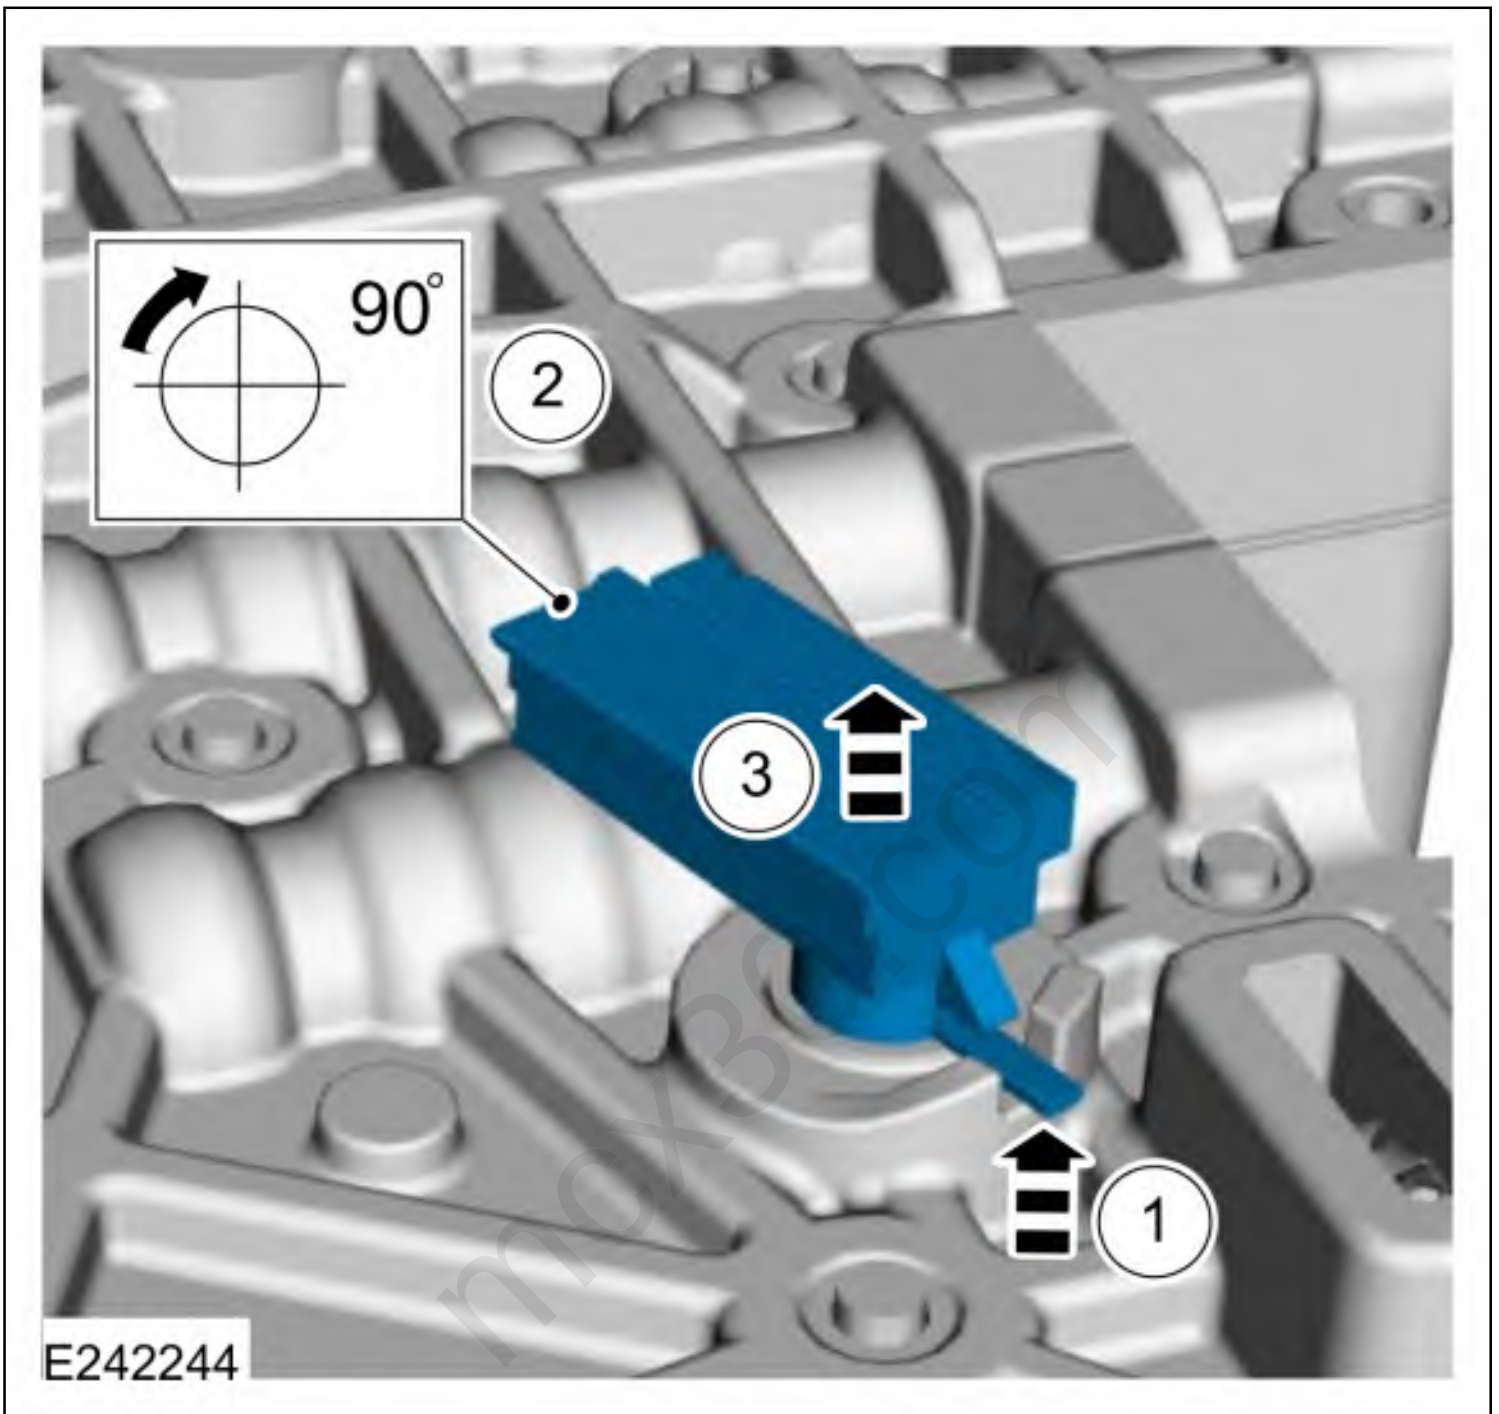


Installation

1.
Install the TFT sensor.
 1. Position the TFT sensor in the main control valve body.
 2. Rotate the TFT sensor counter clockwise until the plastic tab locks into place.

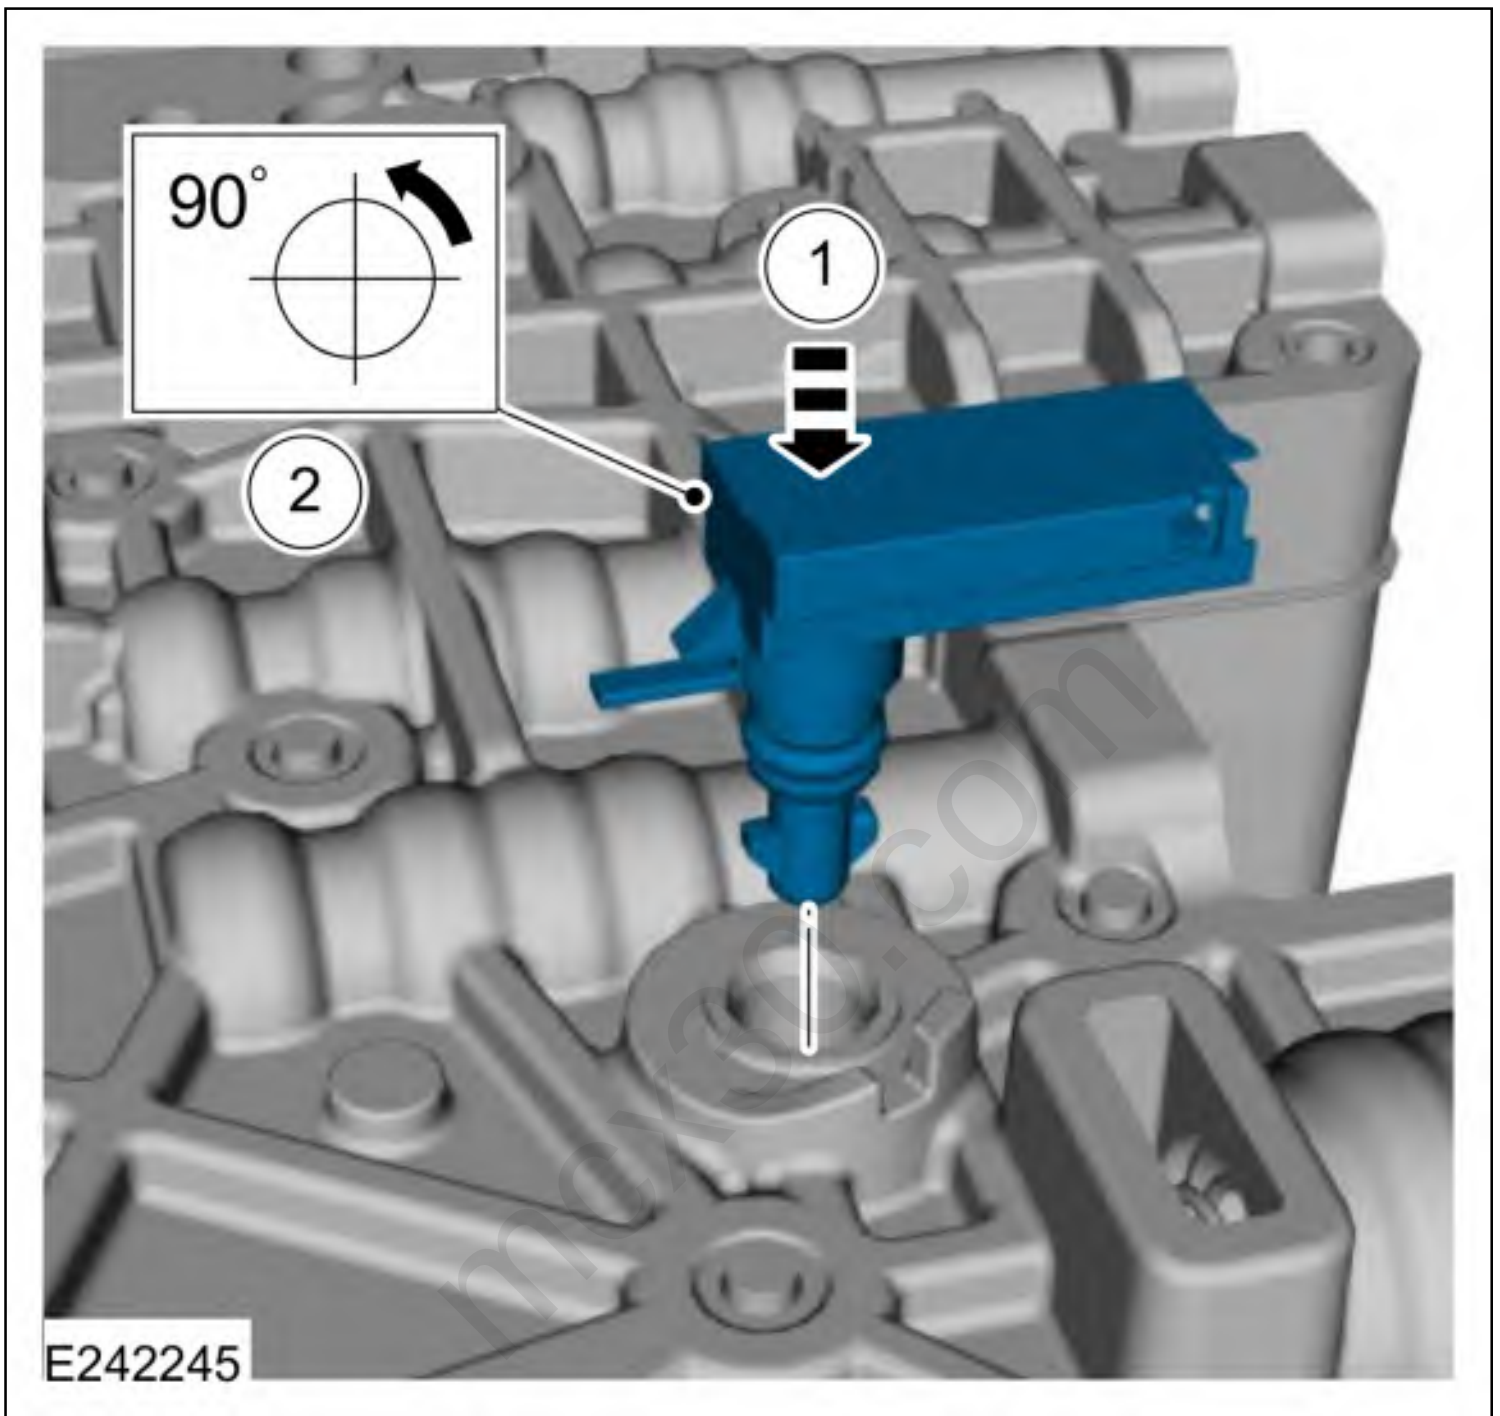

2. Connect the TFT sensor.
 1. Slide the plastic lock to the locked position.

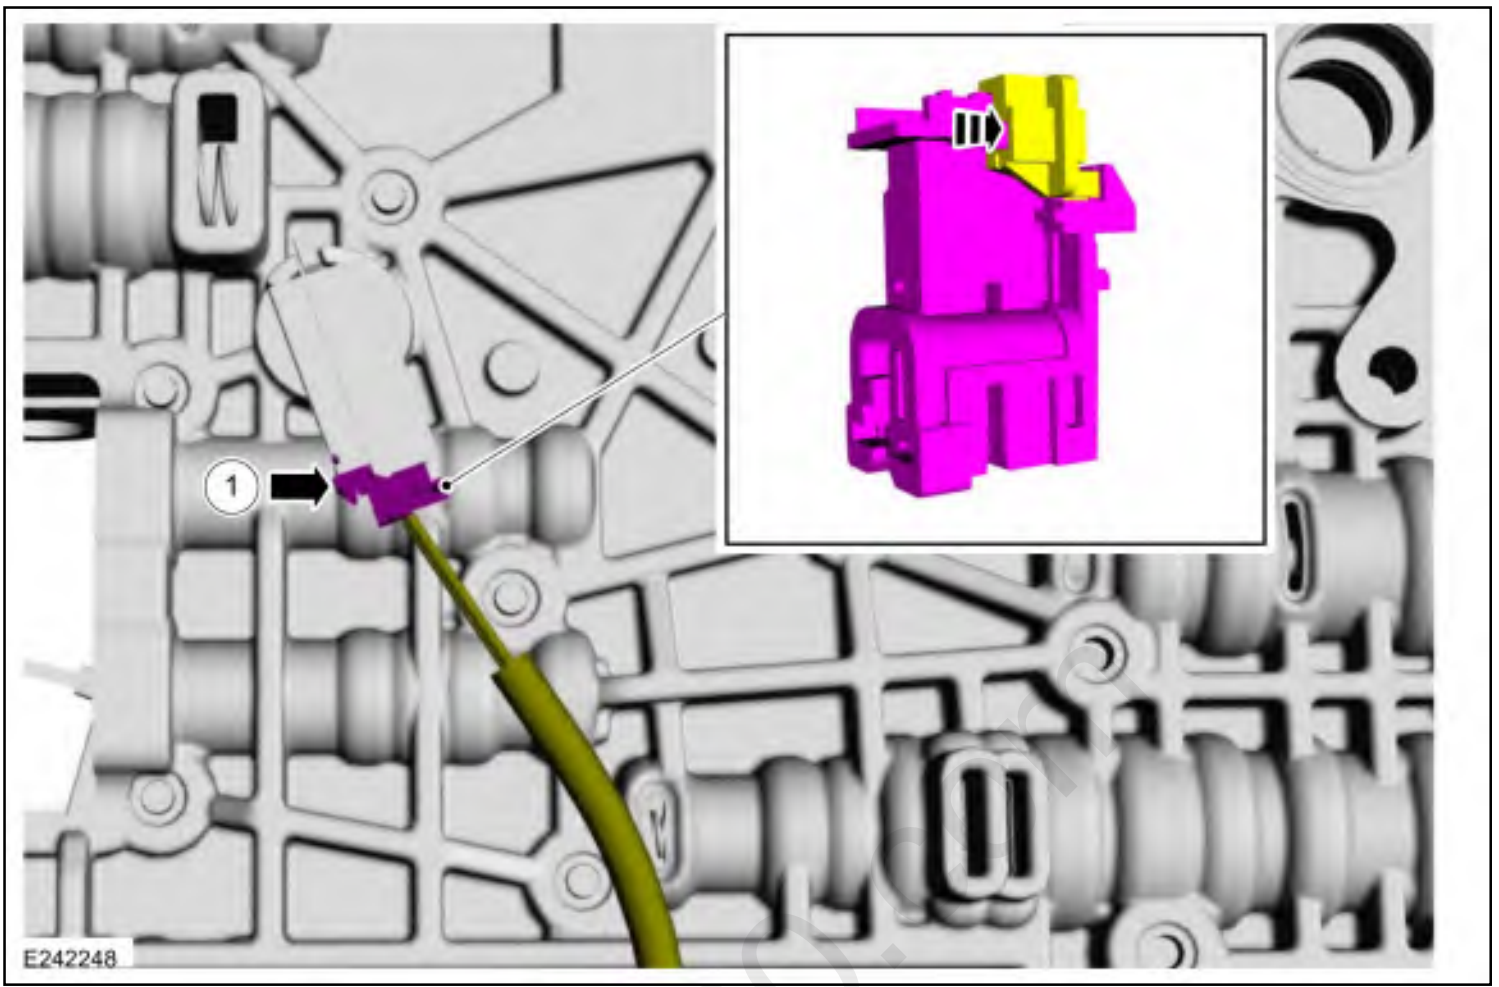

3. Install the main control valve body.

Refer to: [Main Control Valve Body](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).

Refer to: Main Control Valve Body (307-01) .