


Turbine Shaft Speed (TSS) Sensor

Base Part Number: Base Part Number: 7M101


Removal

1. Remove the main control valve body.
Refer to: [Main Control Valve Body](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).
Refer to: Main Control Valve Body (307-01) .
2. Remove the TSS sensor.
 1. Slide the plastic lock to the unlocked position. While pressing the plastic tab, disconnect the electrical connector.
 2. Remove the bolt and the TSS sensor.

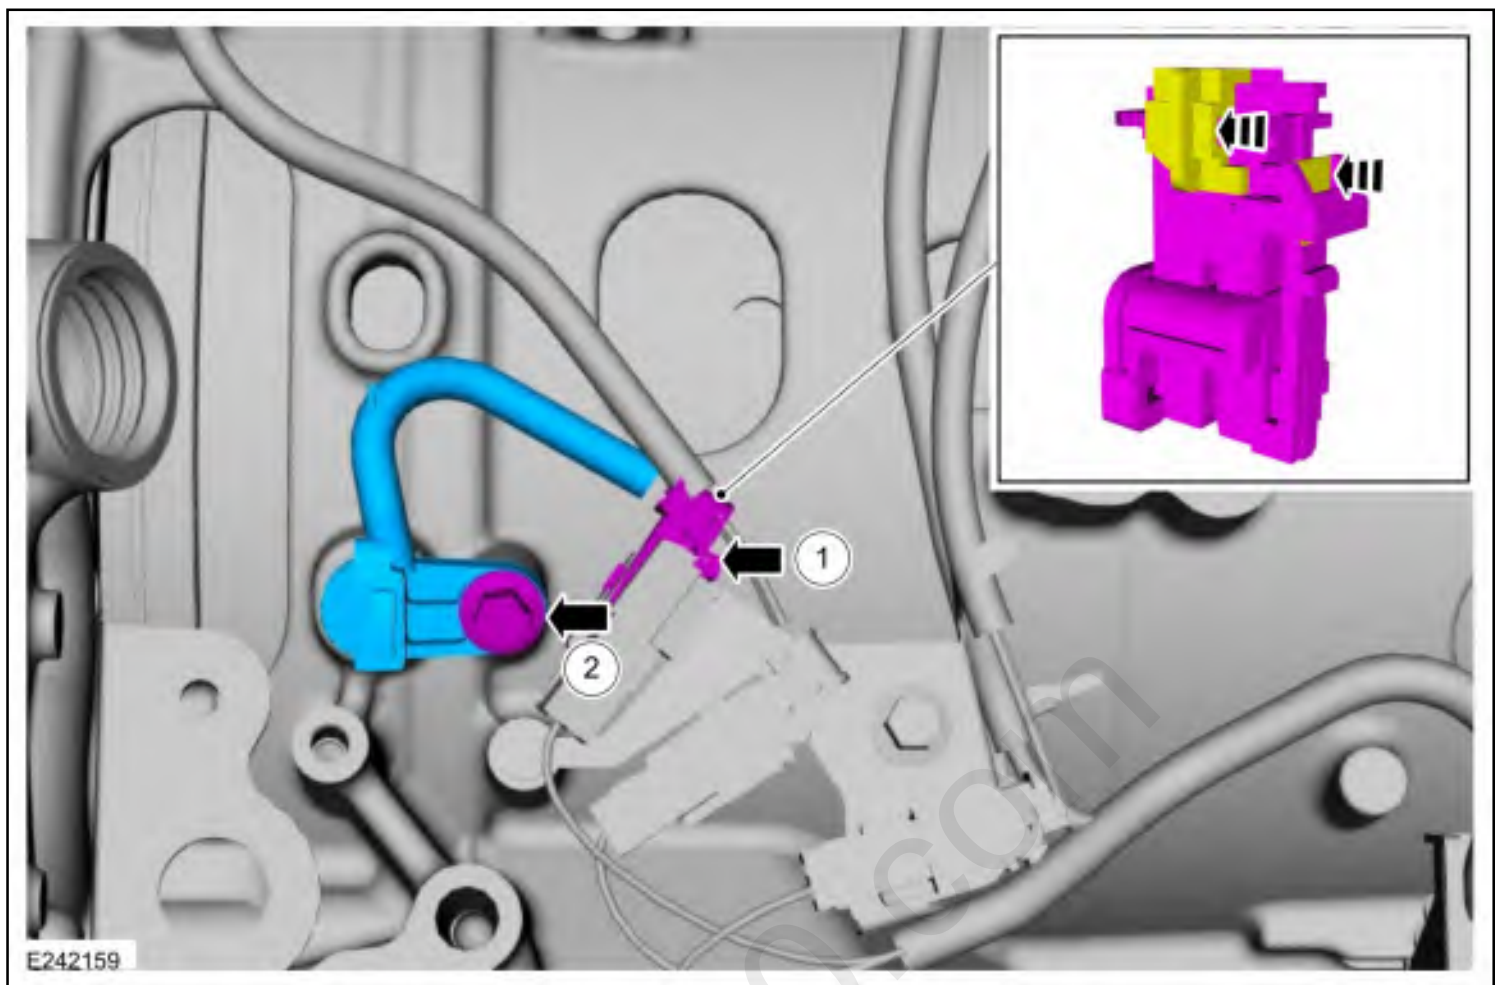

Installation

1. Install the TSS sensor.
 1. Install the TSS sensor bolt.
Torque: 62 lb.in (7 Nm)
 2. Connect the electrical connector. Slide the plastic lock to the locked position.

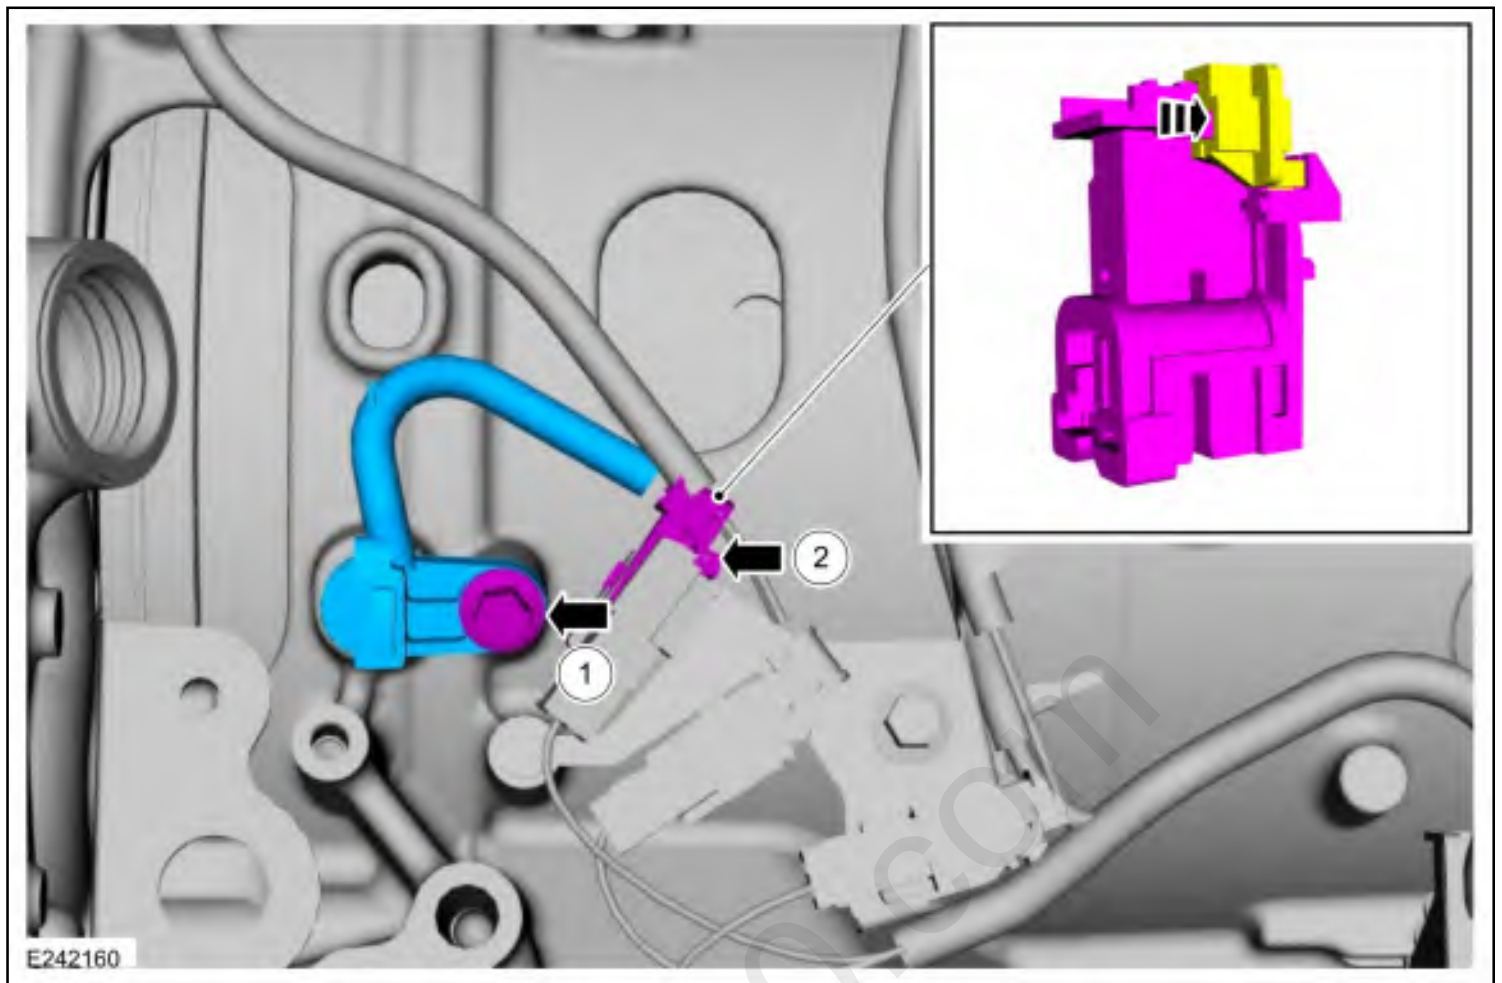

2. Install the main control valve body.

Refer to: [Main Control Valve Body](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).

Refer to: Main Control Valve Body (307-01) .