


Output Shaft Speed (OSS) Sensor

Base Part Number: Base Part Number: 7H103


Removal

1. Remove the transmission fluid auxiliary pump.
Refer to: [Transmission Fluid Auxiliary Pump](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).
2. Remove the OSS sensor.
 1. Slide the plastic lock to the unlocked position. While pressing the plastic tab, disconnect the electrical connector.
 2. Remove the bolt and the OSS sensor.

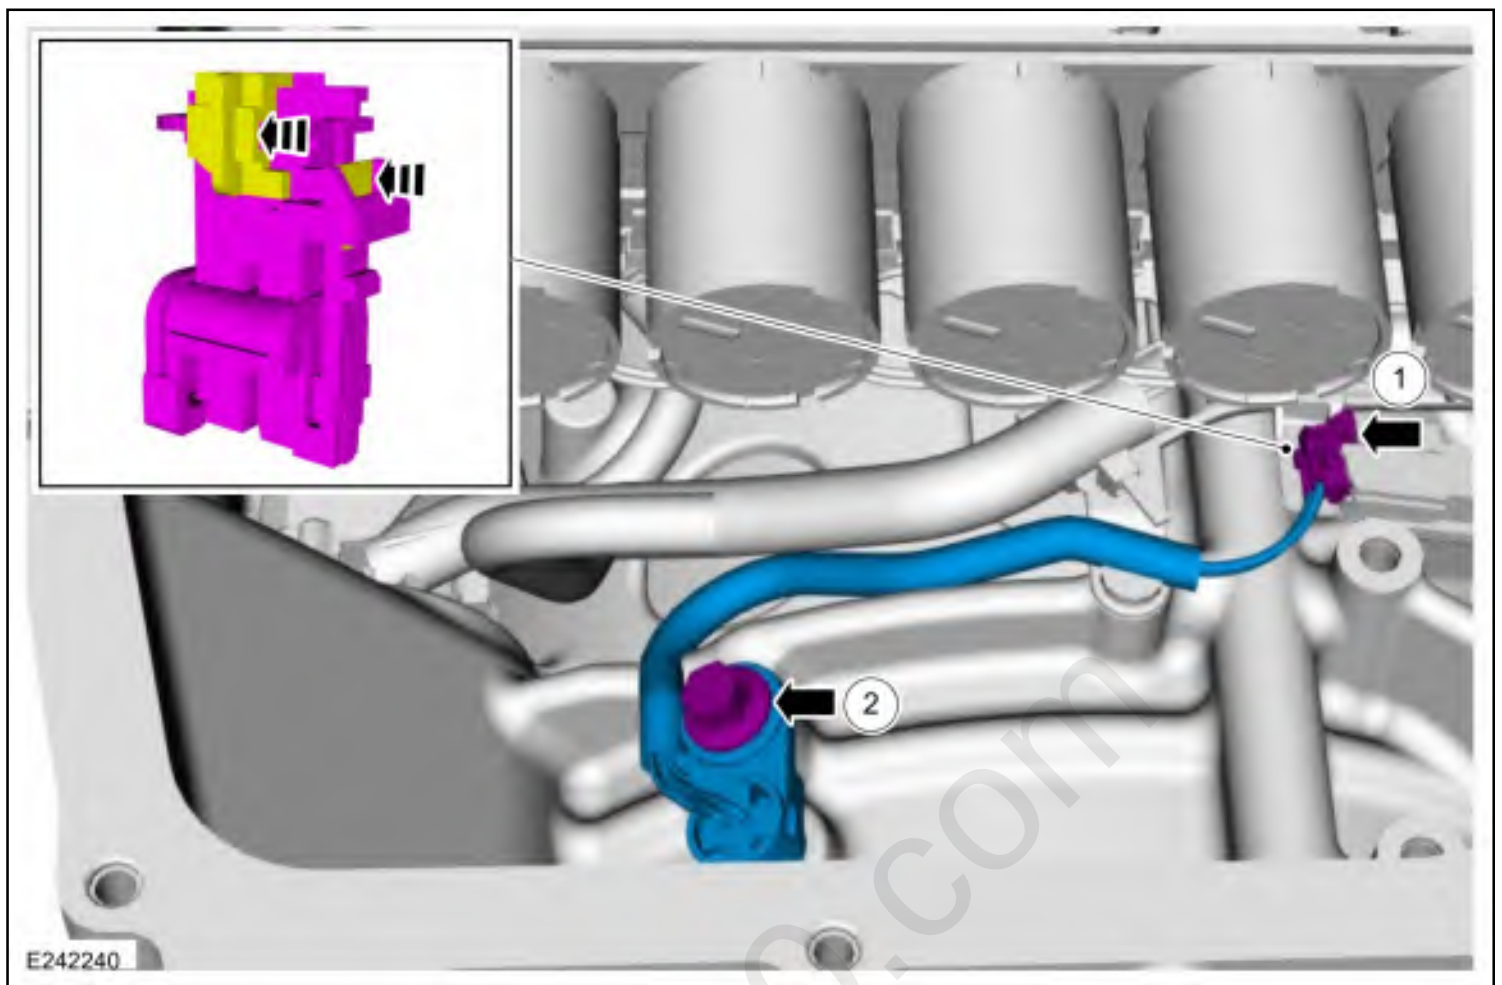

Installation

1. Install the OSS sensor.
 1. Install the OSS sensor bolt.
Torque: 62 lb.in (7 Nm)
 2. Connect the electrical connector. Slide the plastic lock to the locked position.

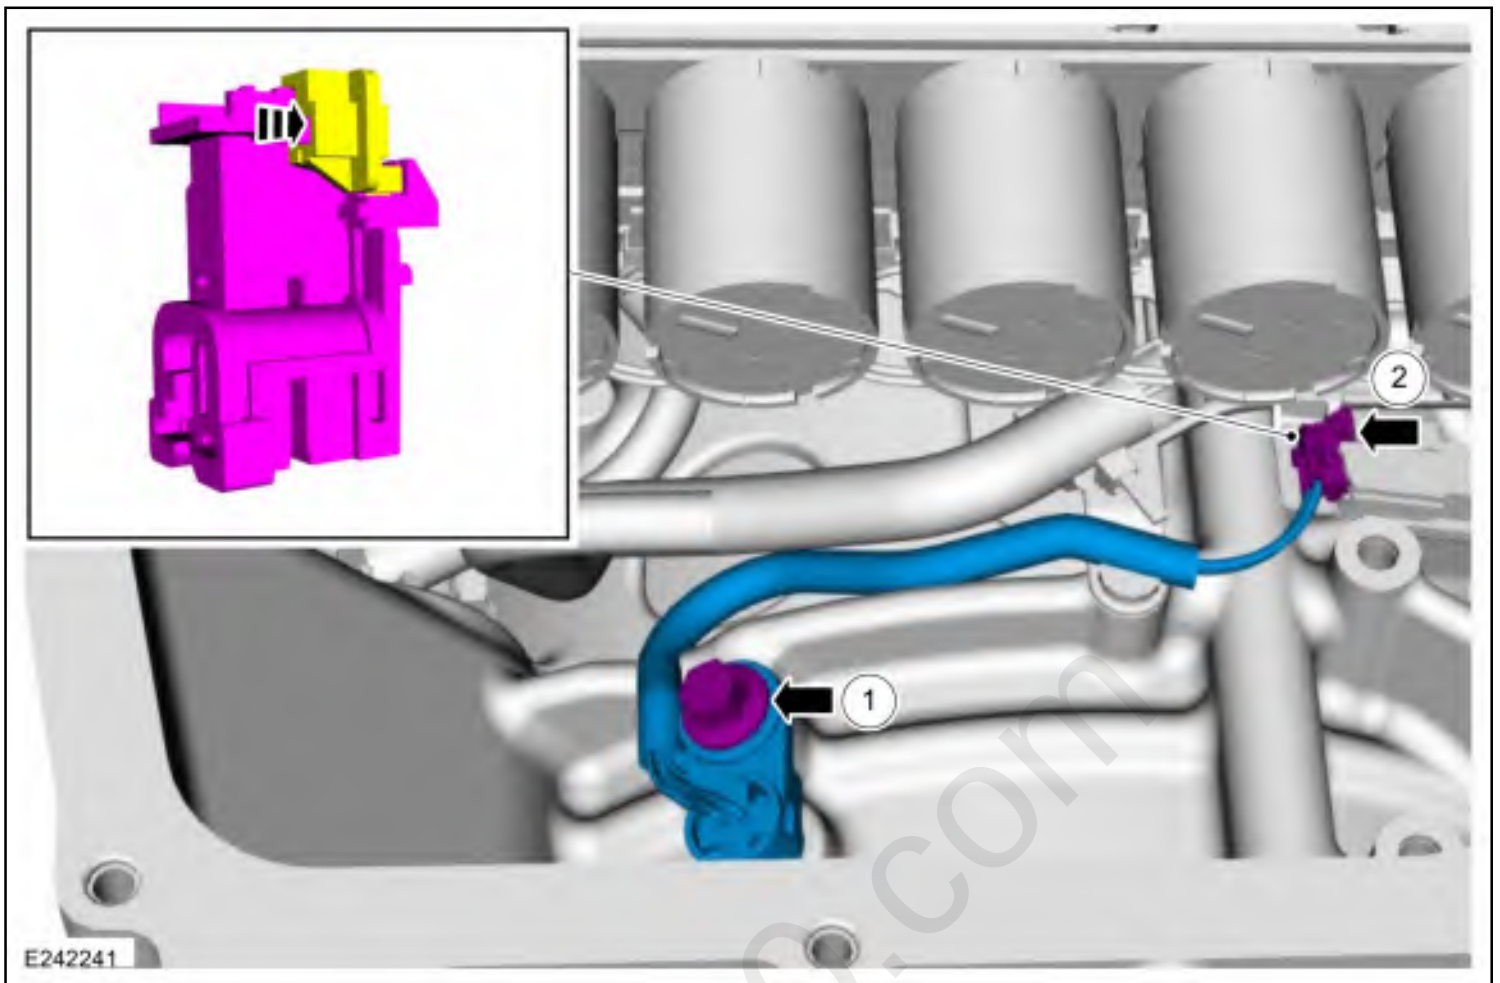

2. Install the transmission fluid auxiliary pump.

Refer to: [Transmission Fluid Auxiliary Pump](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).