

Transmission

Base Part Number: Base Part Number: 7000

1. To remove the transmission assembly.

Refer to: [Transmission - Raptor](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).

Refer to: [Transmission - 2.7L EcoBoost \(238kW/324PS\)](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).

Refer to: [Transmission - 3.5L EcoBoost \(272kW/370PS\)](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).

Refer to: [Transmission - 5.0L 32V Ti-VCT](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).