


Piston Diameter

Check

1.
 - Measure the piston diameter 90 degrees from the piston pin and piston diameter (DN) height down from the top of the piston at the point indicated.
 - Refer to specifications for the piston diameter (DN) height.
Refer to: [Specifications](#) (303-01A) .
Refer to: [Specifications](#) (303-01B Engine - 3.3L Duratec - V6, Specifications).
Refer to: [Specifications](#) (303-03C Engine Cooling - 3.5L EcoBoost (272kW/370PS), Specifications).
Refer to: [Specifications - Raptor](#) (303-01C Engine - 3.5L EcoBoost (272kW/370PS), Specifications).

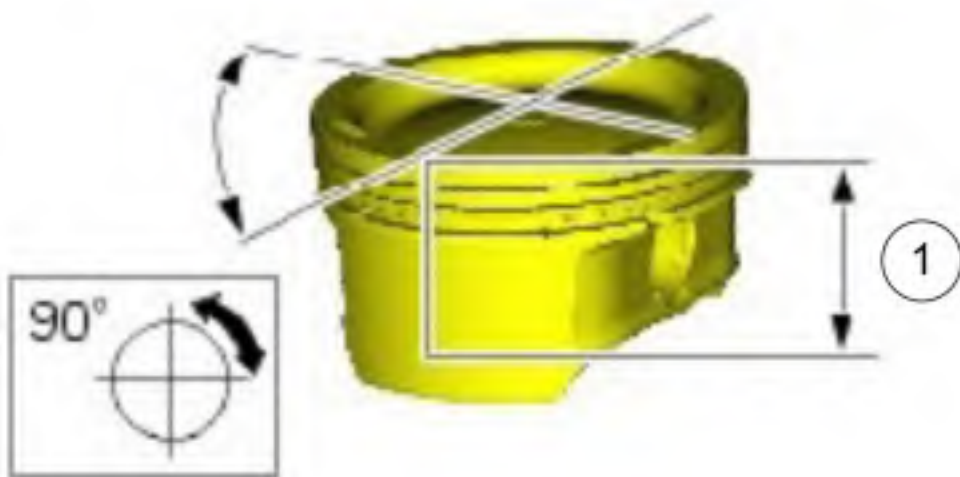

E263385

