


Flexplate

Removal

1. Remove the transmission.
Refer to: Transmission - 5.0L 32V Ti-VCT (307-01 Automatic Transmission - 6-Speed Automatic Transmission - 6R80) .
2. **NOTE:** *The flexplate bolts are torque-to-yield design and are not reusable.*
 - Remove and discard the bolts.
 - Remove the flexplate.

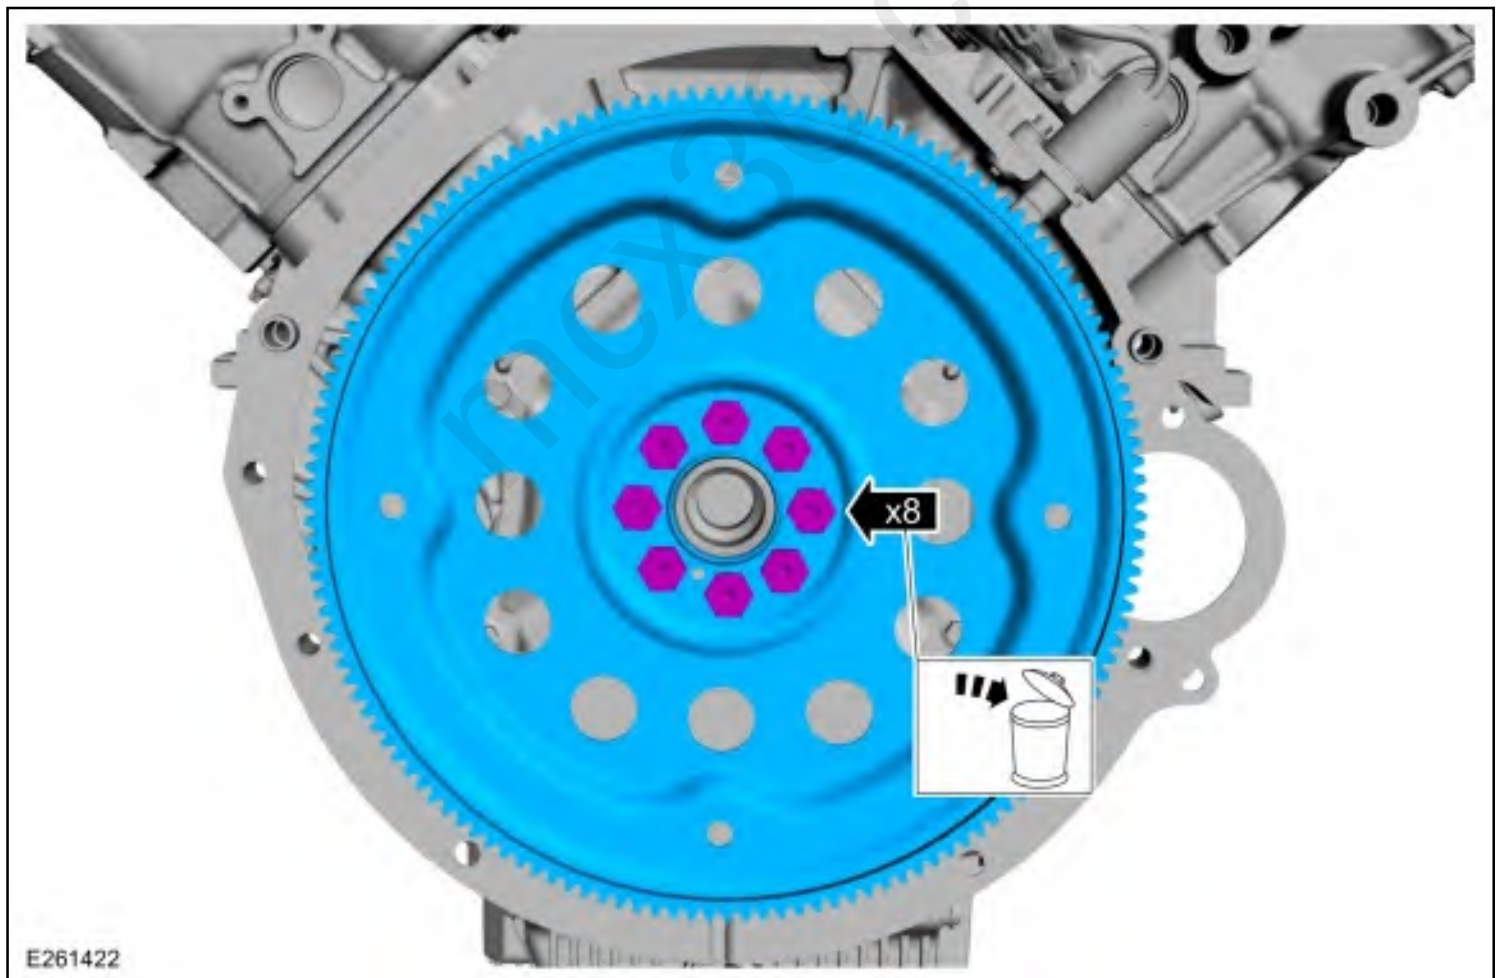


Installation

1. Install the flexplate and the bolts.

Torque:

Stage 1: 43 lb.ft (58 Nm)

Stage 2: 45°

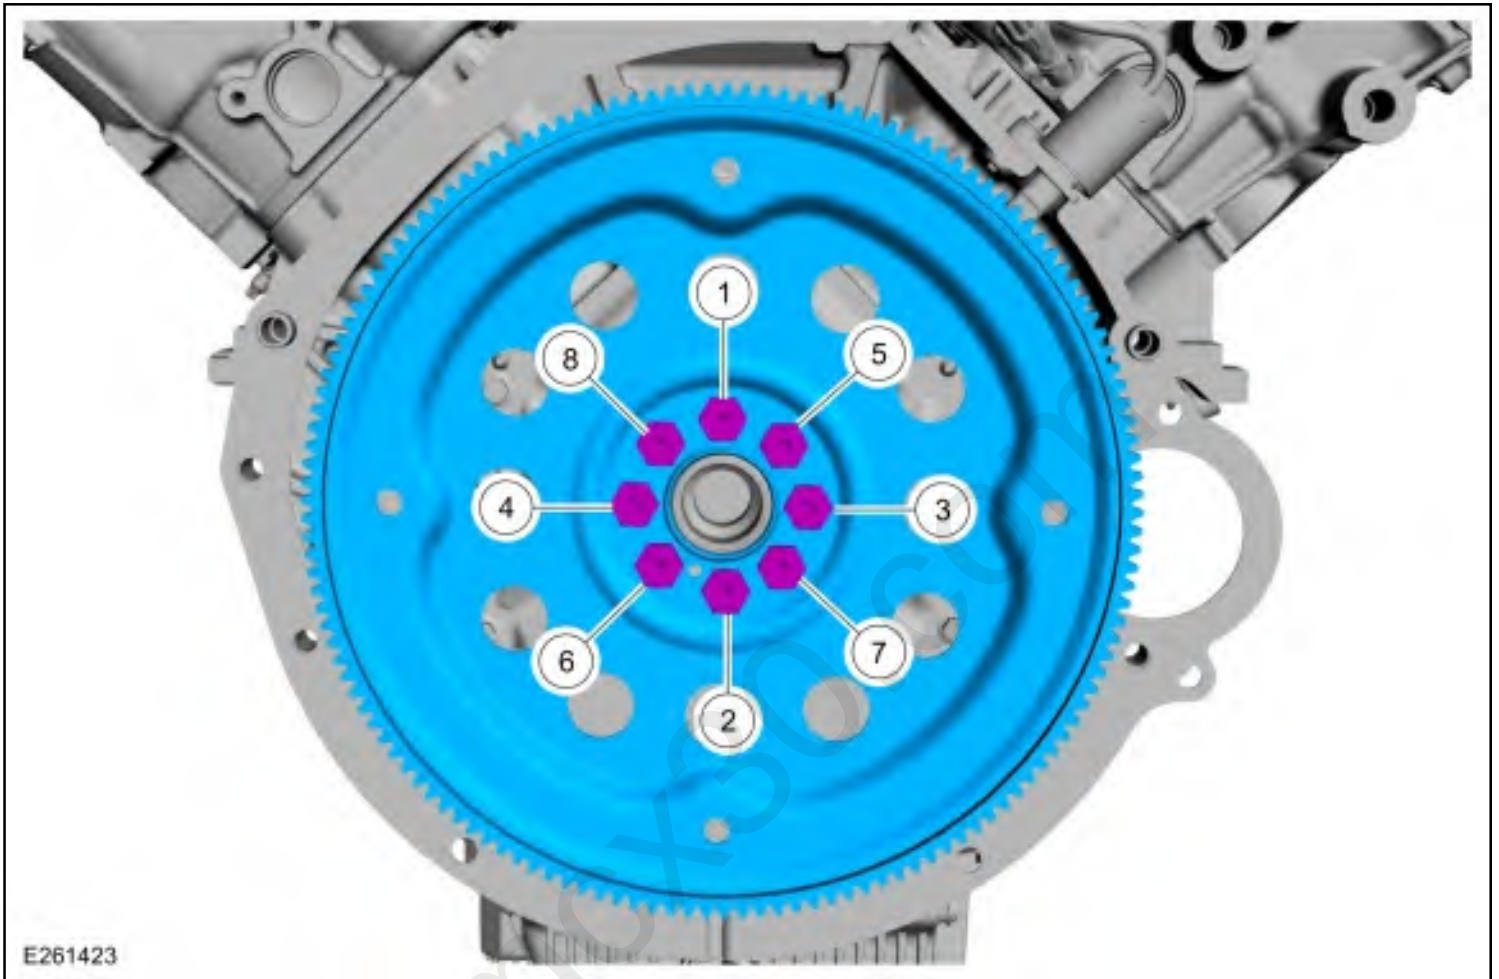

2. Install the transmission.

Refer to: Transmission - 5.0L 32V Ti-VCT (307-01 Automatic Transmission - 6-Speed Automatic Transmission - 6R80) .

3. Use the Powertrain Control Module (PCM) Misfire Monitor Profile Correction routine in the diagnostic scan tool.