

Engine

Base Part Number: Base Part Number: 6L084

Special Tool(s) / General Equipment

	303-F047 Lifting Bracket, Engine
Magnetic Socket	
Floor Crane	
Oil Drain Equipment	
Trolley Jack	
Hose Clamp Remover/Installer	
Wooden Block	

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Release the fuel system pressure.
Refer to: [Fuel System Pressure Release](#) (310-00D Fuel System - General Information - 5.0L 32V Ti-VCT, General Procedures).
3. Disconnect the battery ground cable.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables) .
4. Drain the engine cooling system.
Refer to: Cooling System Draining, Vacuum Filling and Bleeding (303-03 Engine Cooling - 5.0L 32V Ti-VCT) .
5. Remove the following items:
 1. Refer to: [Hood](#) (501-02 Front End Body Panels, Removal and Installation).