


Engine Cooling - Component Location

NOTE: Coolant temperature will vary with ambient temperature and load. Temperatures shown are for ambient temperature of 38° C (100° F). Red arrows indicate a temperature over 90° C (194° F), Orange arrows indicate a temperature of approximately 90° C (194° F), Blue arrows indicate a temperature below 90° C (194° F).

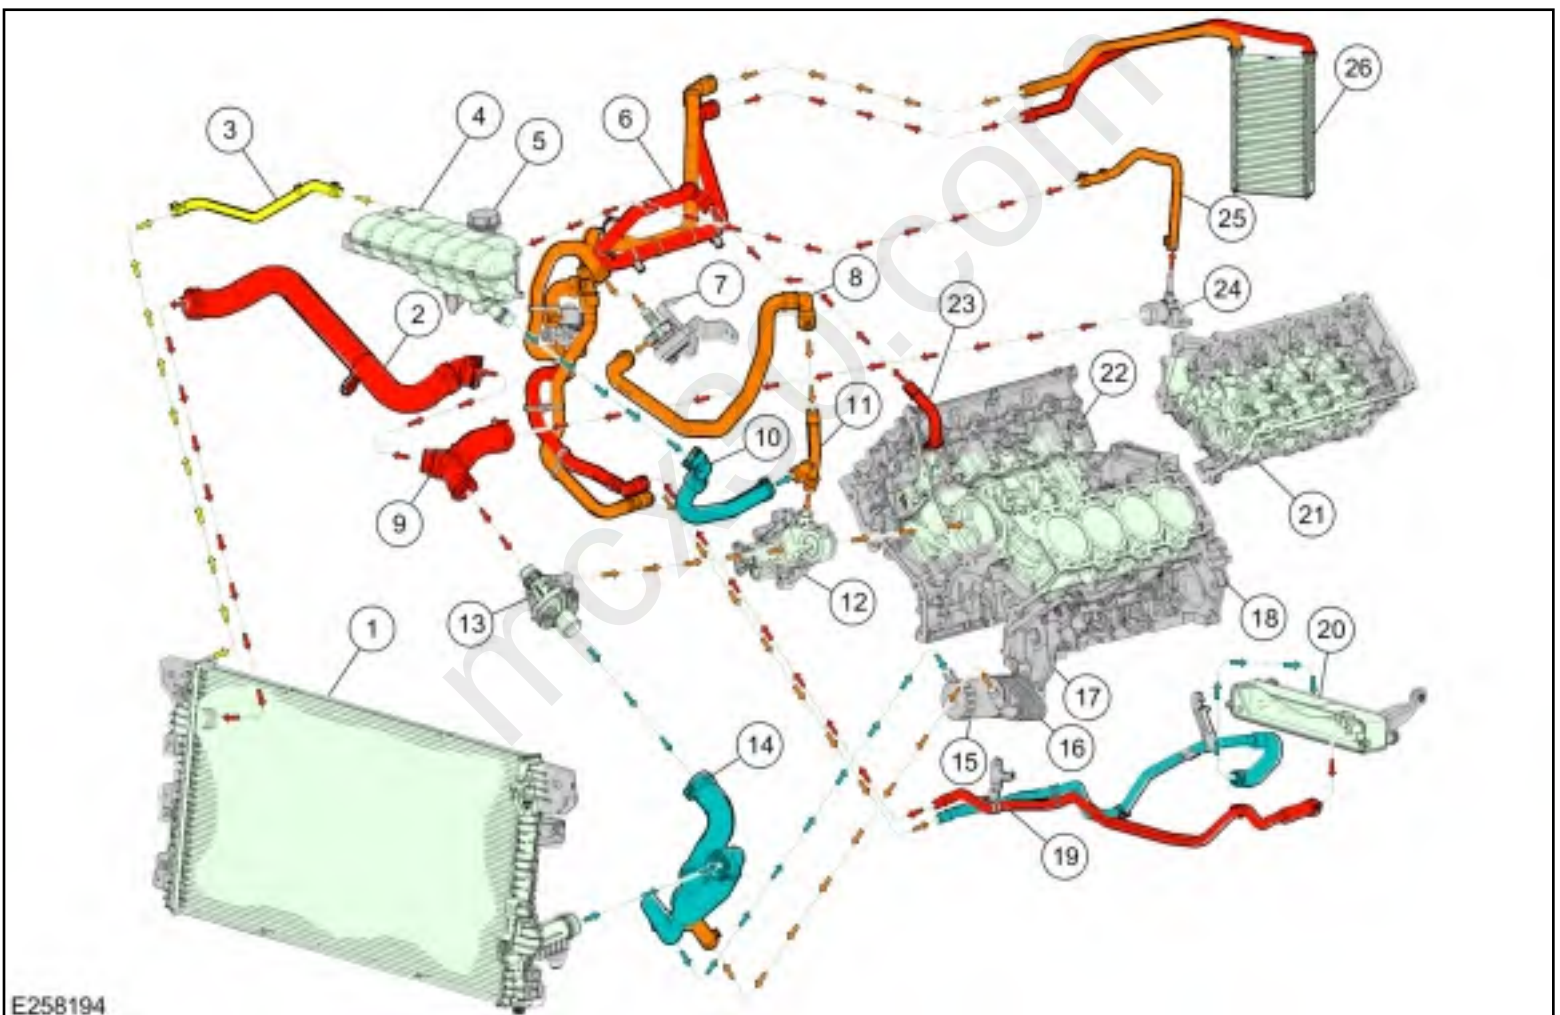

Item	Description
1	Radiator
2	Upper radiator hose and clamp assembly
3	Radiator-to-degas bottle hose

4	Degas bottle
5	Pressure relief cap
6	Heater hose assembly
7	Cabin heater coolant pump
8	Coolant outlet hose
9	Coolant bypass T assembly
10	Degas bottle-to-engine hose
11	Heater outlet tube
12	Coolant pump
13	Thermostat housing
14	Lower radiator hose
15	Oil filter
16	Oil cooler
17	Oil filter adapter
18	Cylinder block
19	Transmission fluid cooler outlet tube
20	Transmission fluid cooler
21	Cylinder head LH
22	Cylinder head RH
23	Heater inlet tube
24	Coolant outlet connector
25	Degas bottle-to-engine hose
26	Heater core