

Transmission Fluid Heater Coolant Control Valve

Special Tool(s) / General Equipment


Hose Clamp Remover/Installer

Removal




 **WARNING:** When releasing the cooling system pressure, cover the coolant expansion tank cap with a thick cloth.


Loosen the pressure relief cap.

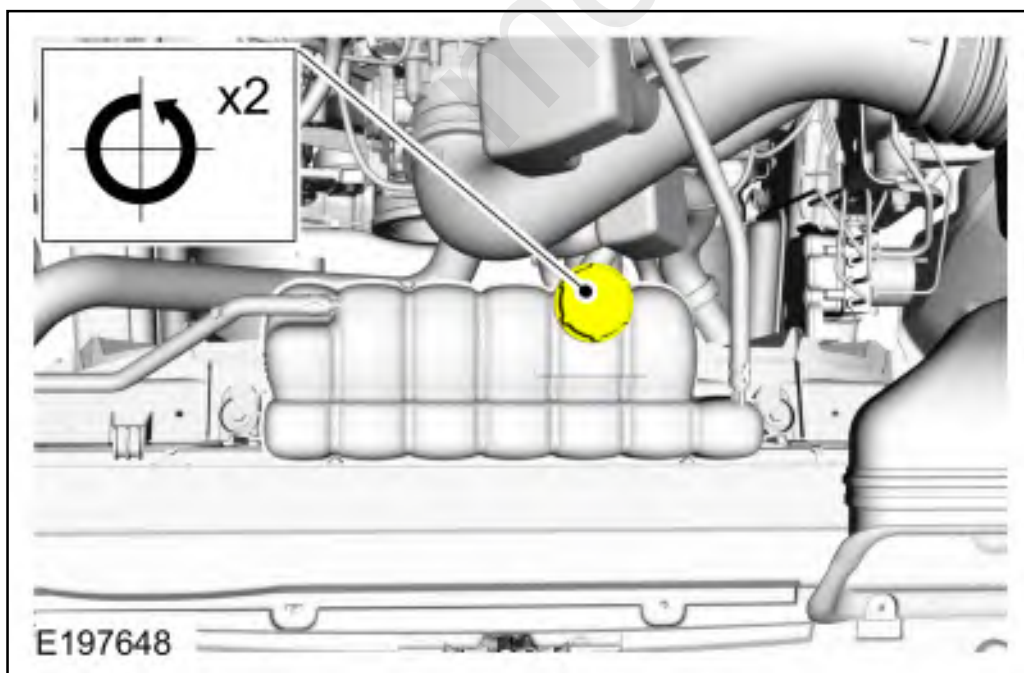


2. Disconnect the coolant control valve electrical connector.

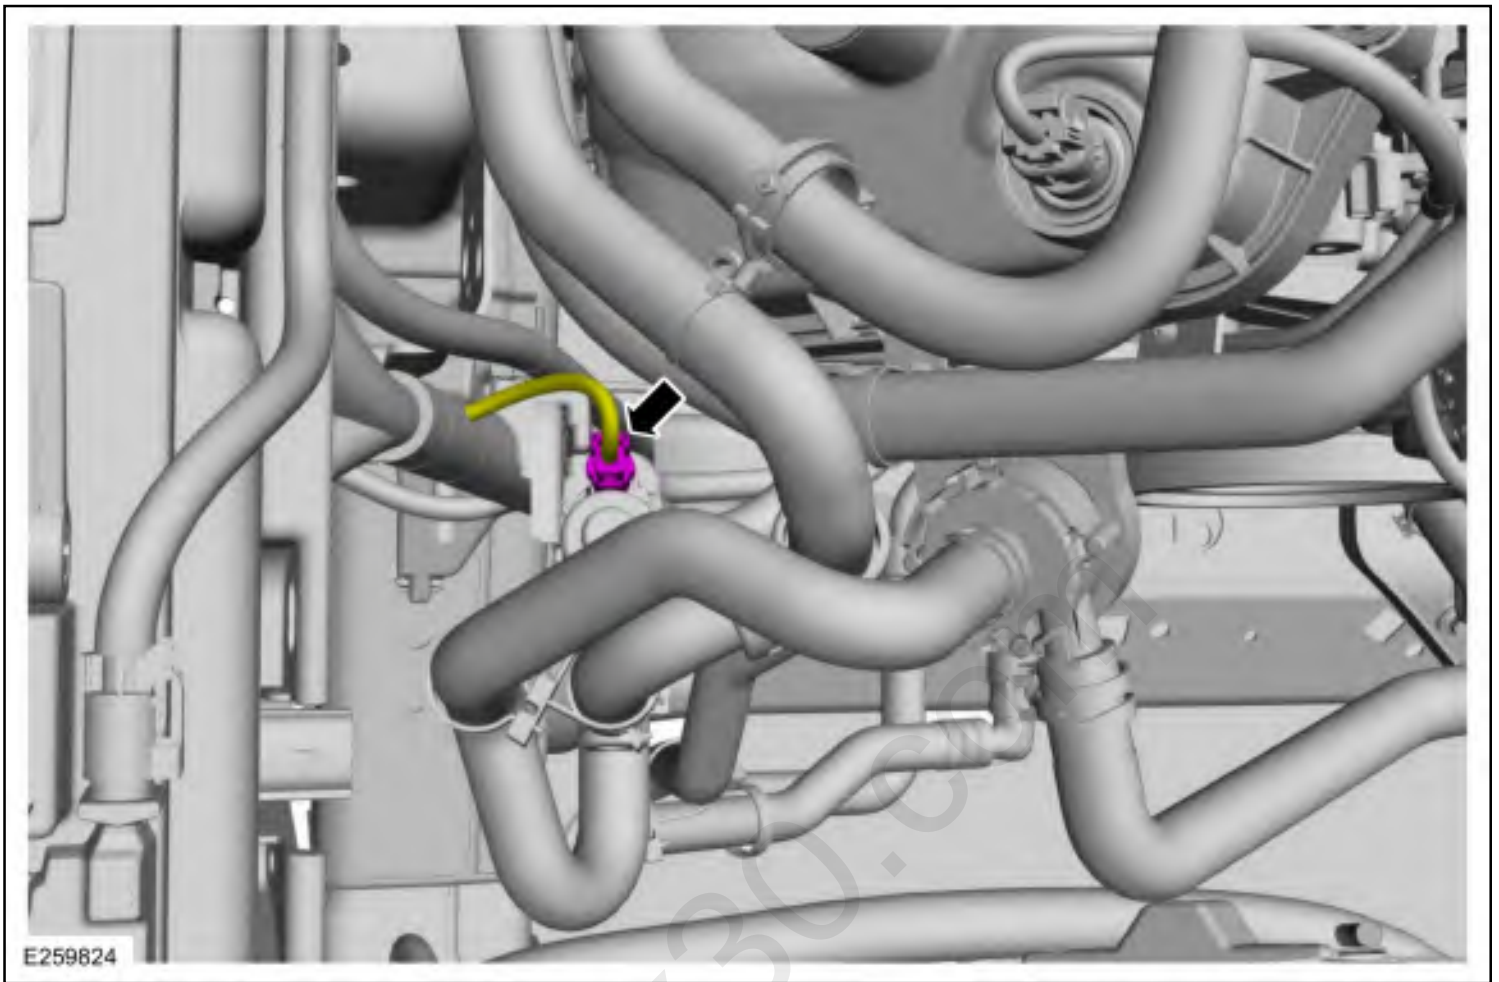


3. Clamp off the coolant control valve hoses.

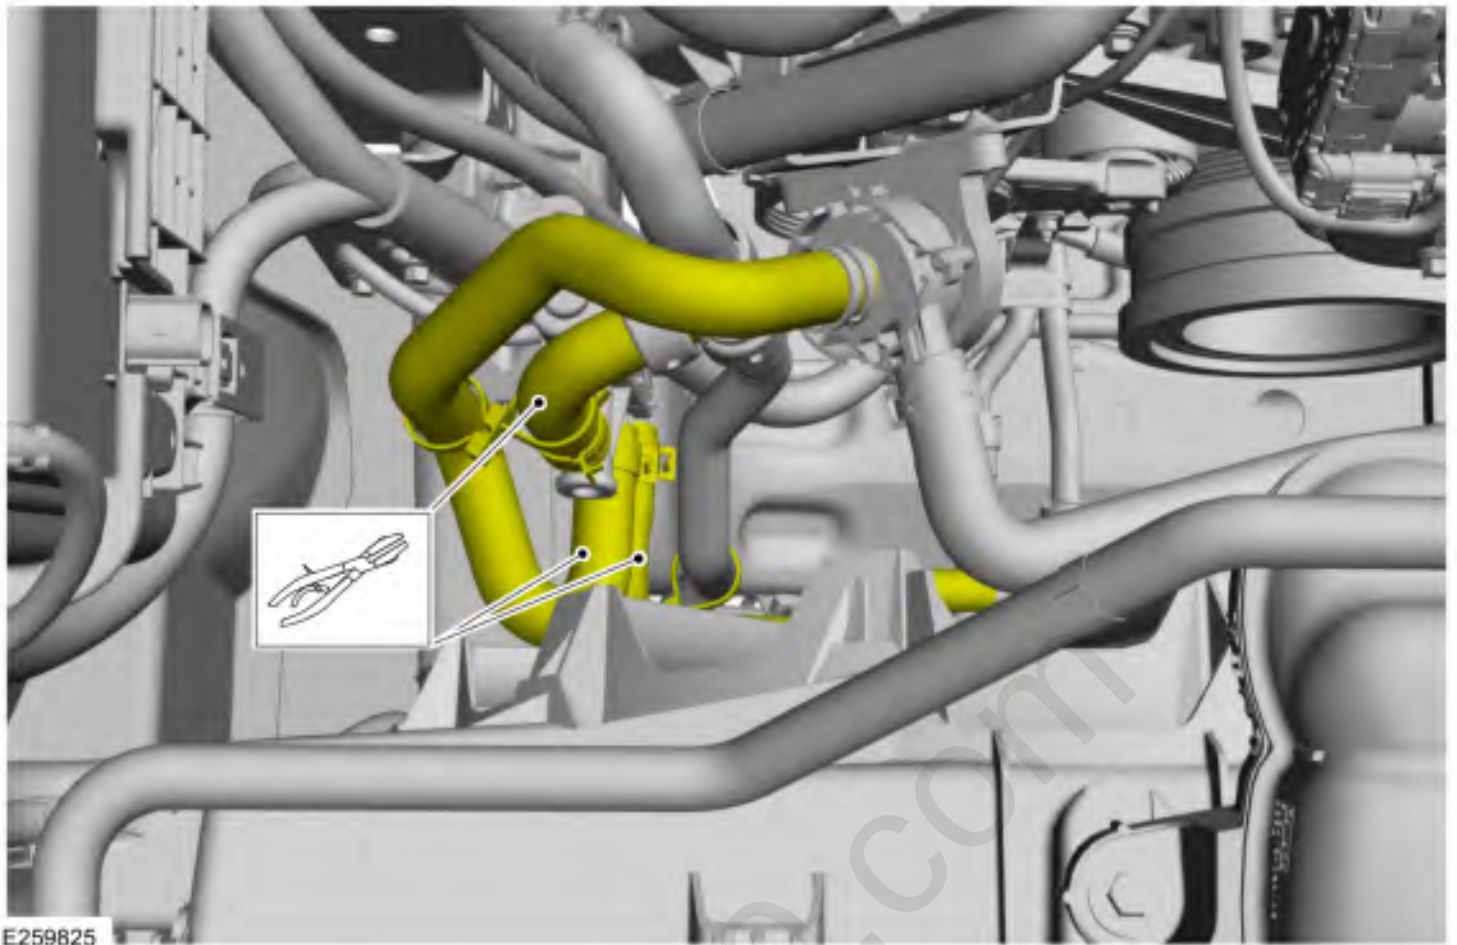

4. Release the clamps and disconnect the coolant hoses.
Use the General Equipment: Hose Clamp Remover/Installer

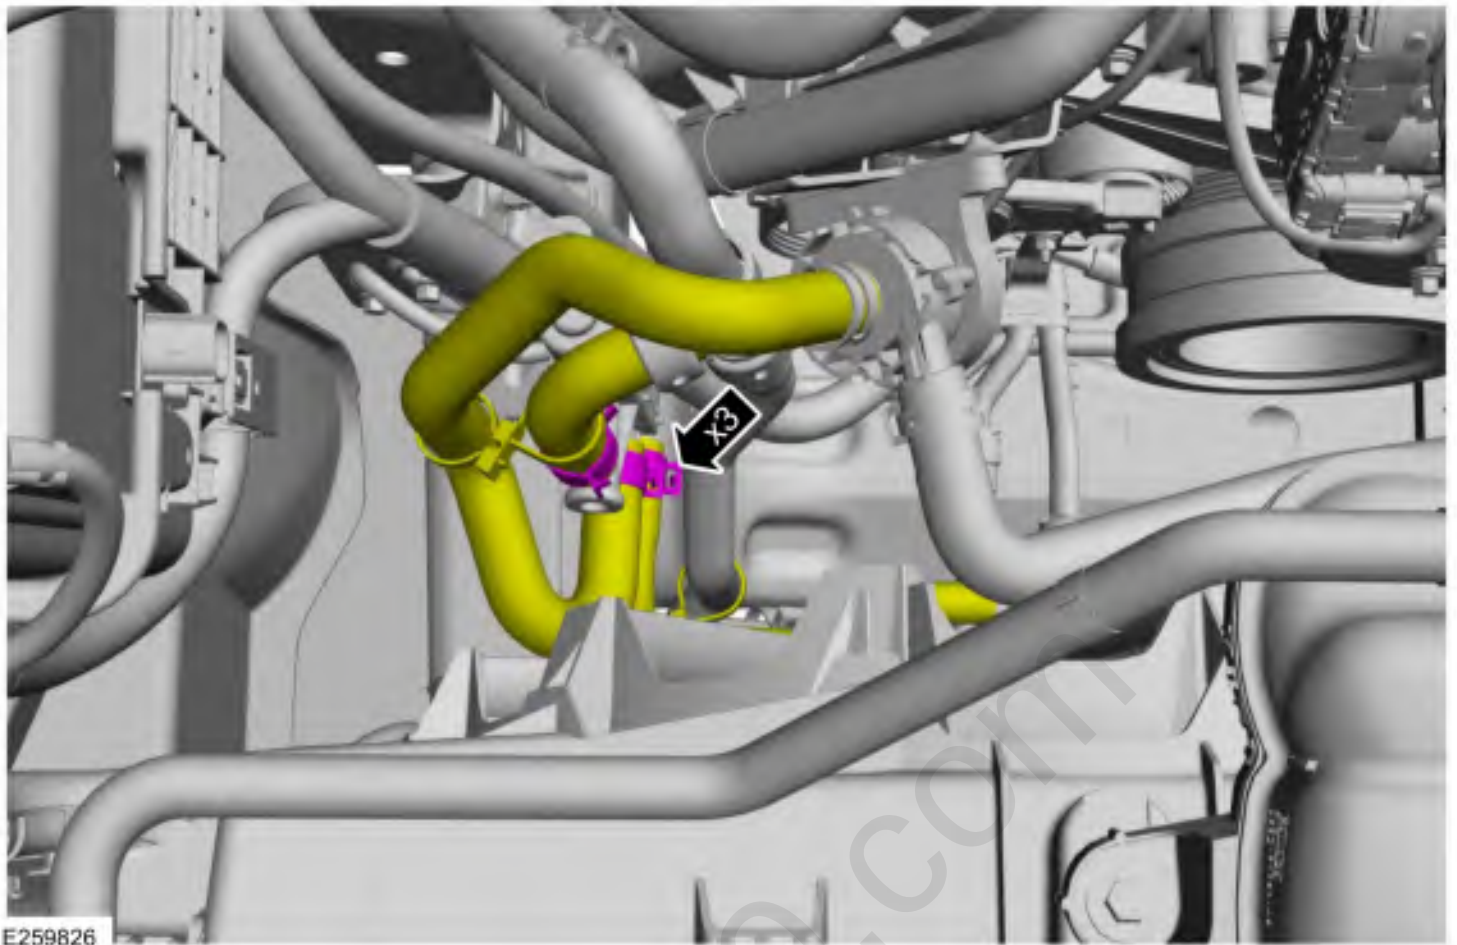

5. Release the tab and remove the transmission fluid heater coolant control valve.

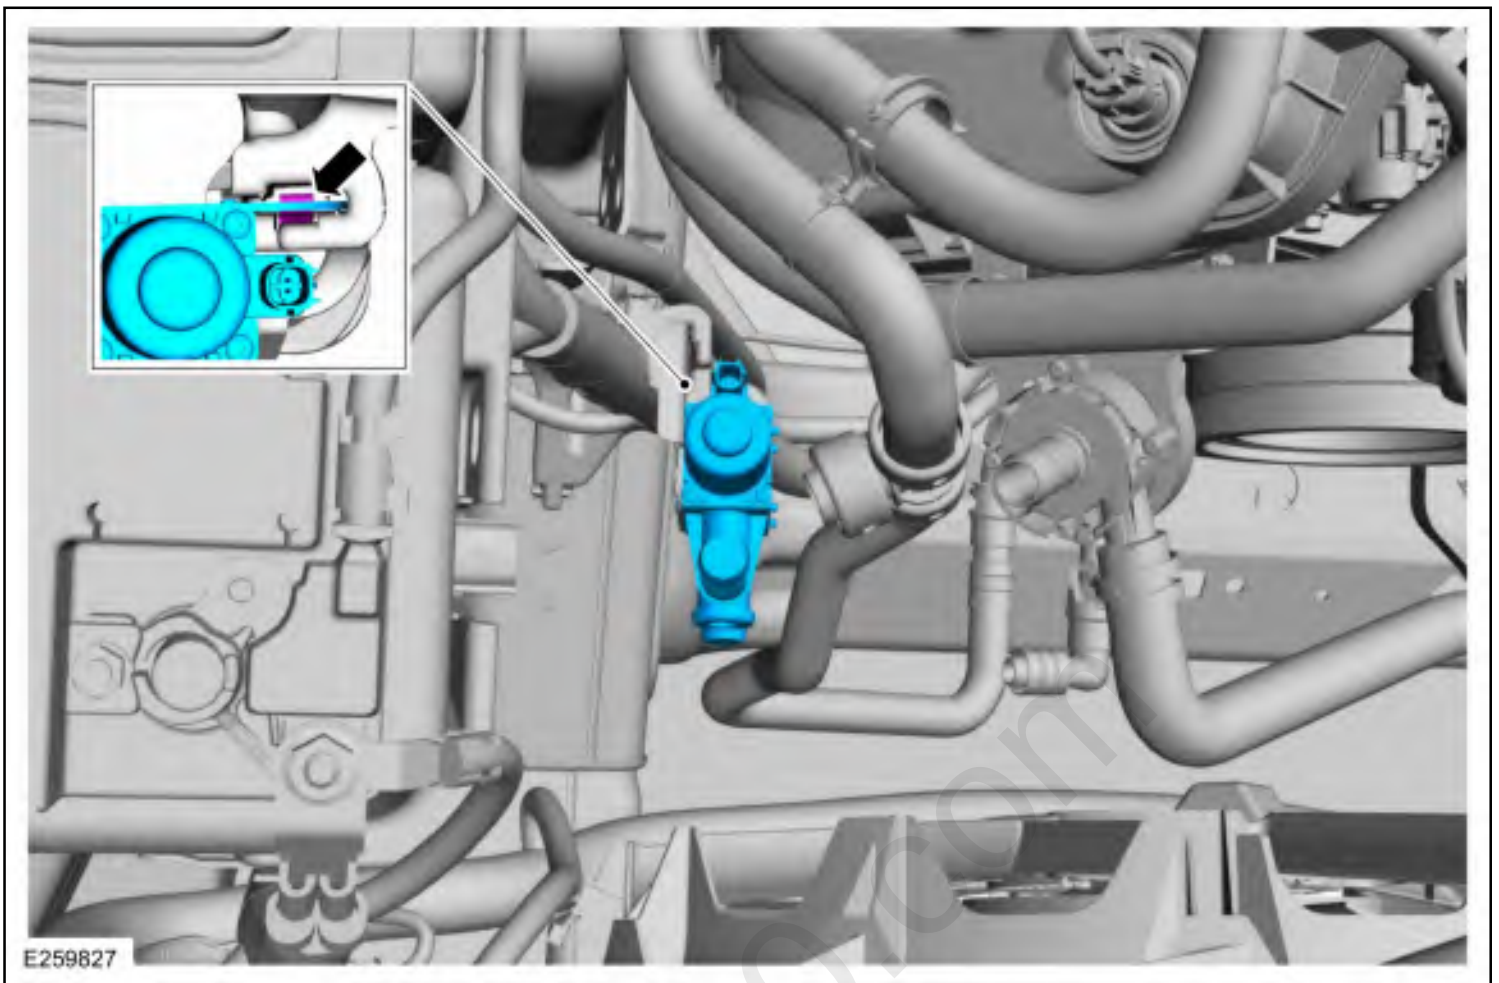

Installation

1. To install, reverse the removal procedure.
2. Fill and bleed the cooling system without using a vacuum cooling system filler.
Refer to: [Cooling System Draining, Vacuum Filling and Bleeding](#) (303-03D Engine Cooling - 5.0L 32V Ti-VCT, General Procedures).