


Fuel Charging and Controls - Component Location

5.0L 32V Ti-VCT

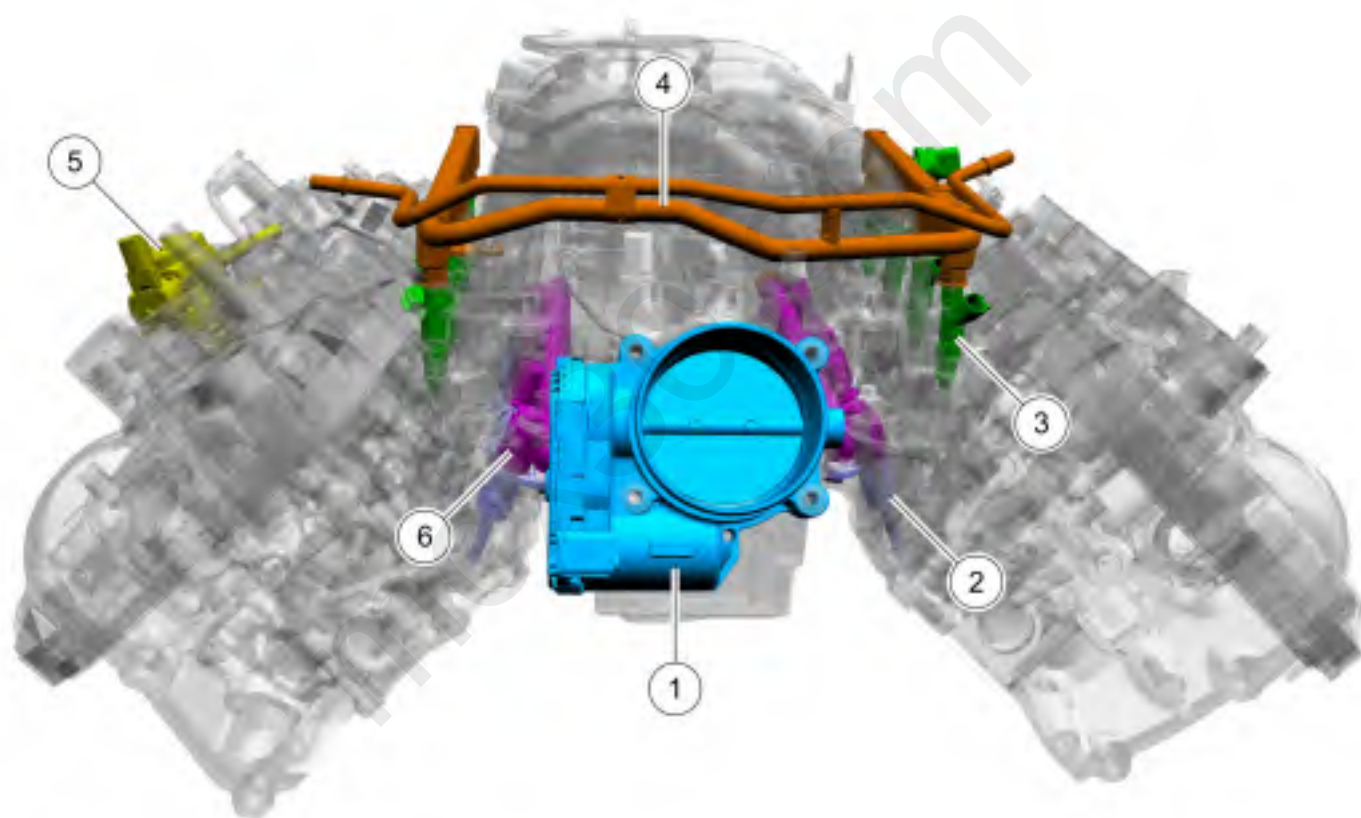


E258585

Item	Description
1	Throttle body Refer to: Throttle Body (303-04D Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).
2	Direct injection fuel injector Refer to: Fuel Injectors (303-04D Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).

3	Port injection fuel injector Refer to: Fuel Injectors (303-04D Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).
4	Port injection fuel rail assembly Refer to: Port Injection Fuel Rail (303-04D Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).
5	High-pressure fuel pump Refer to: High-Pressure Fuel Pump (303-04D Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).
6	Direct injection fuel rail Refer to: Direct Injection Fuel Rail LH (303-04D Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation). Refer to: Direct Injection Fuel Rail RH (303-04D Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).

Fuel Pump Driver Module

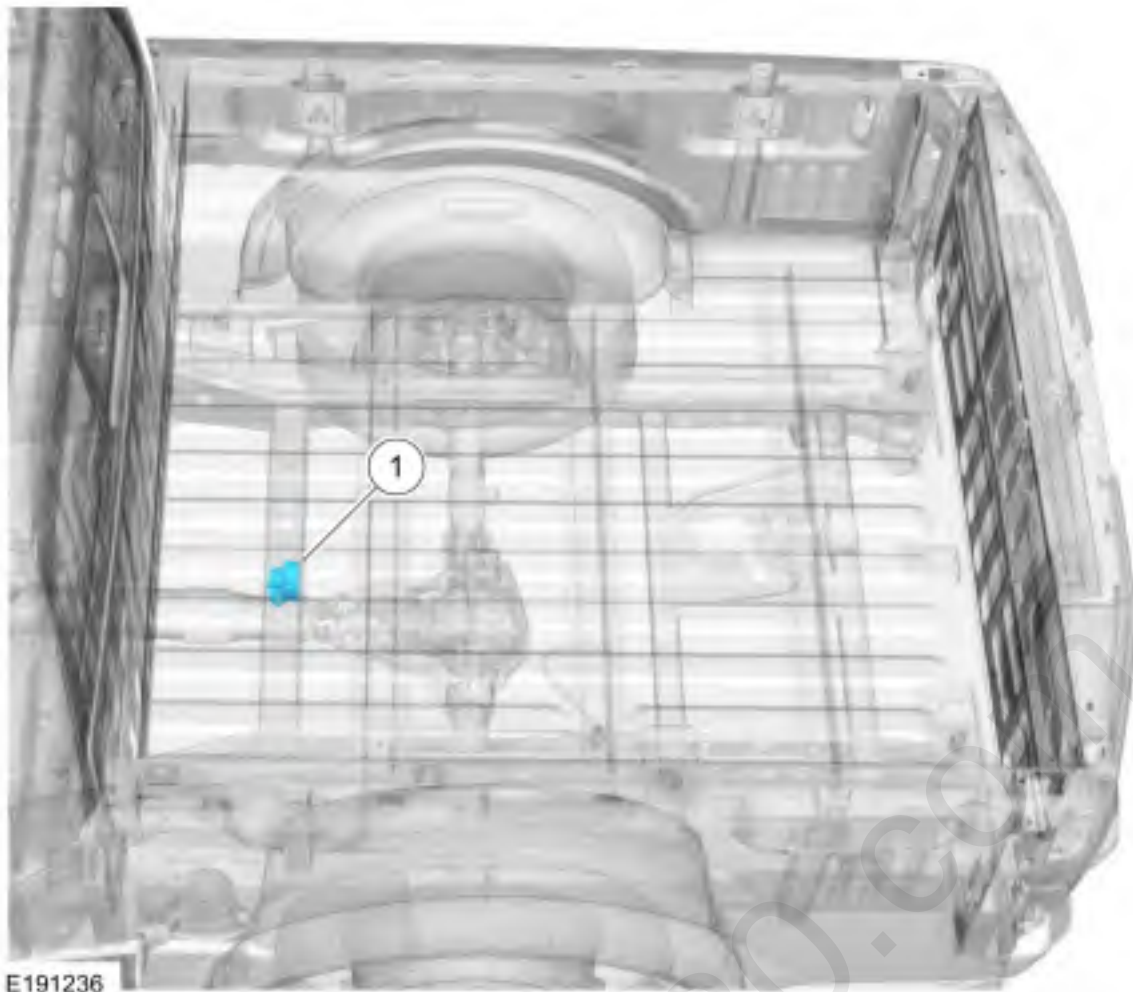

Item	Description
1	Fuel pump driver module. Refer to: Fuel Pump Driver Module (FPDM) (303-04D Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation). Comments: The fuel pump driver module is located on top of a rear frame crossmember.