

Fuel Injectors

Removal and Installation

1. The fuel injectors are removed with the fuel rails.

Refer to: [Direct Injection Fuel Rail LH](#) (303-04D Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).

Refer to: [Direct Injection Fuel Rail RH](#) (303-04D Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).

Refer to: [Port Injection Fuel Rail](#) (303-04D Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).