


Air Conditioning (A/C) Compressor Belt

Removal

1. Remove the accessory drive belt tensioner.
Refer to: [Accessory Drive Belt Tensioner](#) (303-05D Accessory Drive - 5.0L 32V Ti-VCT, Removal and Installation).
2. Rotate the A/C compressor belt tensioner clockwise and remove the A/C compressor belt.

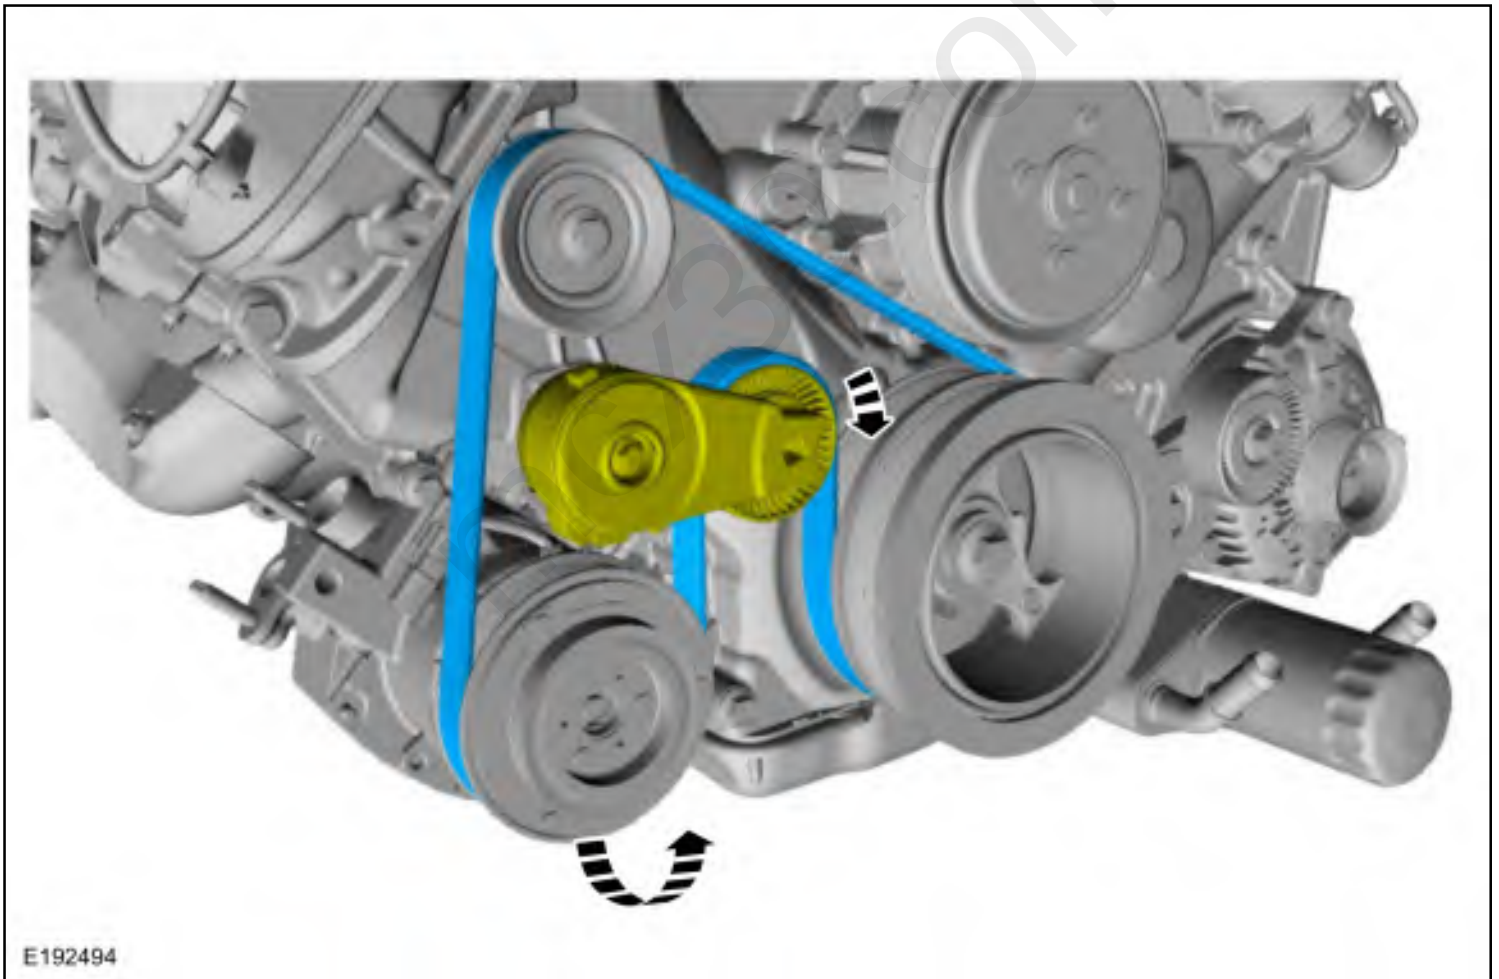

Installation

1. To install, reverse the removal procedure.

2. After installation, make sure the A/C compressor belt is correctly seated on all pulleys.

