


Accessory Drive Belt Tensioner

Base Part Number: Base Part Number: 6B209

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the accessory drive belt.
Refer to: [Accessory Drive Belt](#) (303-05D Accessory Drive - 5.0L 32V Ti-VCT, Removal and Installation).
2. Remove the bolt and the accessory drive belt tensioner.
Torque: 35 lb.ft (47 Nm)

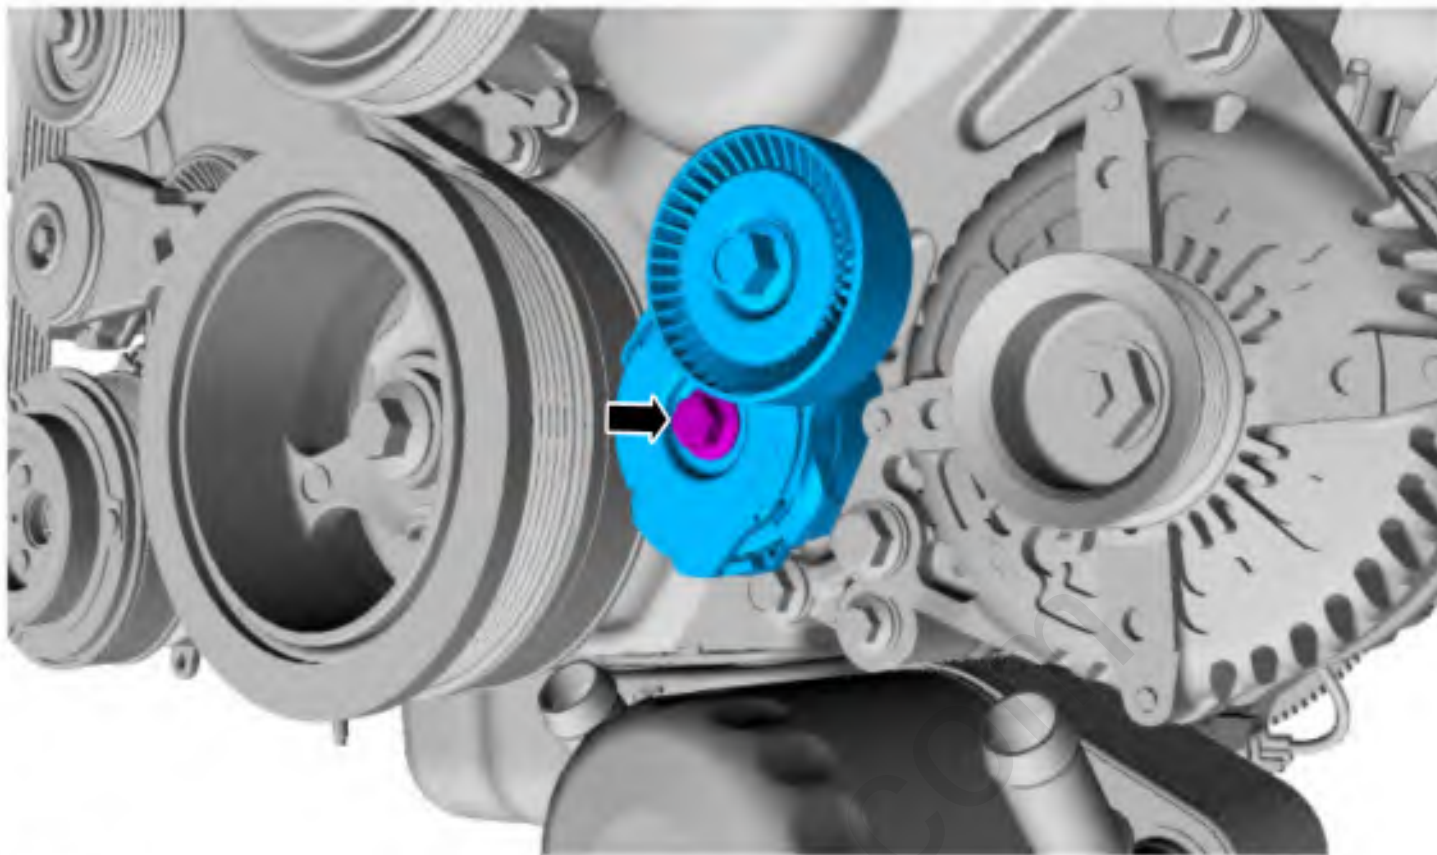


E192486



Installation

1. To install, reverse the removal procedure.
2. After installation, make sure the accessory drive belt is correctly seated on all pulleys.

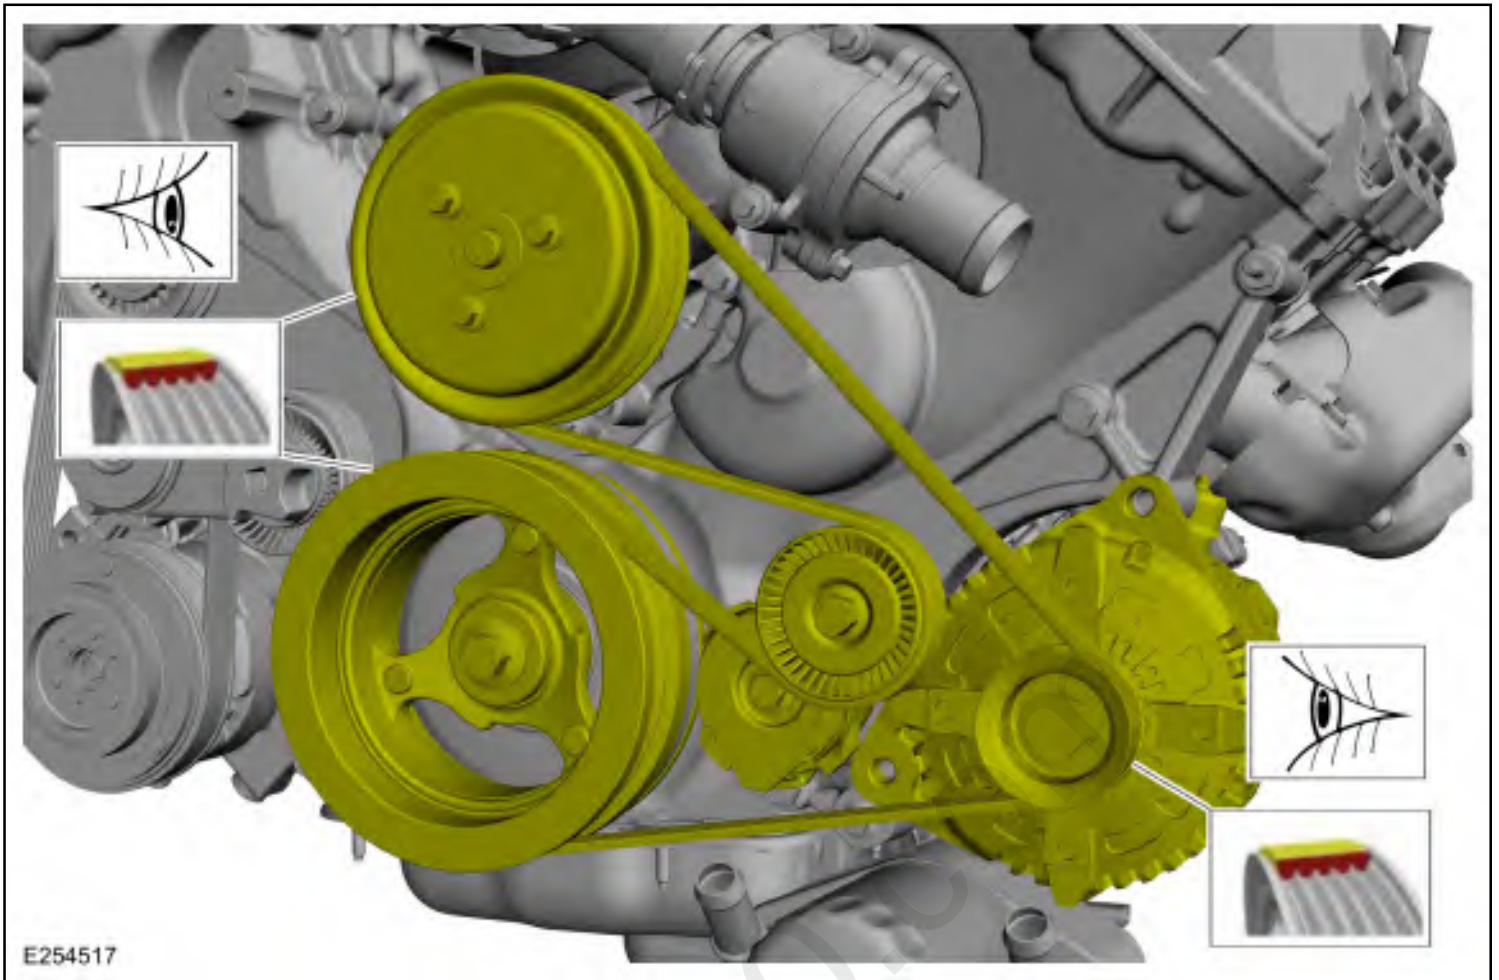

Copyright © 2018 Ford Motor Company