


Air Conditioning (A/C) Compressor Belt Tensioner


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Rotate the A/C compressor belt tensioner clockwise and position the belt aside.

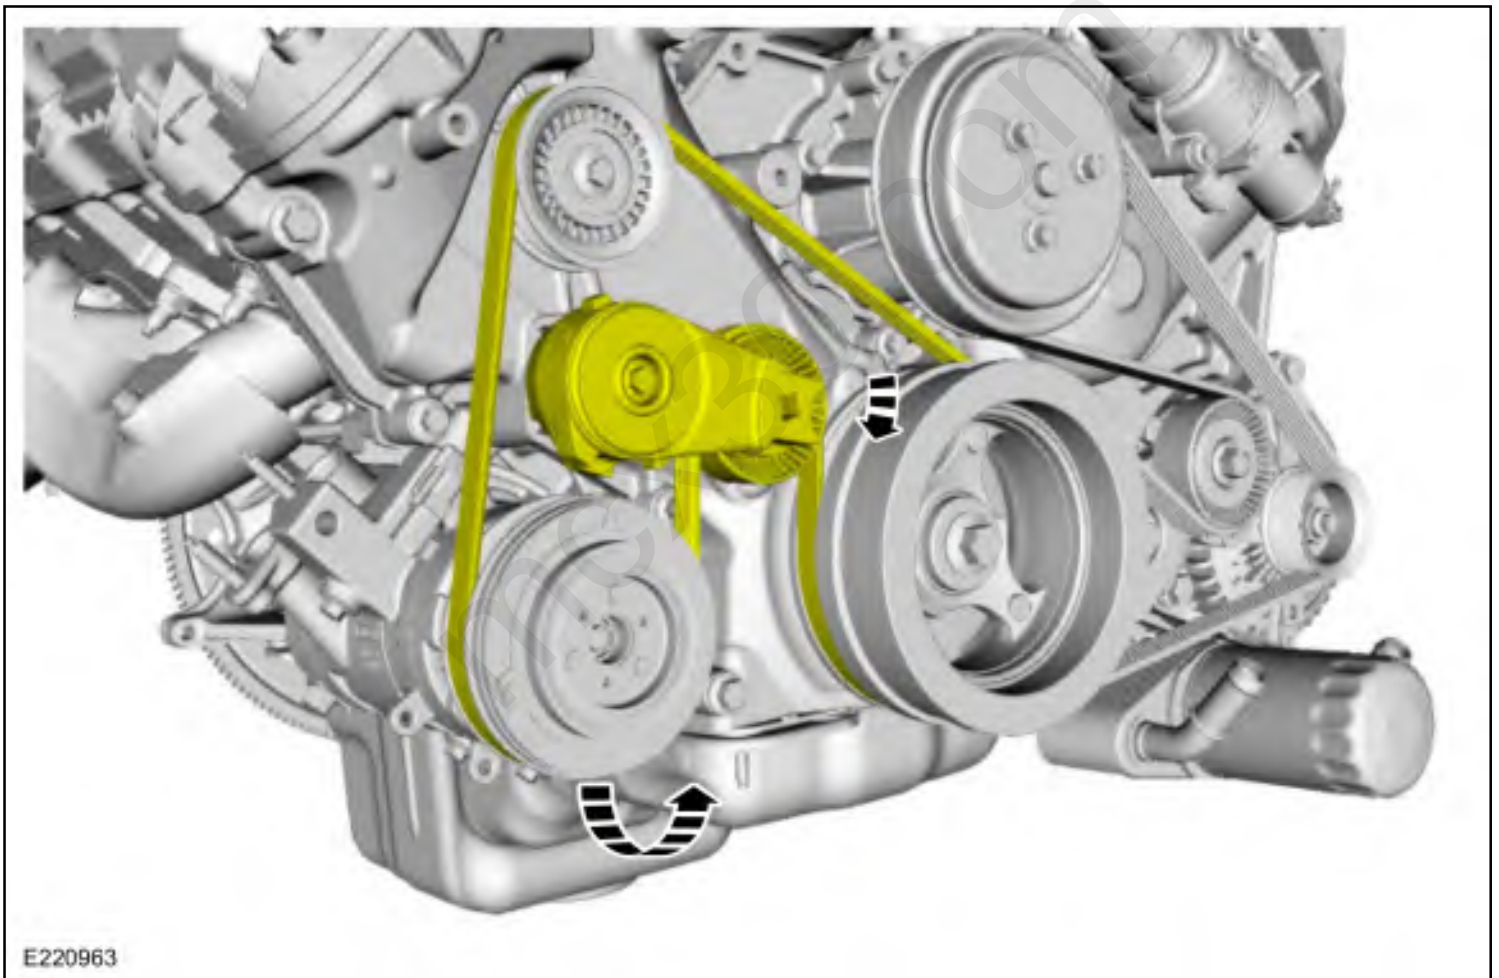

2. Remove the bolt and the A/C compressor belt tensioner.
Torque: 18 lb.ft (25 Nm)

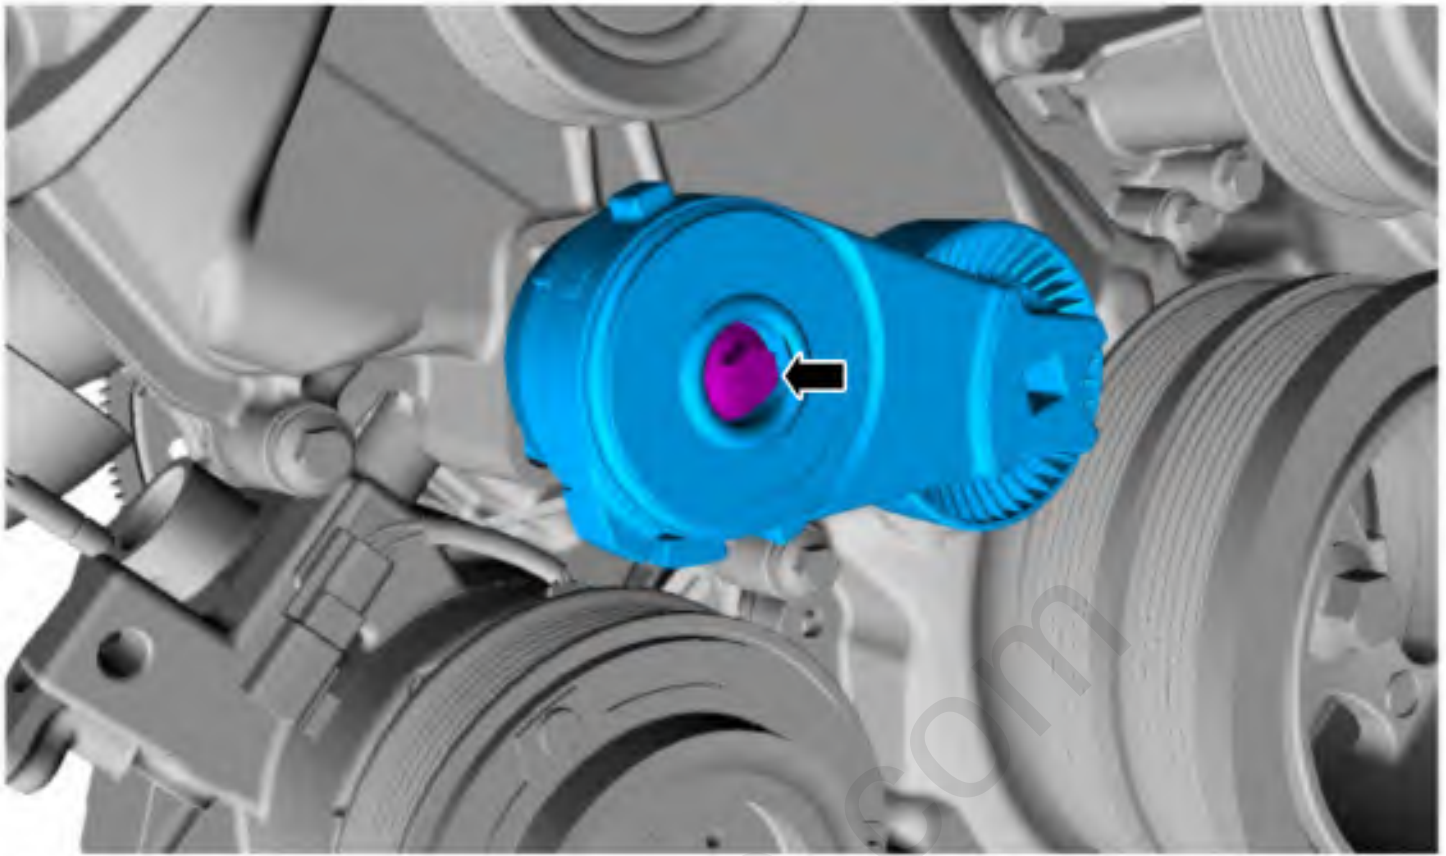


E192520



Installation

1. To install, reverse the removal procedure.
2. After installation, make sure the A/C compressor belt is correctly seated on all pulleys.

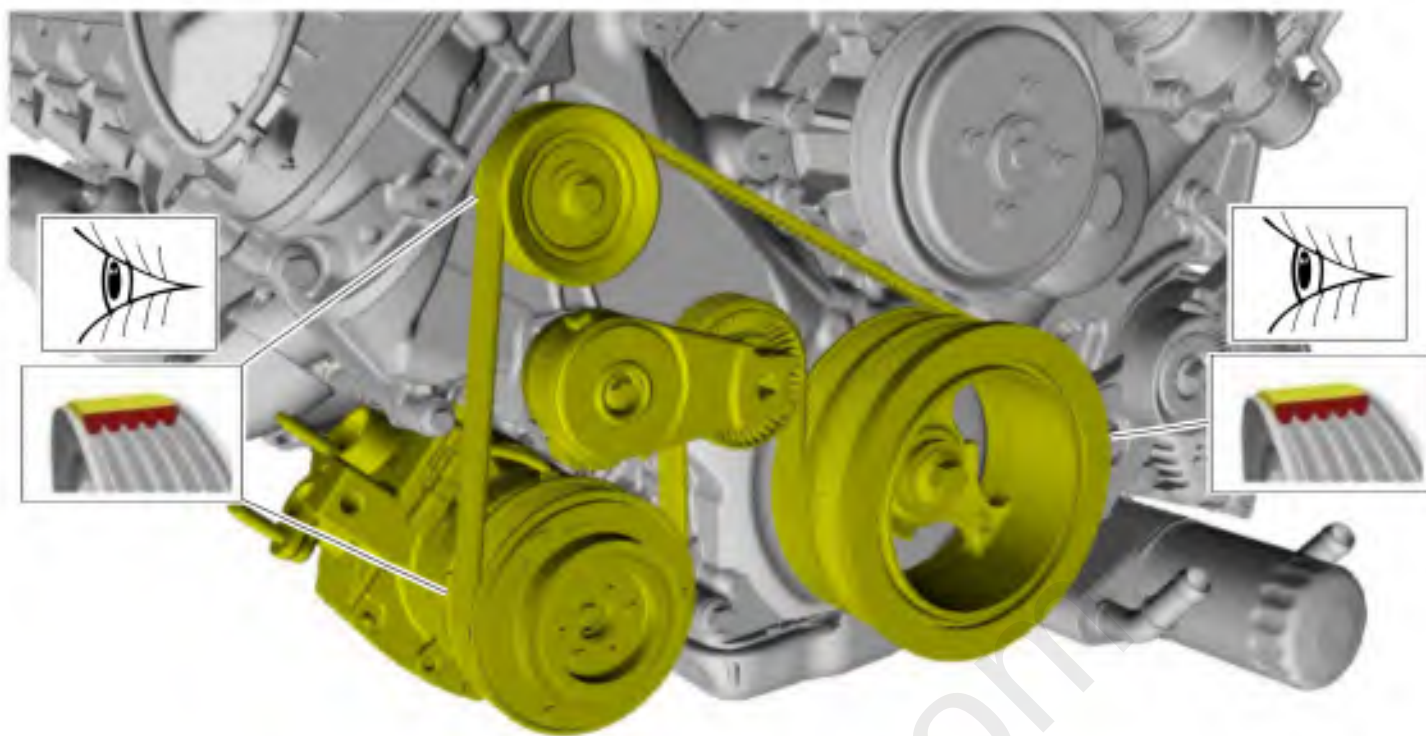

E192495

