


Accessory Drive Belt

Base Part Number: Base Part Number: 8620

Removal

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Rotate the accessory drive belt tensioner counter clockwise and remove the accessory drive belt.

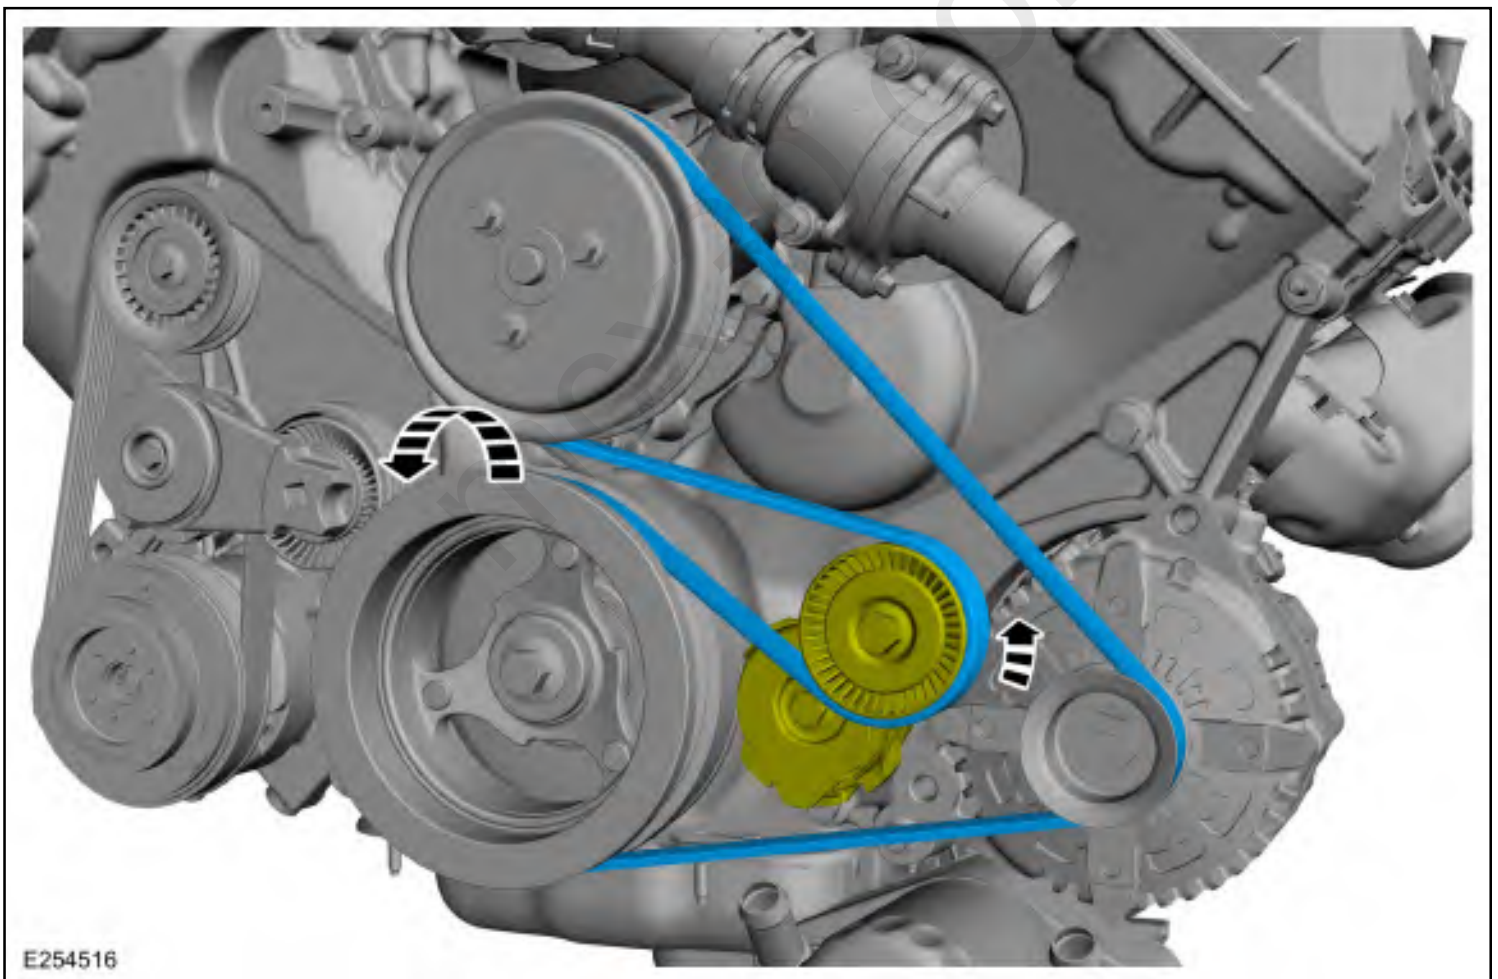

Installation

1. To install, reverse the removal procedure.
2. After installation, make sure the accessory drive belt is correctly seated on all pulleys.

