


Ignition Coil-On-Plug

Base Part Number: Base Part Number: 12A366

Removal


1. Disconnect the ignition coil-on-plug electrical connectors.

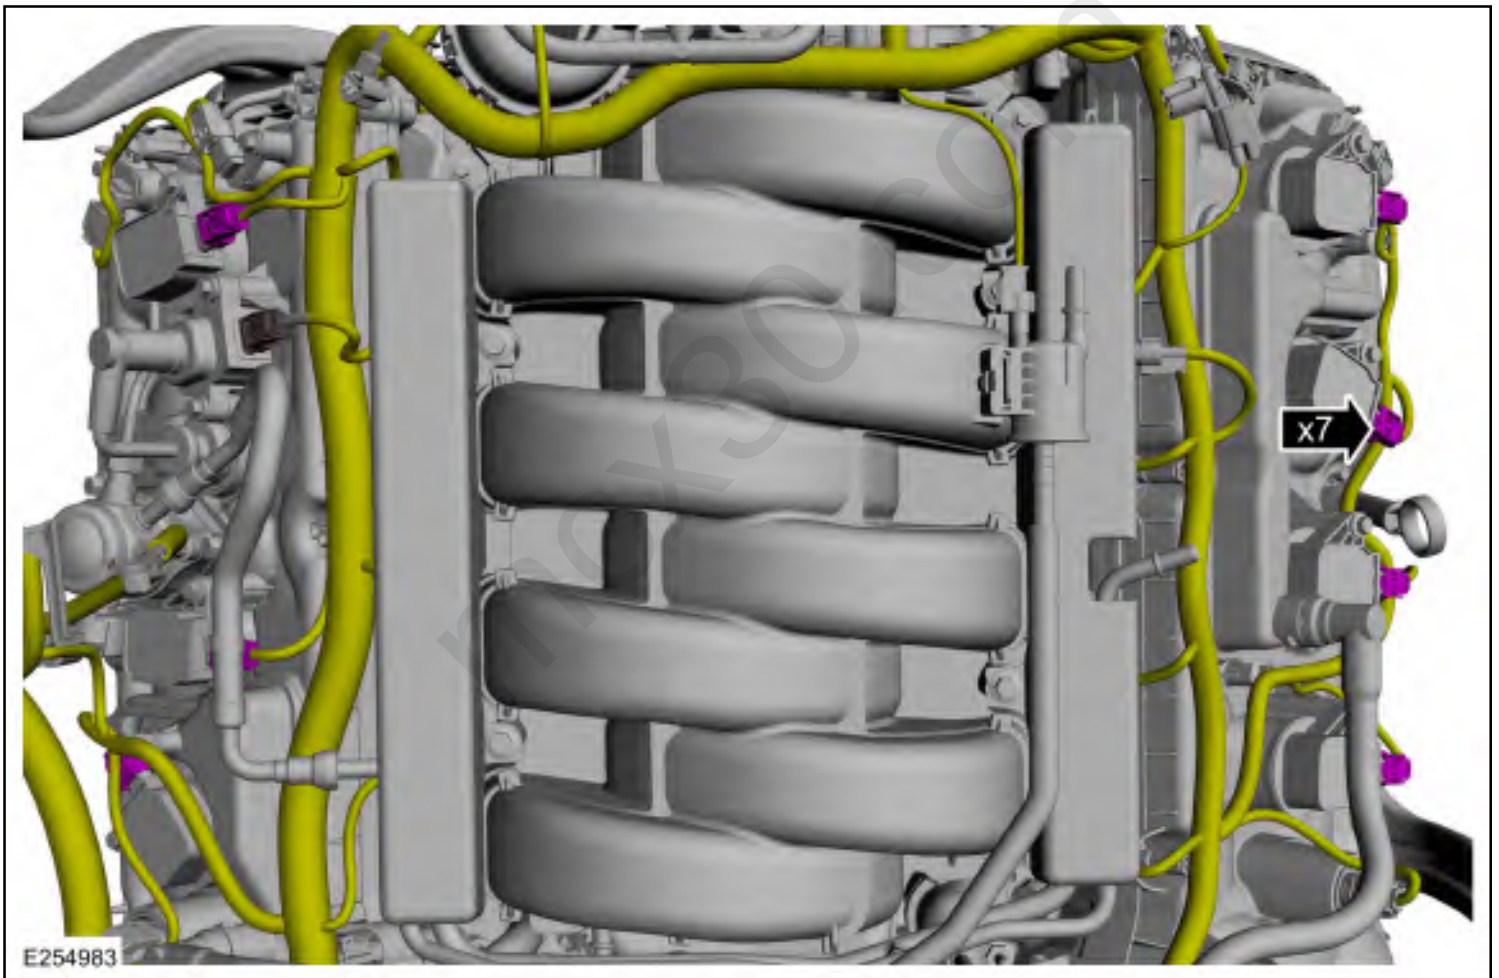

2. **NOTE:** Use compressed air to remove any foreign material from the ignition coil-on-plugs and surrounding area before removing the ignition coil-on-plugs.

NOTE: When removing the ignition coil-on-plugs, a slight twisting motion will break the seal and ease removal.

1. Remove the ignition coil-on-plug retaining bolts.
2. Remove the ignition coil-on-plugs.

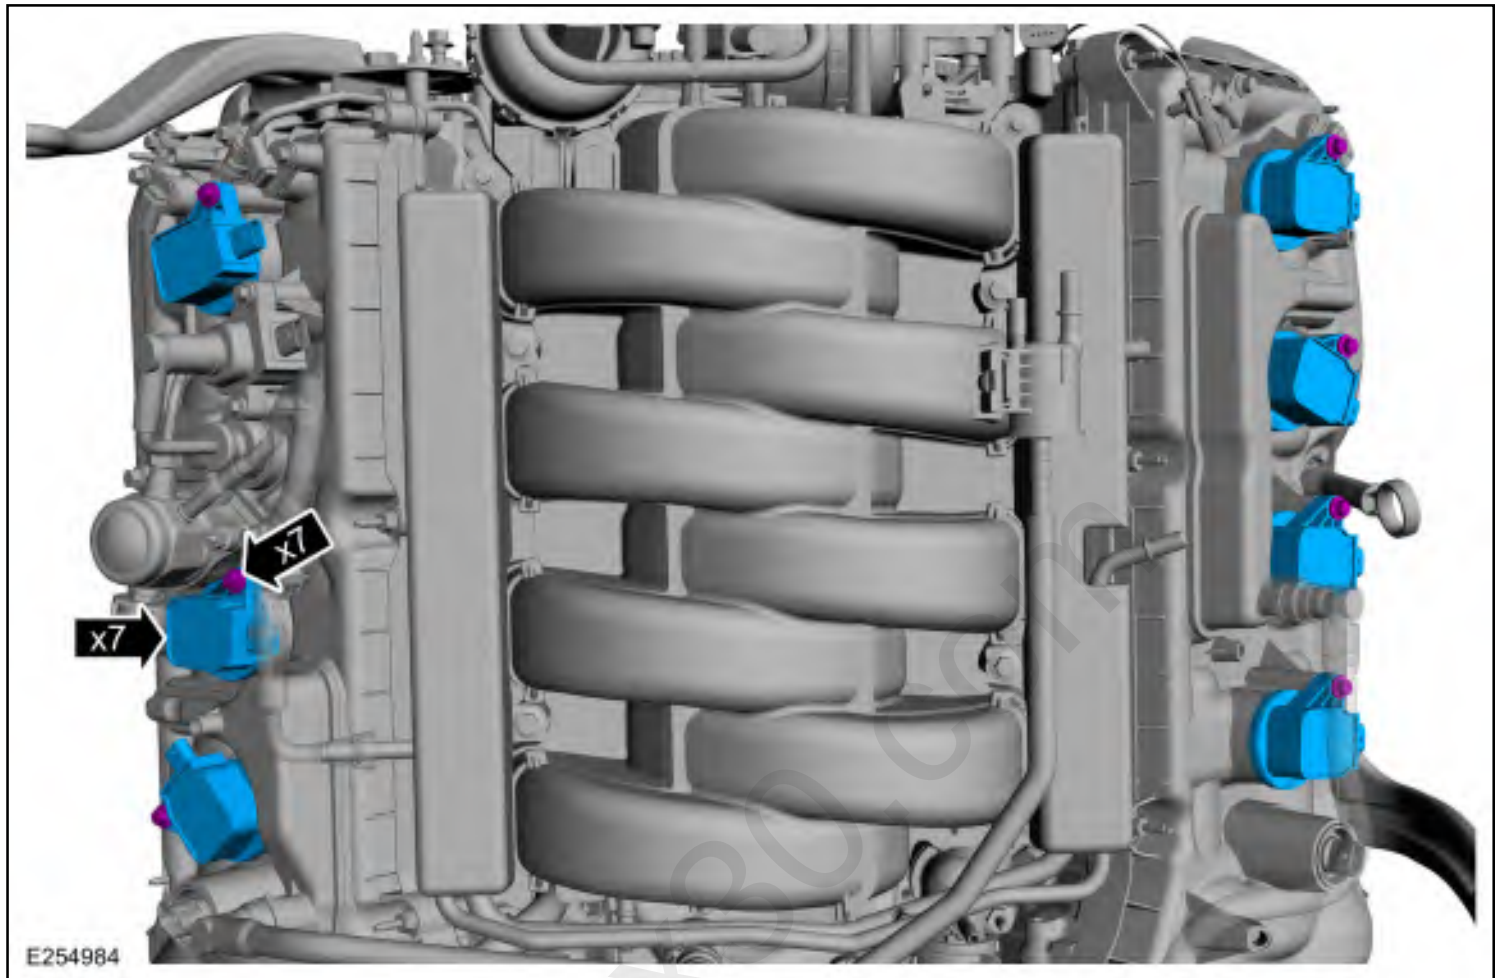

Installation

1. Inspect the ignition coil-on-plug assembly for cracks, rips, or tears. Replace any damaged coil-on-plug assemblies.




E254986

1. Install the ignition coil-on-plugs
2. Install and tighten the ignition coil-on-plug retaining bolts in the following 2 stages.


Torque:

Stage 1: 62 lb.in (7 Nm)

Stage 2: 45°

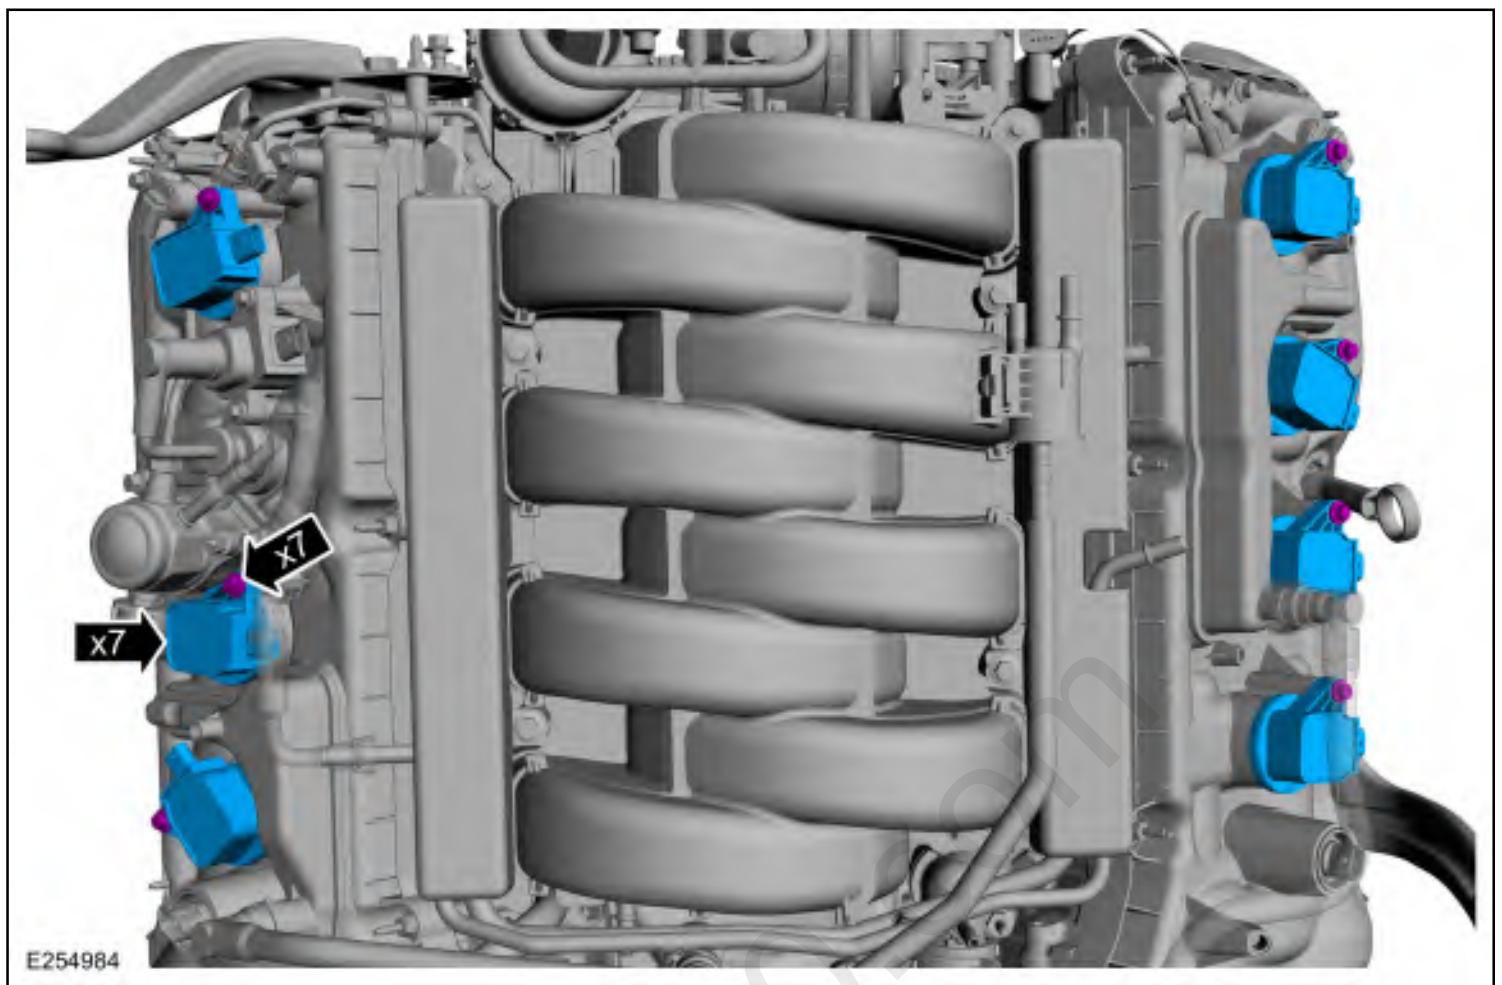

3. Connect the ignition coil-on-plug electrical connectors.

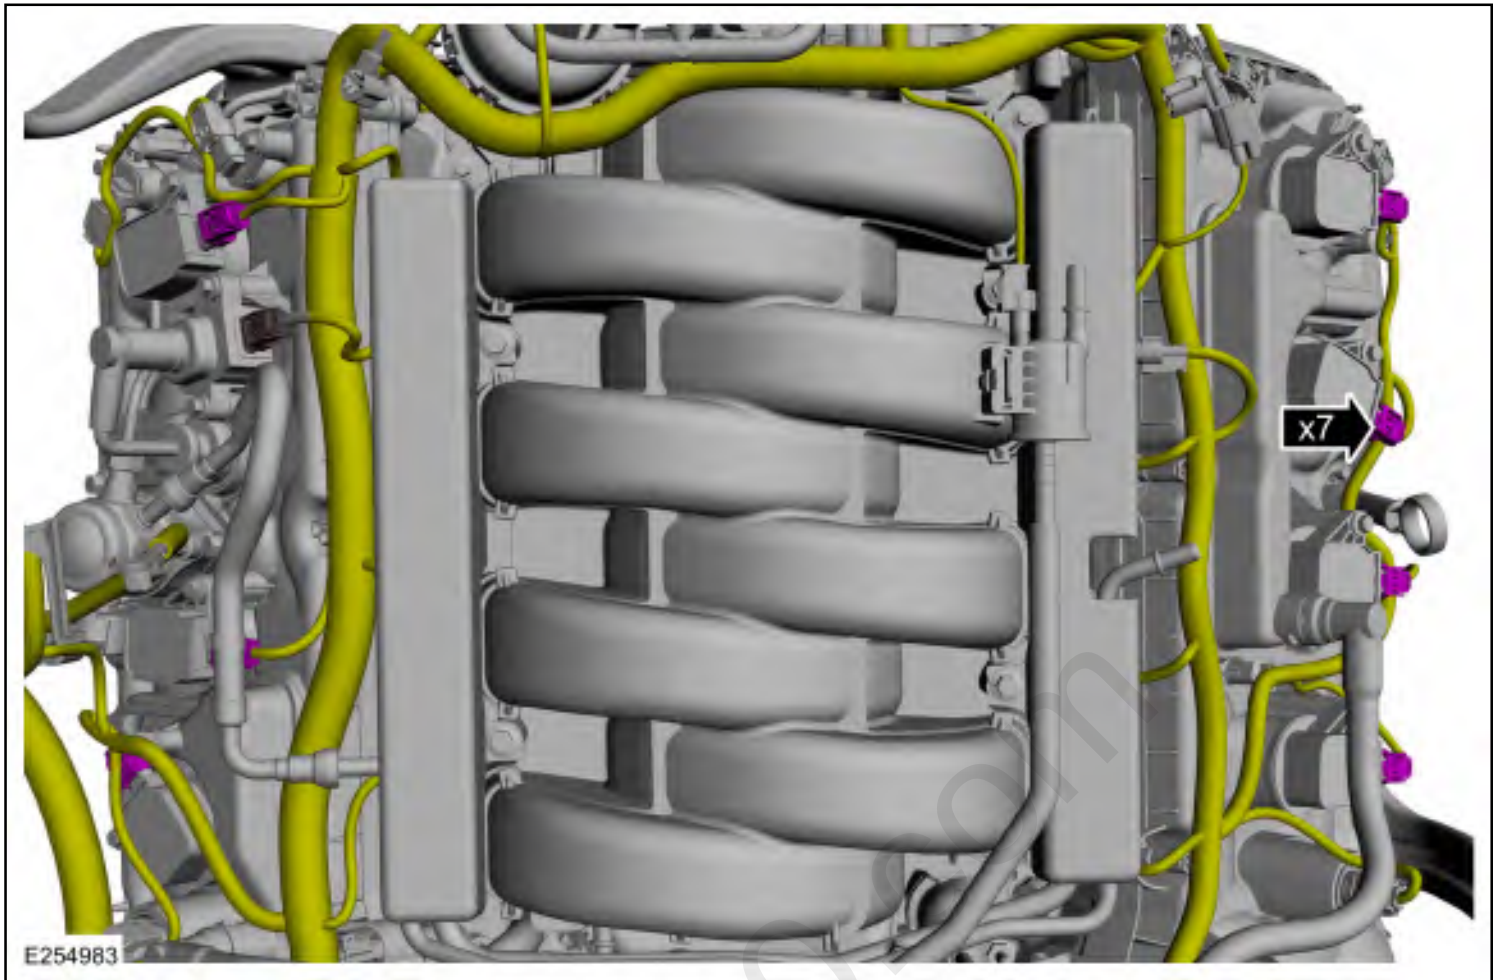

Copyright © 2018 Ford Motor Company