


Remote Mount Ignition Coil


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the electrical connector.

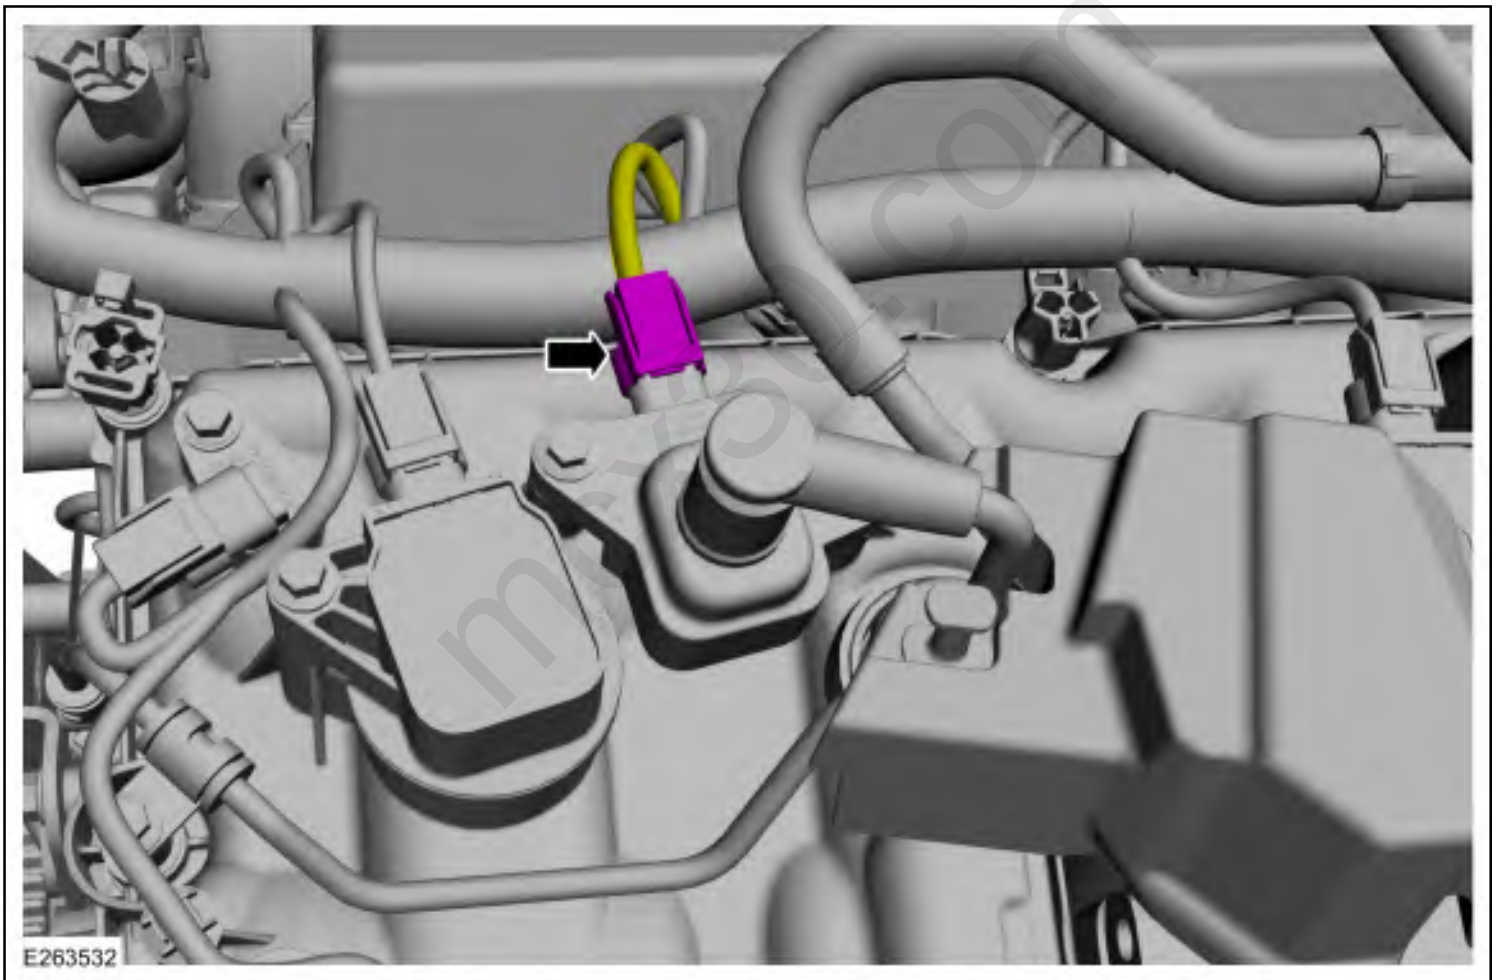

2. Disconnect the spark plug wire connector and position it aside.

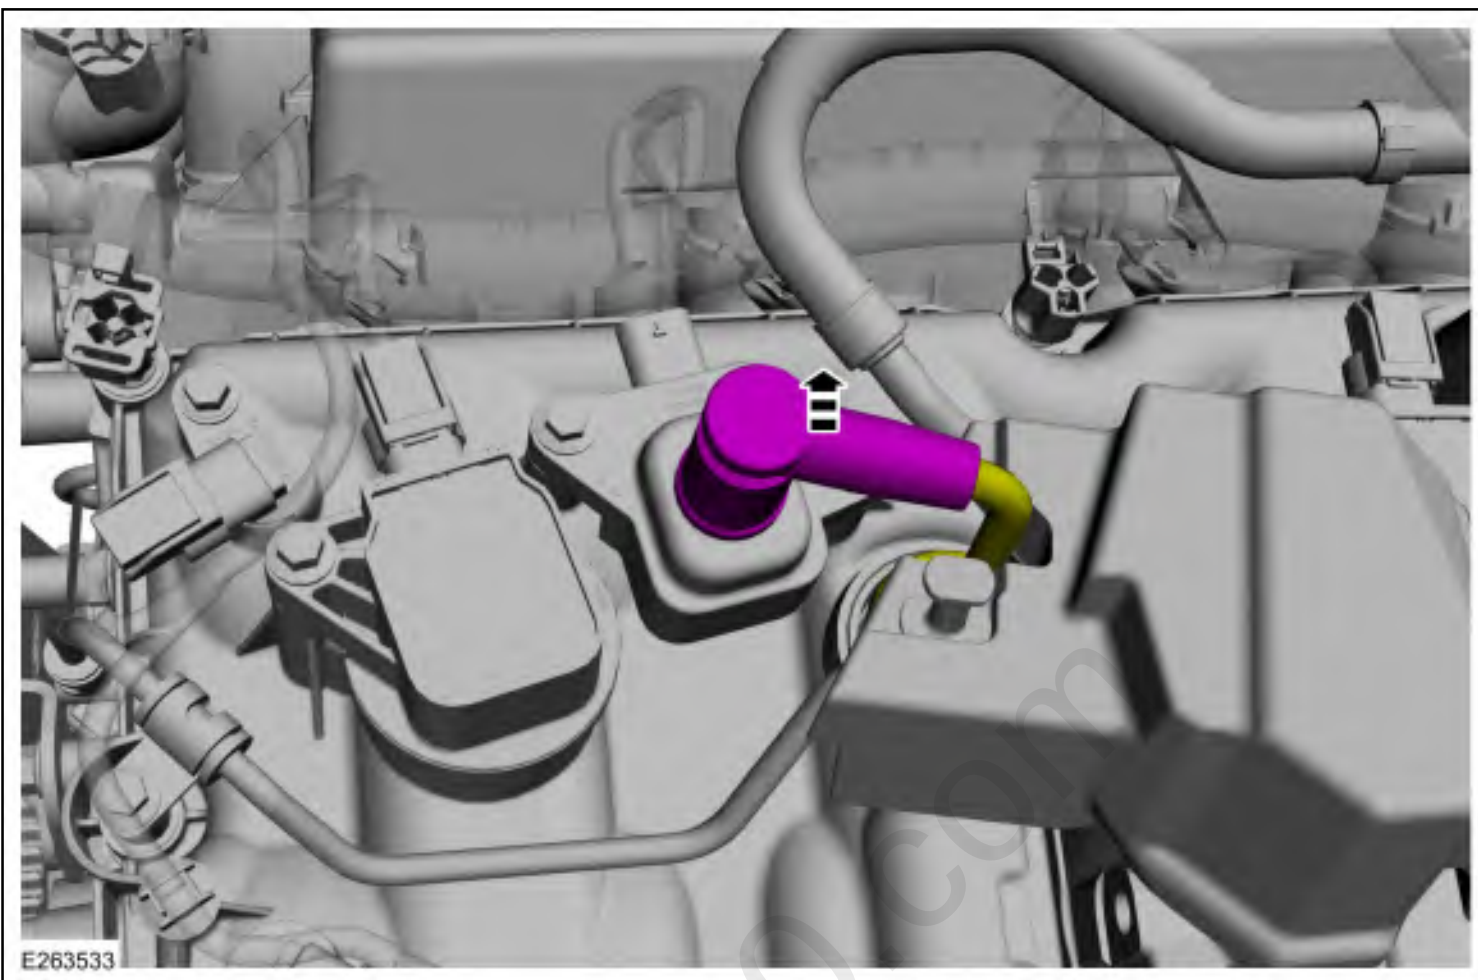


3. Remove the bolts and the remote mount ignition coil.

Torque:

Stage 1: 62 lb.in (7 Nm)

Stage 2: 45°

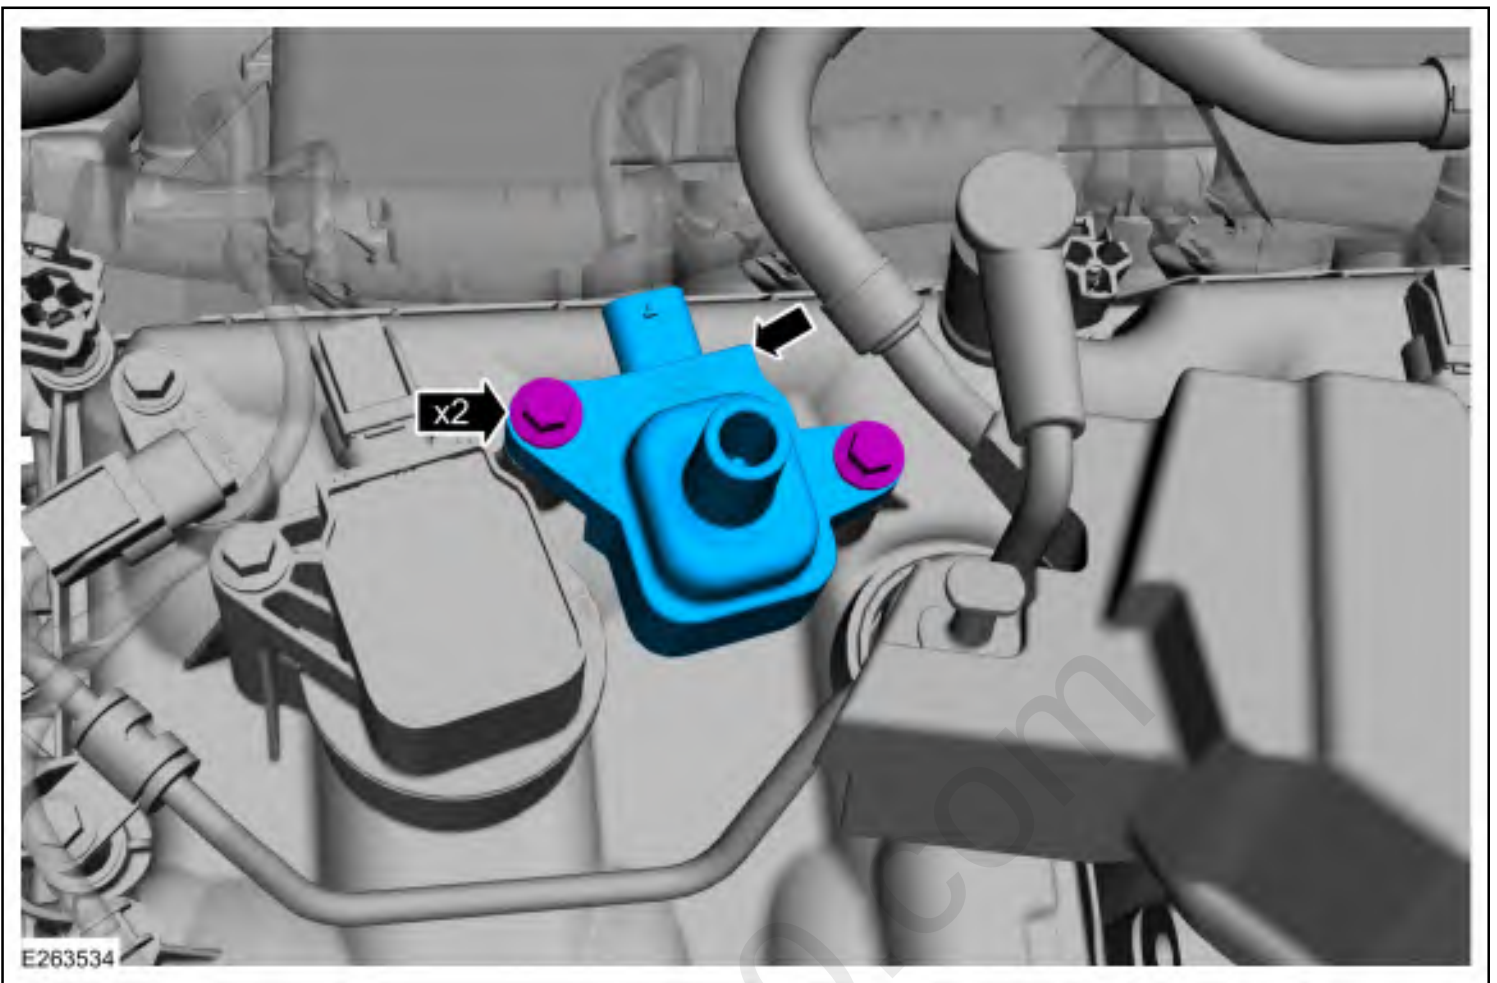

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
