


Spark Plug Wire

Removal

NOTE: Removal steps in this procedure may contain installation details.


- Disconnect the fuel pump electrical connector.
- Detach the retainer and remove the fuel pump cover.

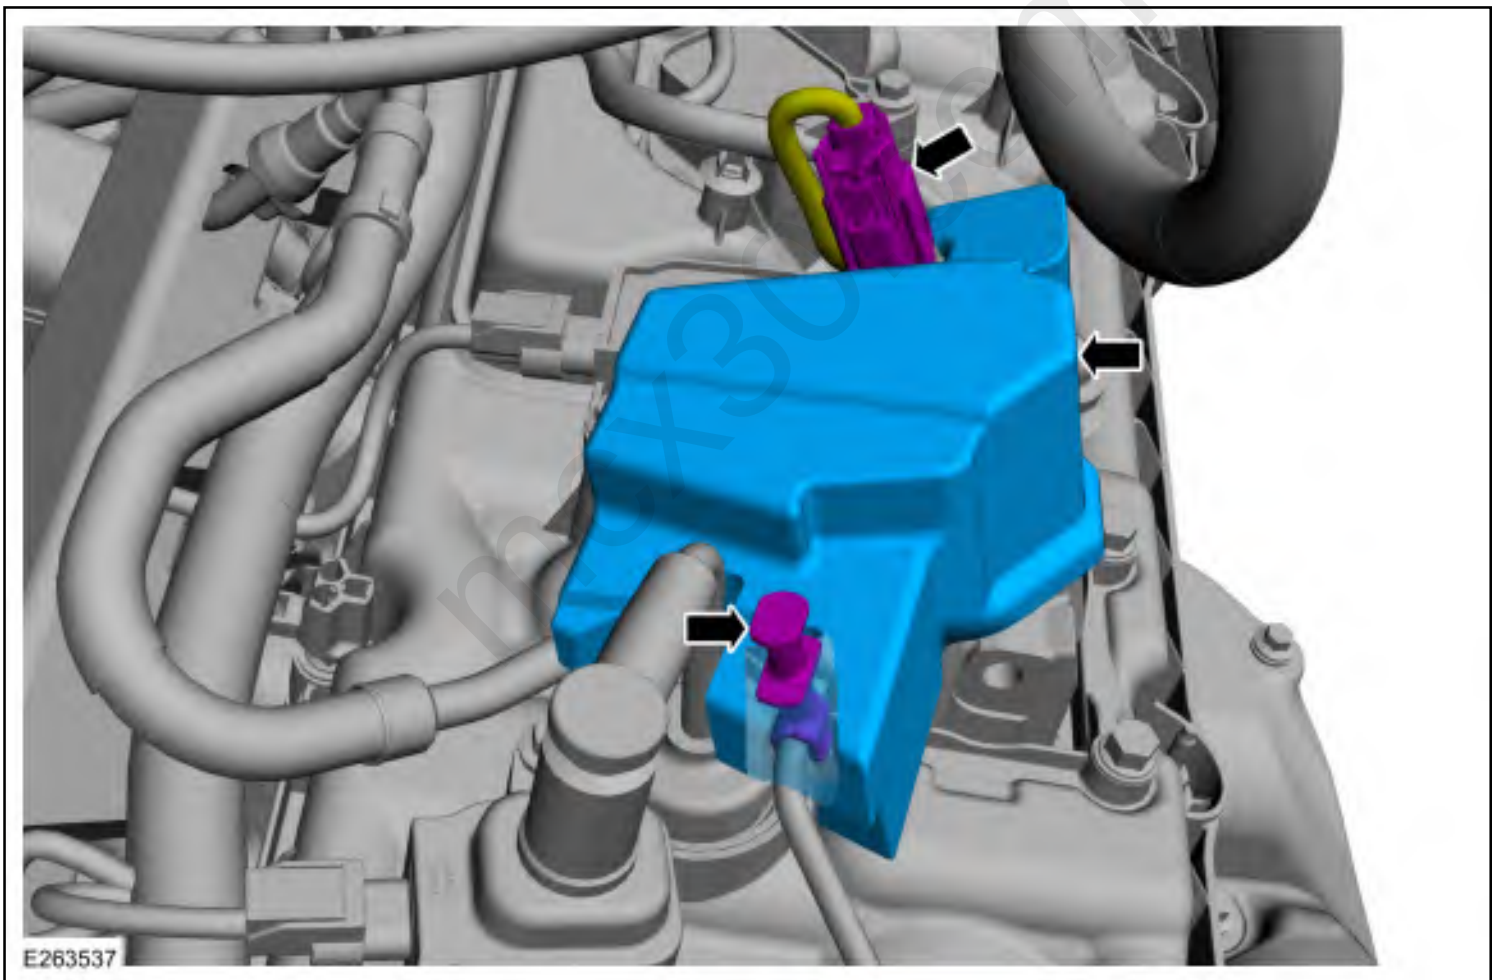


2. **NOTE:** When disconnecting or removing any fuel tubes, carefully drain any residual fuel into a suitable container.

Disconnect the quick release coupling and position the fuel tube aside.

Refer to: [Quick Release Coupling](#) (310-00D Fuel System - General Information - 5.0L 32V Ti-VCT, General Procedures).

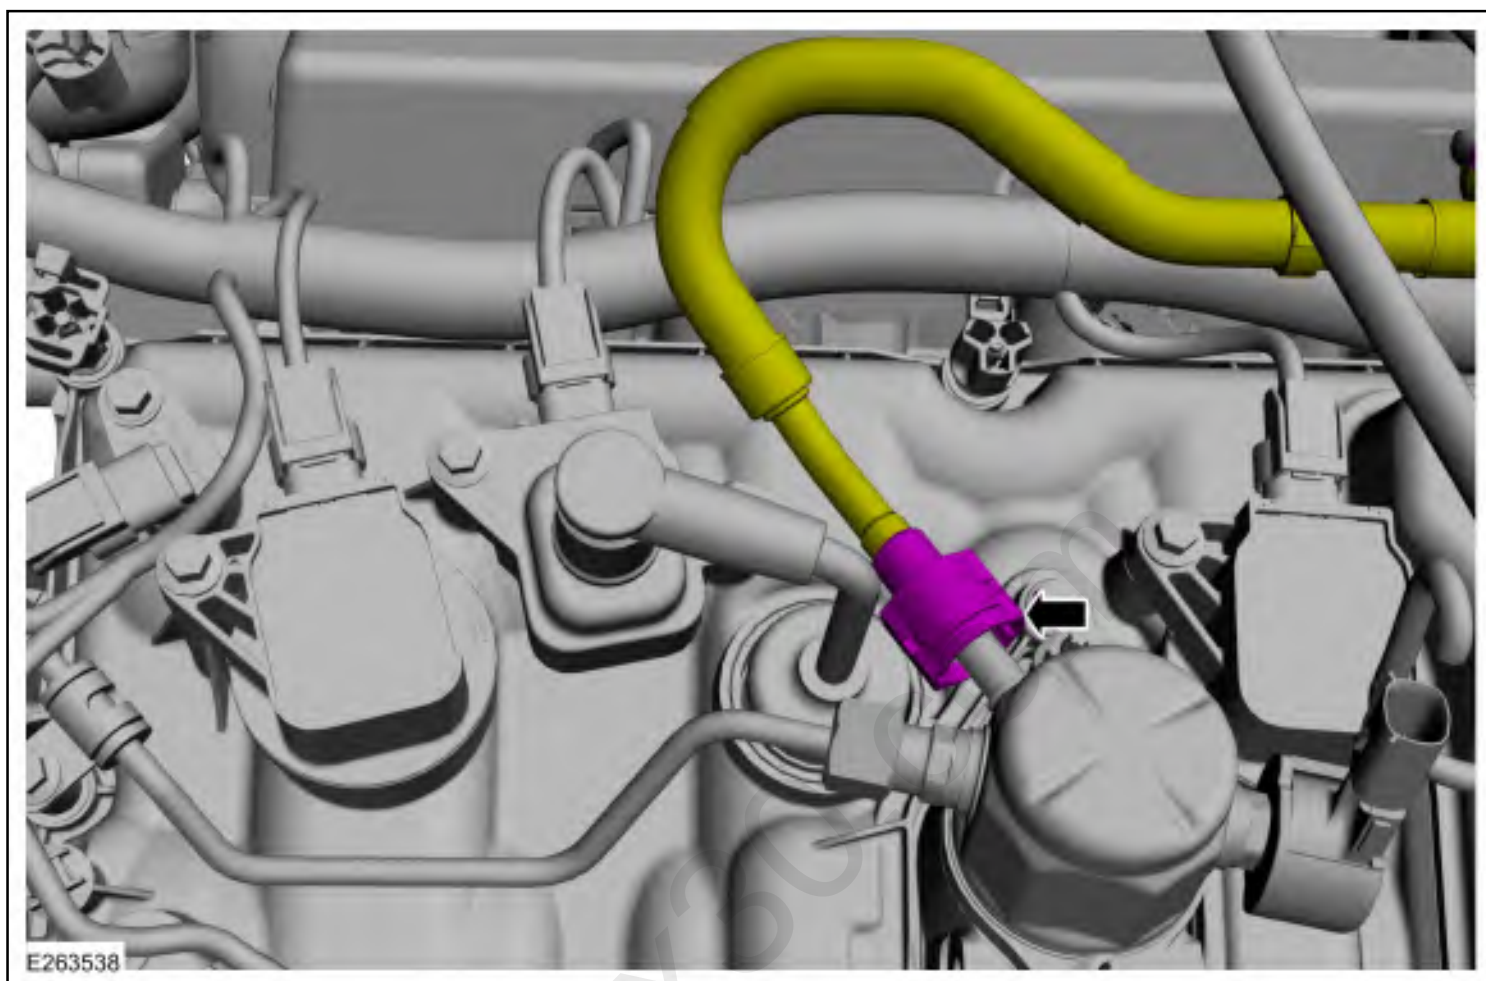

3. Disconnect and remove the spark plug wire.

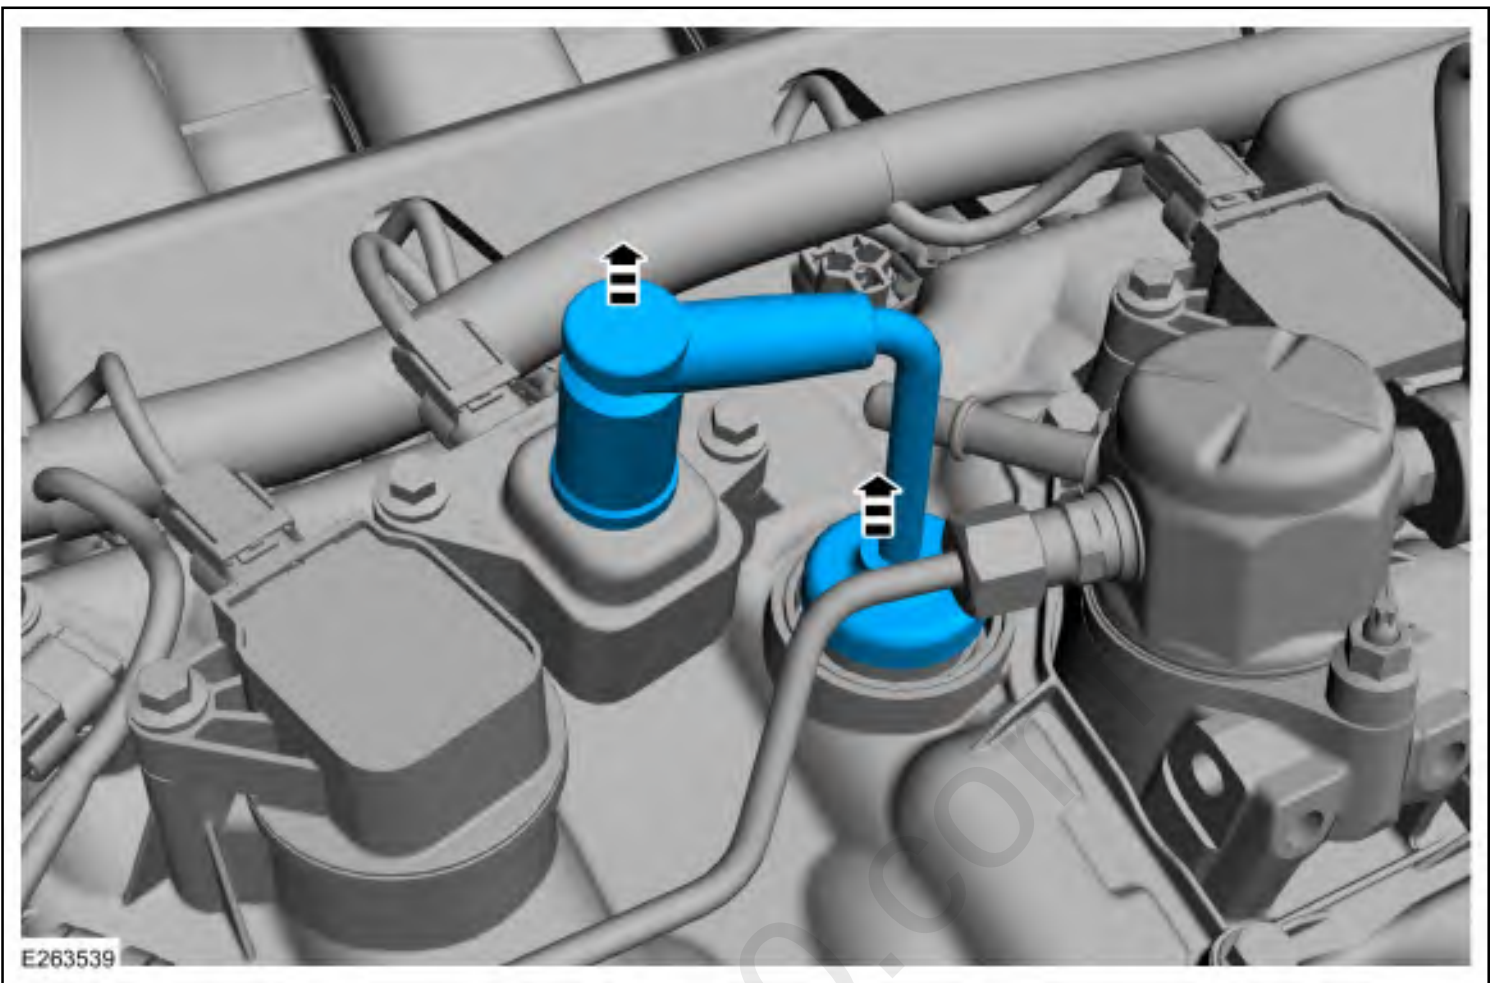

Installation

1. Inspect the spark plug wire for cracks, rips, or tears. Replace any damaged spark plug wire.



E263540



2. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company