

Spark Plugs

Base Part Number: Base Part Number: 12405

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the spark plug wire.
Refer to: [Spark Plug Wire](#) (303-07D Engine Ignition - 5.0L 32V Ti-VCT, Removal and Installation).
2. Remove the ignition coil-on-plugs.
Refer to: Ignition Coil-On-Plug (303-07 Engine Ignition - 5.0L 32V Ti-VCT) .
3. **NOTICE: Do not remove the spark plugs when the engine is hot or cold soaked. Spark plug thread or cylinder head damage can occur. Make sure the engine is warm (hand touch after cooling down) prior to spark plug removal.**

NOTICE: If a spark plug is dropped, internal damage may result and the spark plug must be discarded. The use of a damaged spark plug may cause cylinder misfire resulting in engine damage.

NOTE: Use compressed air to remove any foreign material in the spark plug well before removing the spark plugs.

Remove the spark plugs.
Torque: 128 lb.in (14.5 Nm)

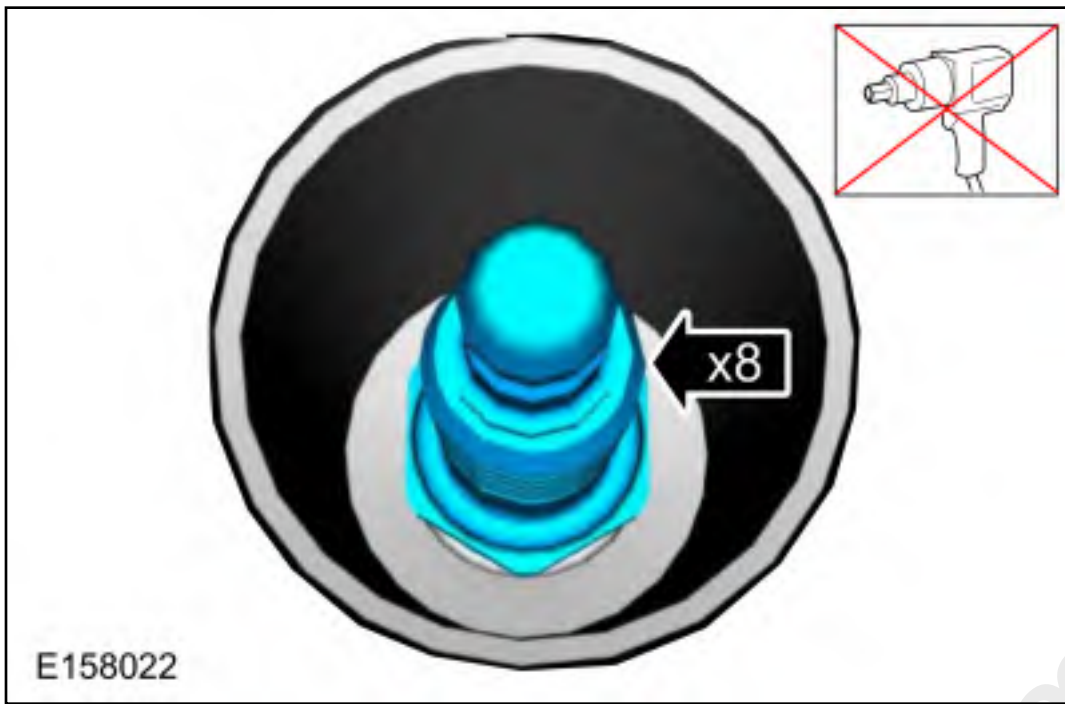

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
