

Positive Crankcase Ventilation (PCV) Valve


Materials

Name	Specification
Motorcraft® SAE 5W-20 Synthetic Blend Motor Oil XO-5W20-QSP	WSS-M2C945-A


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the crankcase ventilation tube-to-PCV valve quick connect coupling.
Refer to: [Quick Release Coupling](#) (310-00D Fuel System - General Information - 5.0L 32V Ti-VCT, General Procedures).

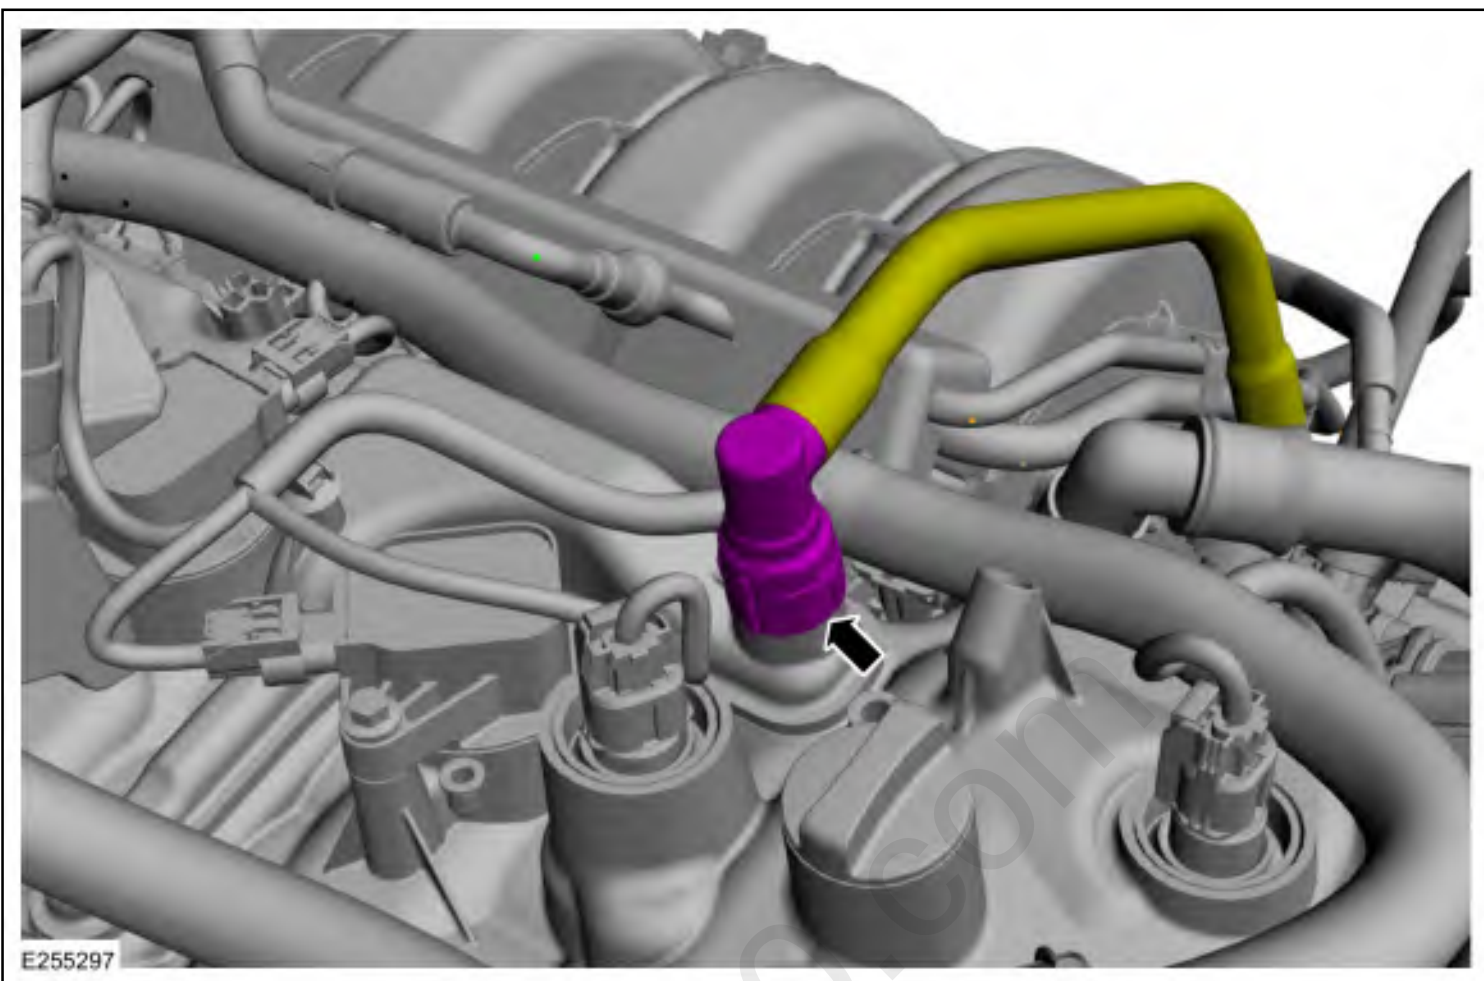

2. Rotate the PCV valve counterclockwise, then remove and discard the PCV valve.

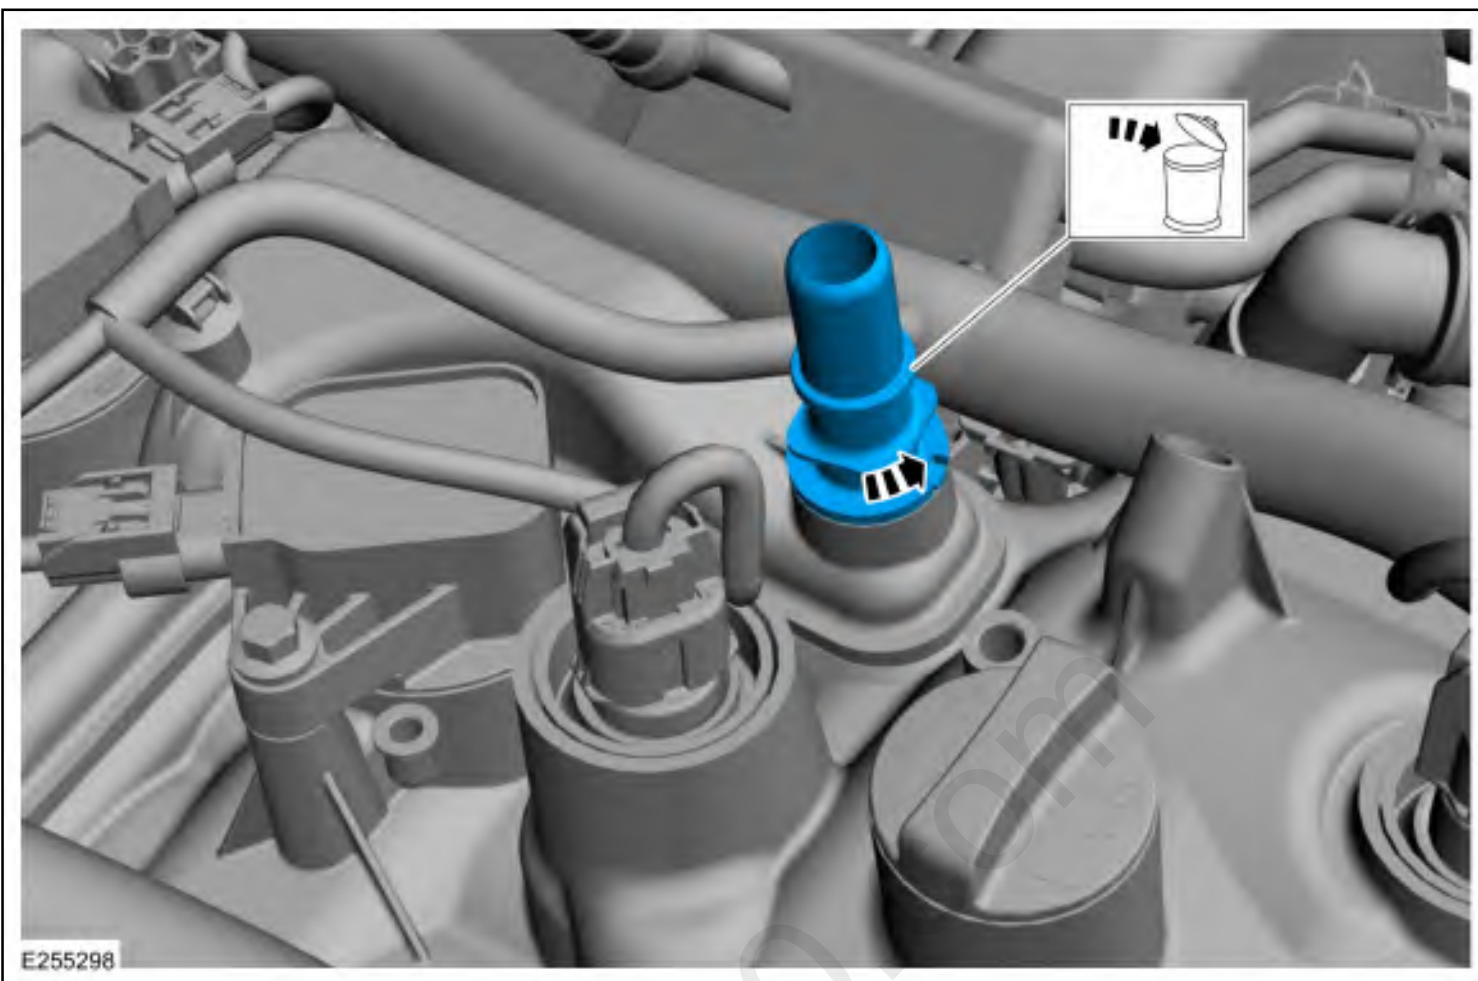

Installation

NOTICE: A new PCV valve must be installed if removed. Damage will occur to the locking mechanism on the PCV valve.

1. Lubricate the O-ring seal of the new PCV valve with clean engine oil.
Material: Motorcraft® SAE 5W-20 Synthetic Blend Motor Oil / XO-5W20-QSP (WSS-M2C945-A)



E180567

2. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company