

Evaporative Emission Canister Purge Valve

Base Part Number: Base Part Number: 9D289


Removal

 **WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.


 **WARNING:** Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the EVAP canister purge valve quick connect coupling.
Refer to: [Quick Release Coupling](#) (310-00D Fuel System - General Information - 5.0L 32V Ti-VCT, General Procedures).
2. Detach the retainer and position aside the EVAP canister purge valve hose.

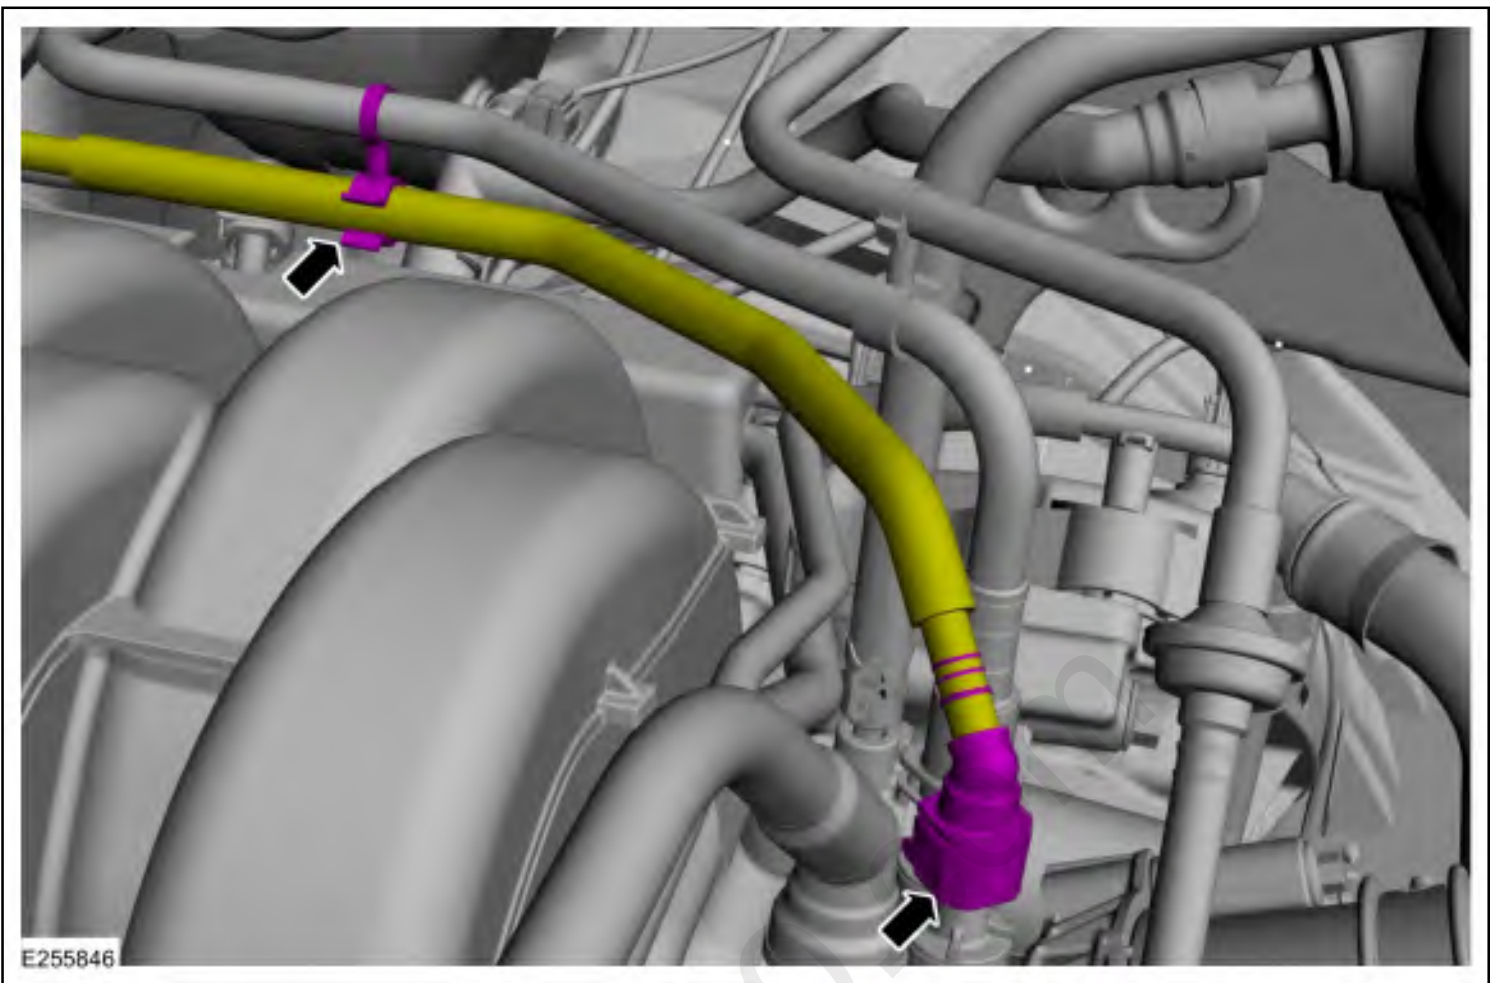

1. Disconnect the EVAP canister purge valve electrical connector.
2. Disconnect the EVAP canister purge valve quick connect coupling.
Refer to: [Quick Release Coupling](#) (310-00D Fuel System - General Information - 5.0L 32V Ti-VCT, General Procedures).
3. Lift and remove the EVAP canister purge valve.
Torque: 89 lb.in (10 Nm)

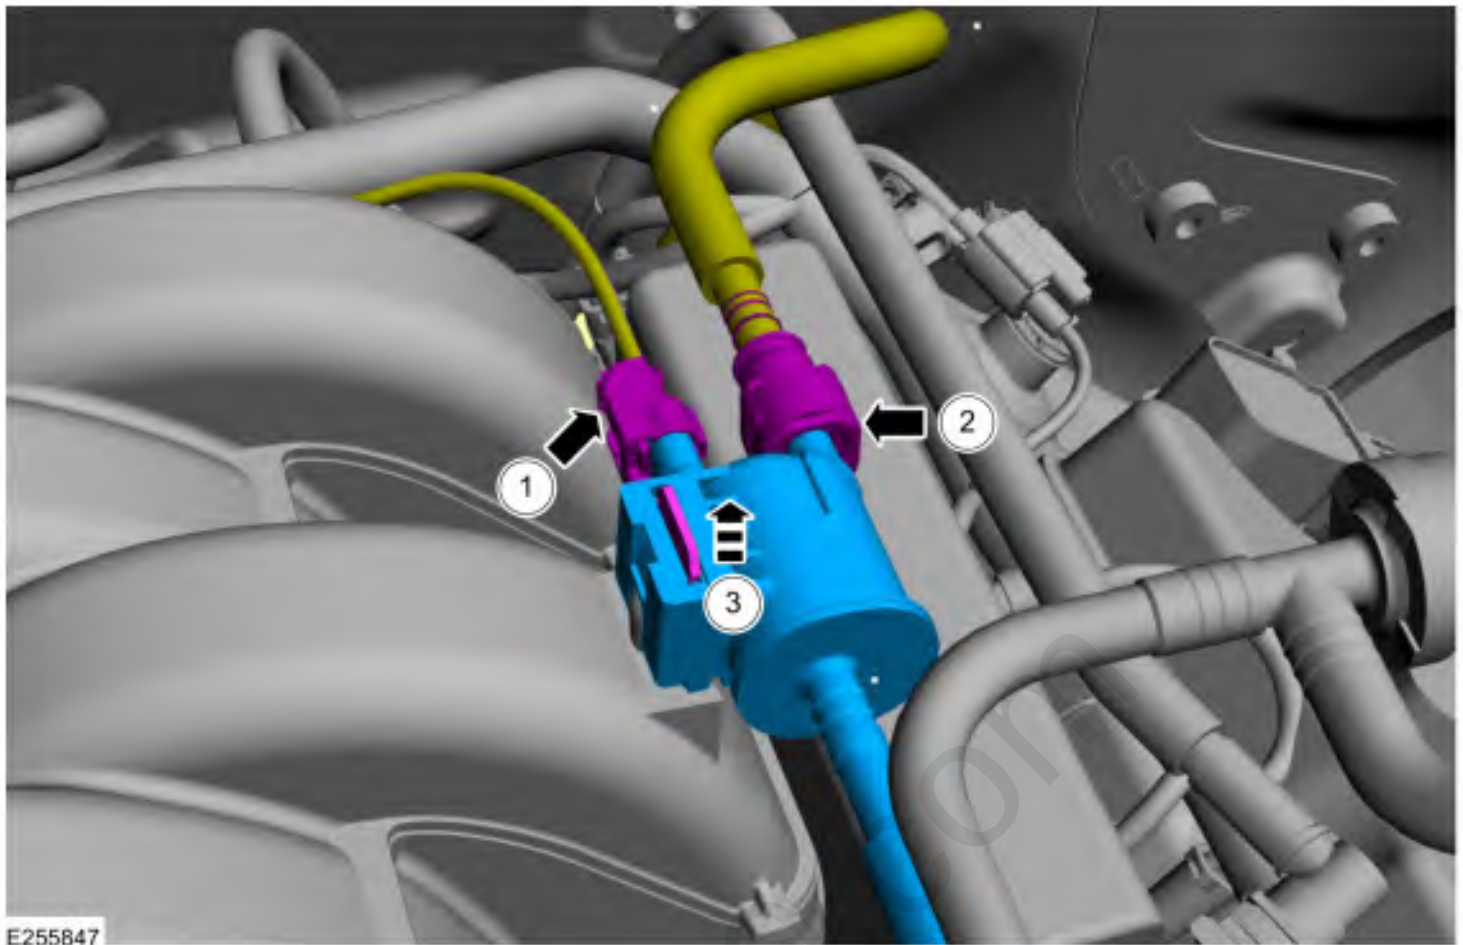

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
