


Fuel Tank Pressure Sensor and Tube

Base Part Number: Base Part Number: 9D683

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove the fuel tank.
Refer to: [Fuel Tank](#) (310-01D Fuel Tank and Lines - 5.0L 32V Ti-VCT, Removal and Installation).
3. **NOTE:** Typical application shown.
 1. Disconnect the EVAP quick connect couplings.
Refer to: [Quick Release Coupling](#) (310-00D Fuel System - General Information - 5.0L 32V Ti-VCT, General Procedures).
 2. Release the hose routing clips and remove the EVAP fuel tank pressure sensor and tube.

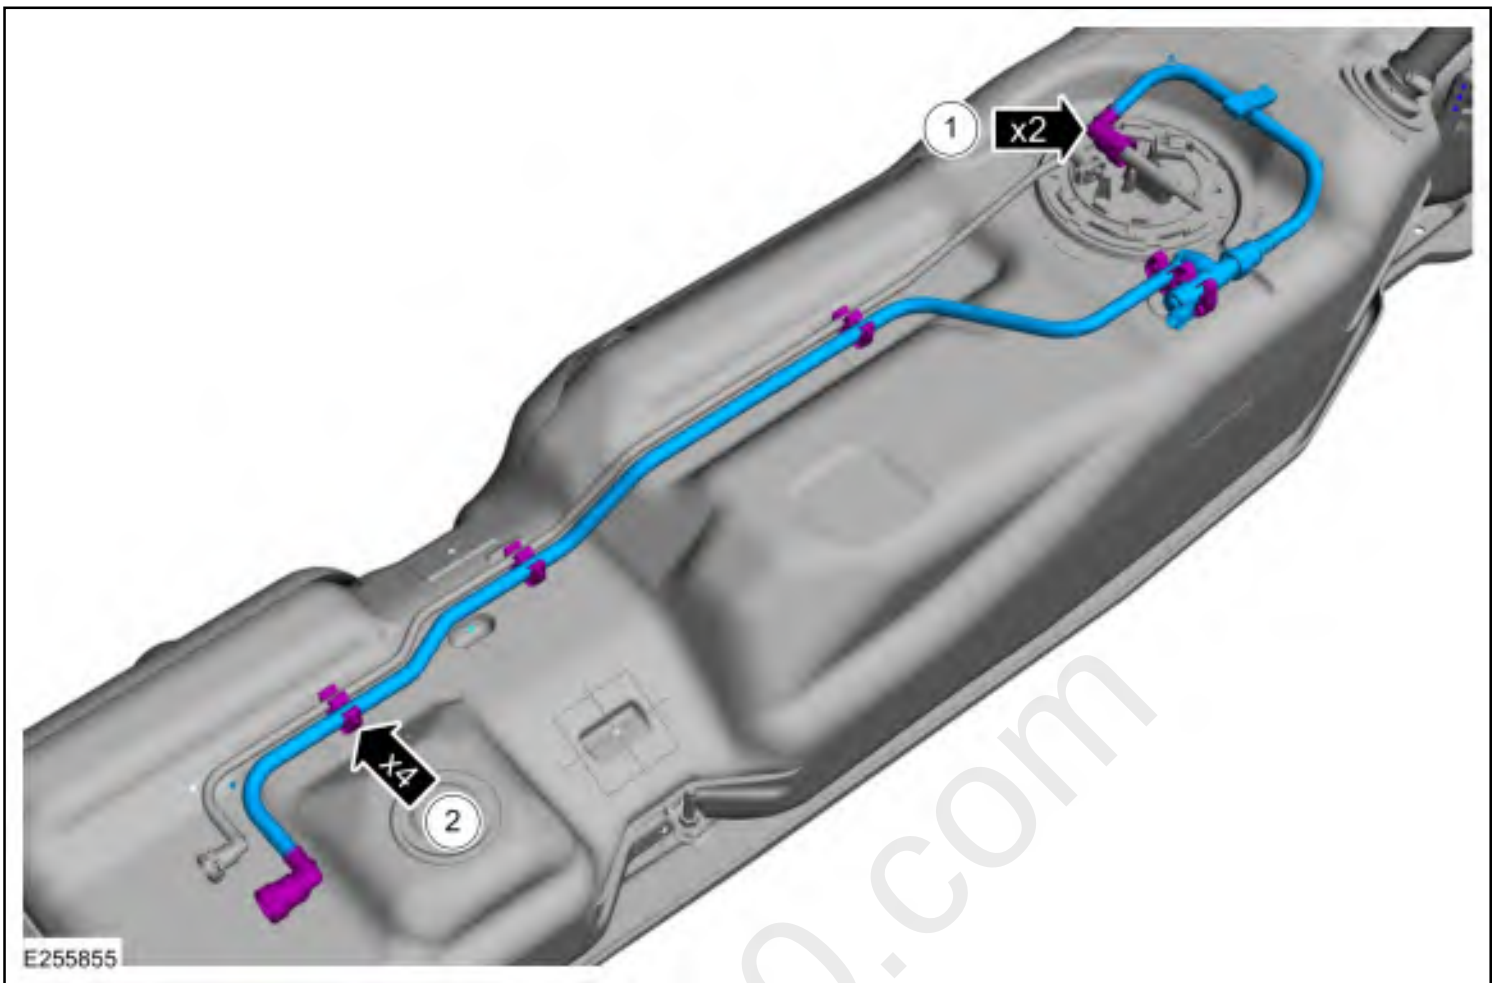

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company