

Evaporative Emission Blocking Valve

Removal

NOTE: *The evaporative emission blocking valve is serviced with the fuel tank pressure sensor and tube.*

1. Remove the fuel tank pressure sensor and tube.
Refer to: [Fuel Tank Pressure Sensor and Tube](#) (303-13D Evaporative Emissions - 5.0L 32V Ti-VCT, Removal and Installation).

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
