


Cylinder Head Temperature (CHT) Sensor

Base Part Number: Base Part Number: 6G004

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the RH fender splash shield.
Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).
2. **NOTE:** Do not reuse the CHT sensor, install a new sensor.
 - Disconnect the CHT sensor electrical connector.
 - Remove and discard the CHT sensor.
Torque: 97 lb.in (11 Nm)

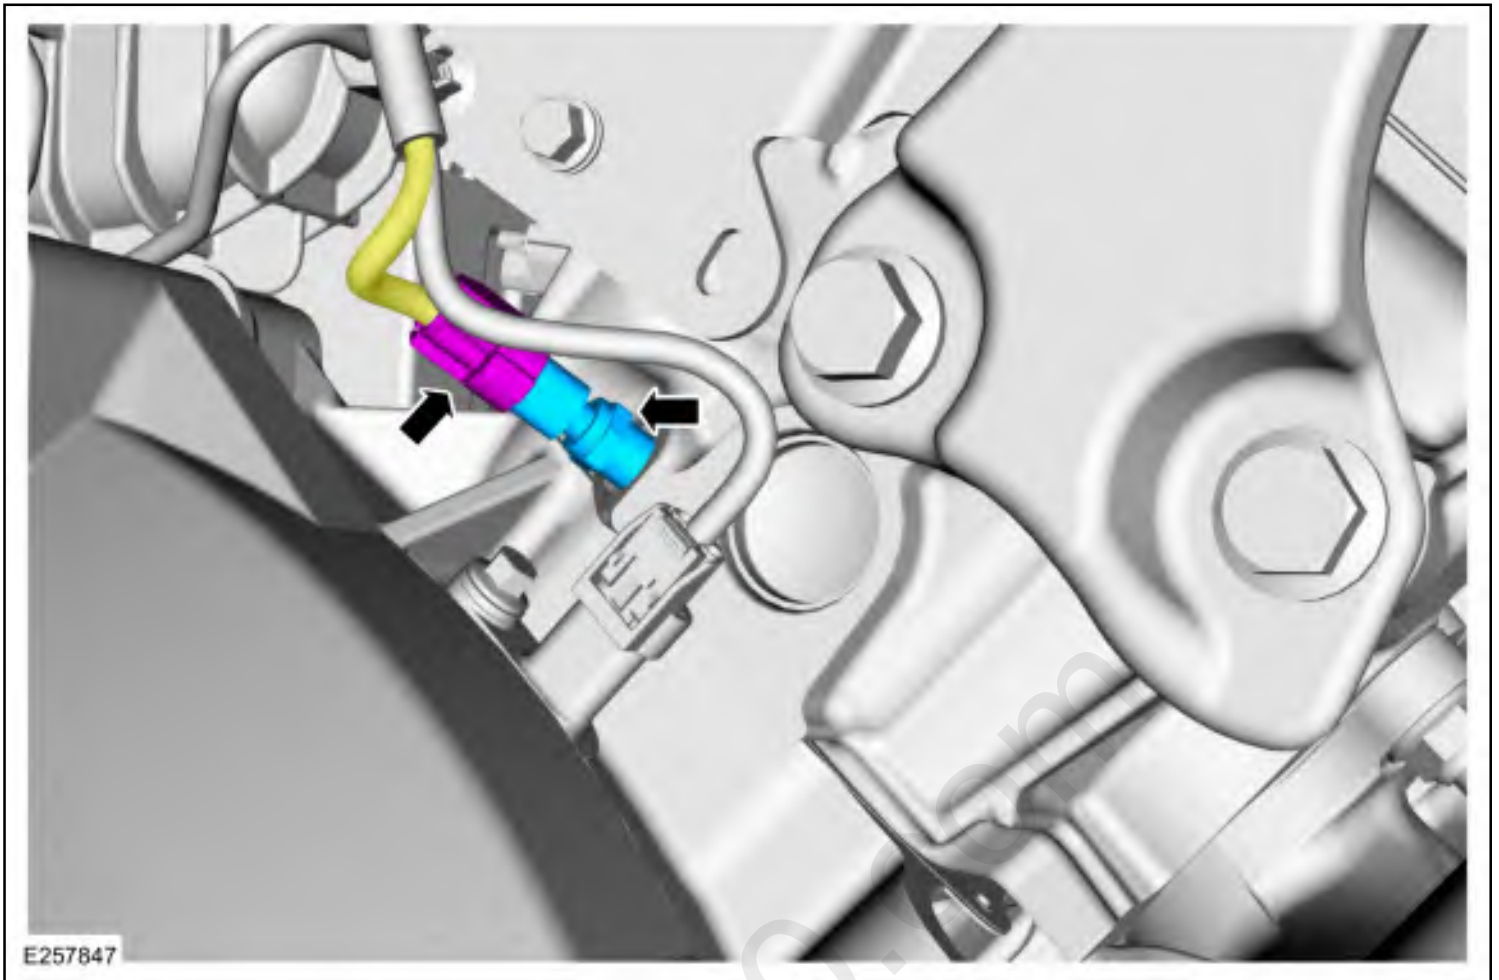

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
