


Crankshaft Position (CKP) Sensor


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the RHF wheel and tire.
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the RH fender splash shield.
Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).
3. Position the cover and disconnect the CKP sensor electrical connector.

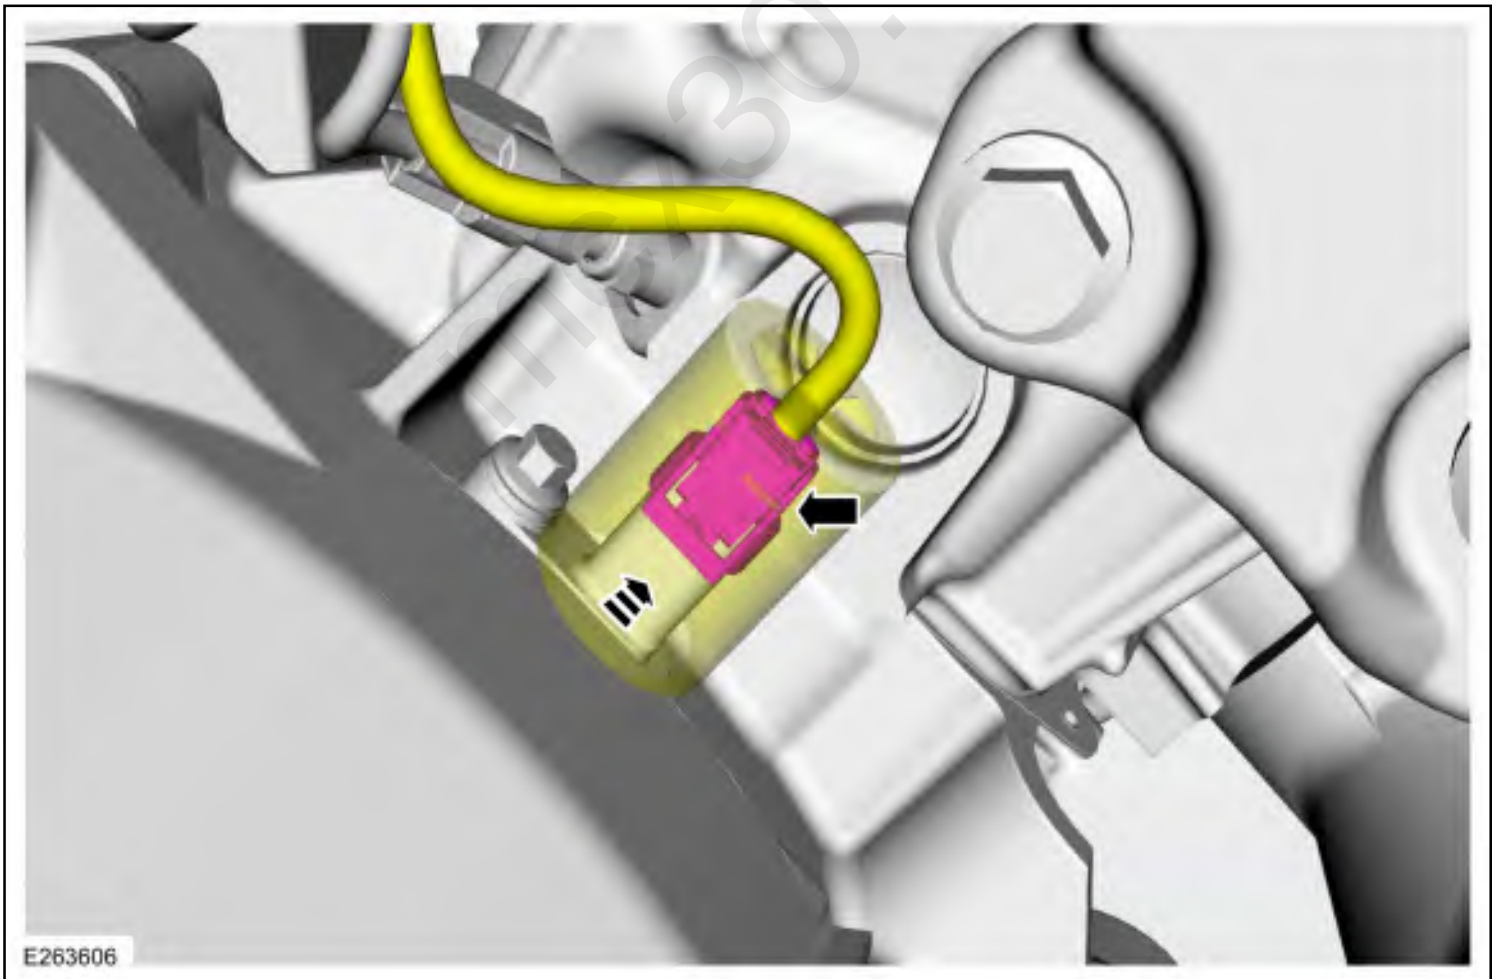

4. Remove the bolt and the CKP sensor.
Torque: 89 lb.in (10 Nm)

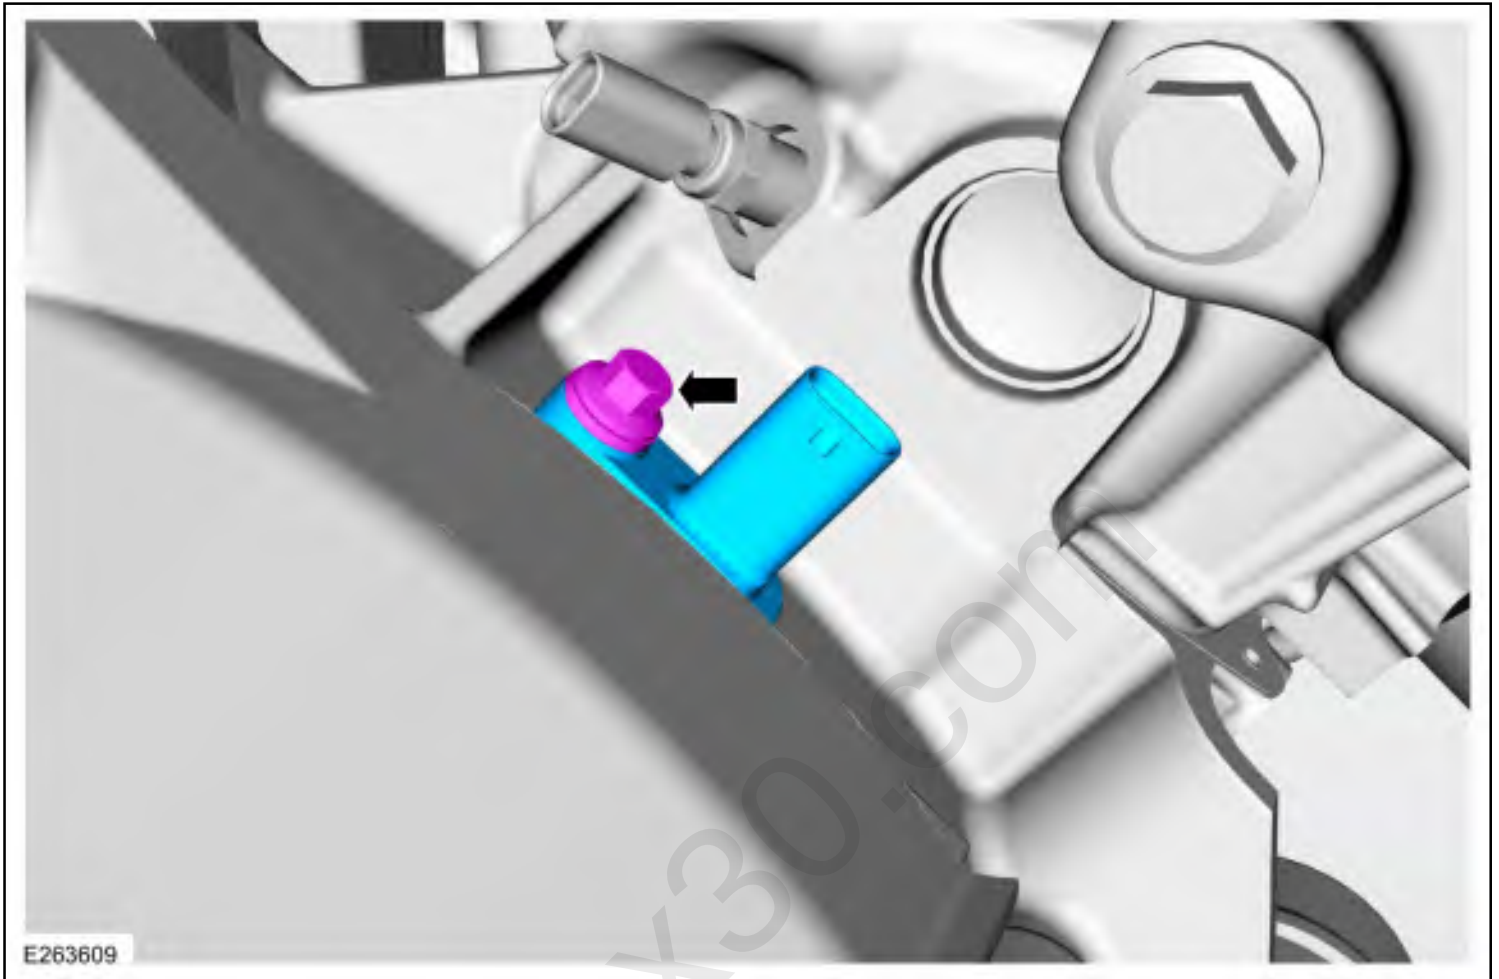

Installation

1. To install, reverse the removal procedure.
2. Using the scan tool, perform the Misfire Monitor Neutral Profile Correction procedure, following the on-screen instructions.