

Transmission Fluid Cooler - Raptor


Base Part Number: Base Part Number: 7A095

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the active grille shutter.
Refer to: Active Grille Shutter (501-02 Front End Body Panels) .
2. **NOTE:** Be prepared to collect escaping fluid.


Release the clamp and disconnect the cooler bypass valve-to-transmission fluid cooler tube.

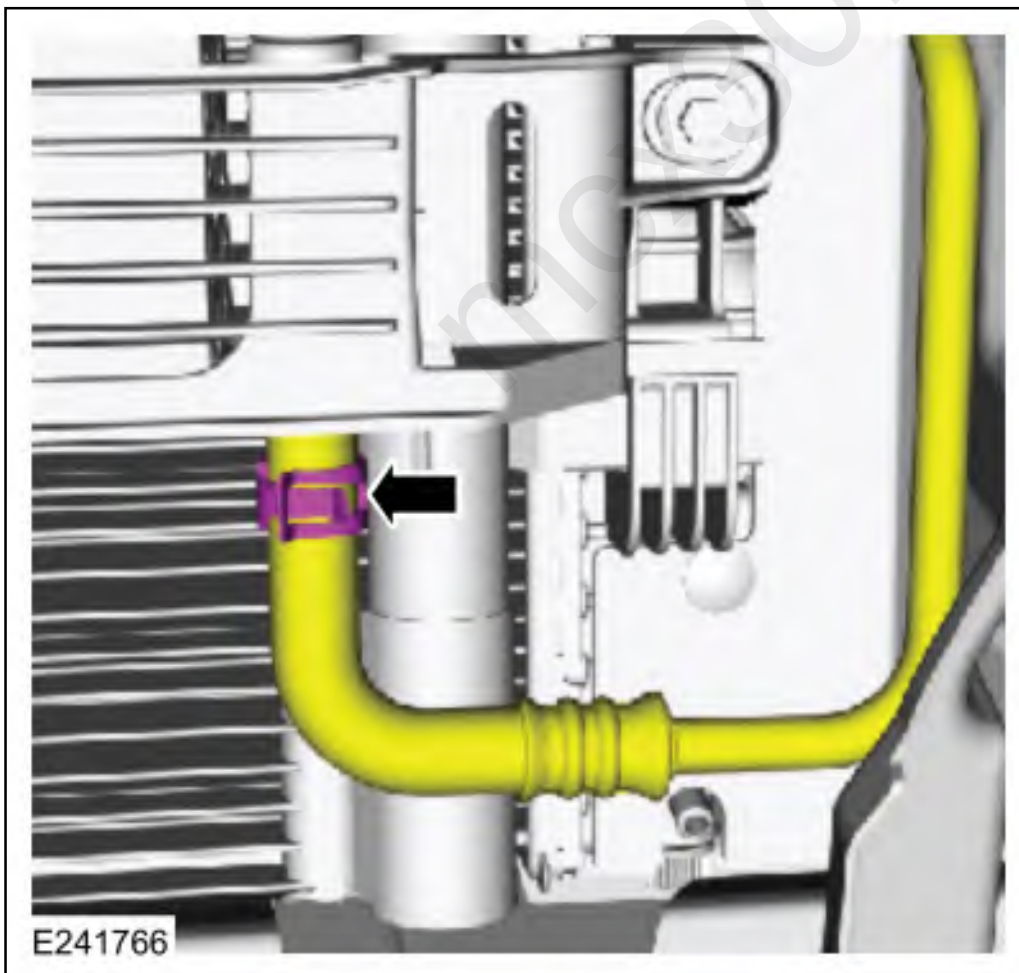

3. Release the clamp and disconnect the transmission fluid cooler-to-cooler bypass valve tube.

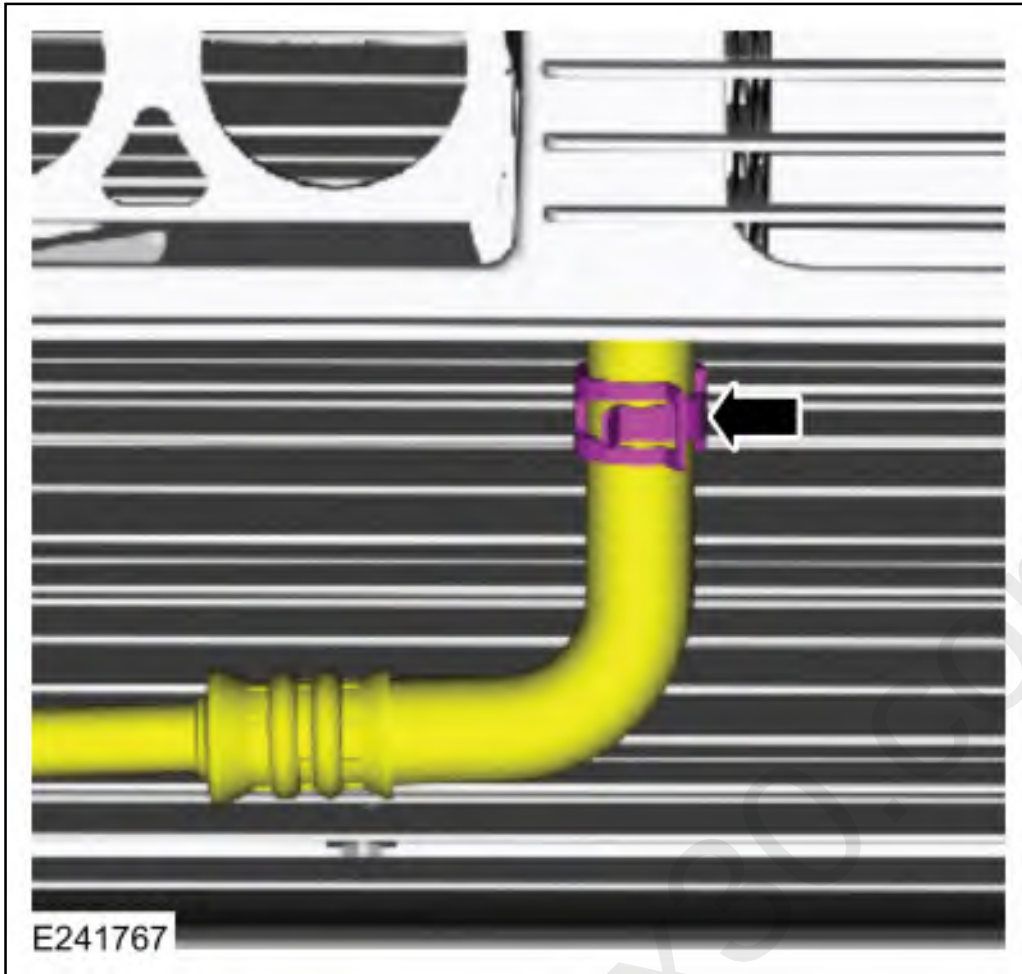

4. Unclip and remove the transmission fluid auxiliary cooler.

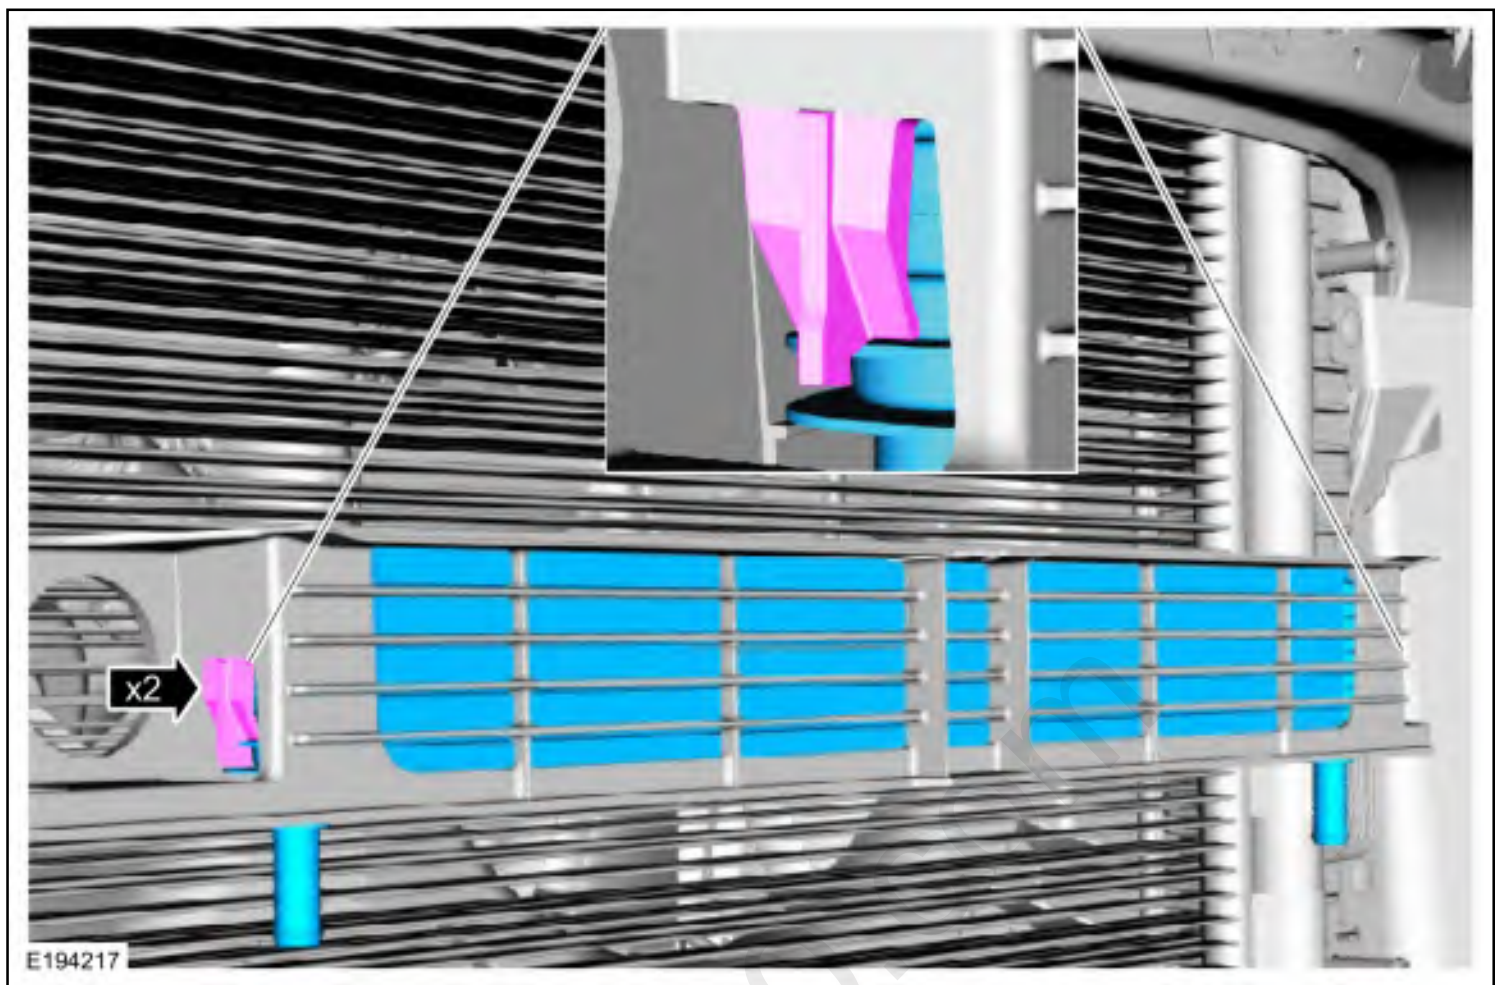

Installation

1. To install, reverse the removal procedure.
2. Check the transmission fluid level and adjust as necessary.
Refer to: [Transmission Fluid Level Check](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, General Procedures).