

Selector Lever Cable Adjustment - 10-Speed Automatic Transmission - 10R80, Vehicles With: Column Shift


Adjustment

1. With the vehicle in N, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Position the selector lever in D.



3. **NOTICE:** To prevent selector lever cable damage, do not apply force to the selector lever cable between the manual control lever and the selector lever cable bracket.

Disconnect the selector lever cable from the manual control lever.

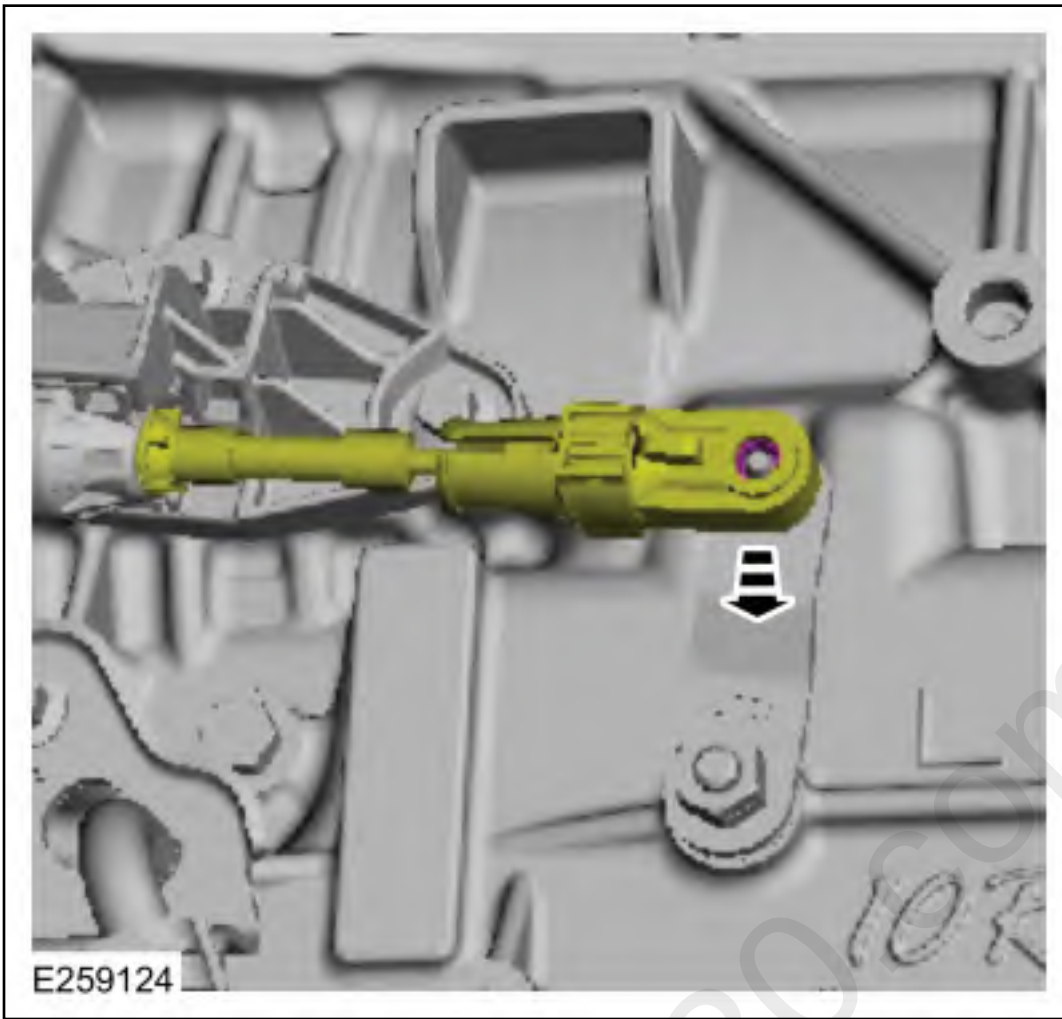


4.

Position the manual lever in D.


1. Rotate the manual lever clockwise until it stops.
2. Rotate the manual lever counterclockwise 3 detents.




5. Unlock the cable adjuster lock.

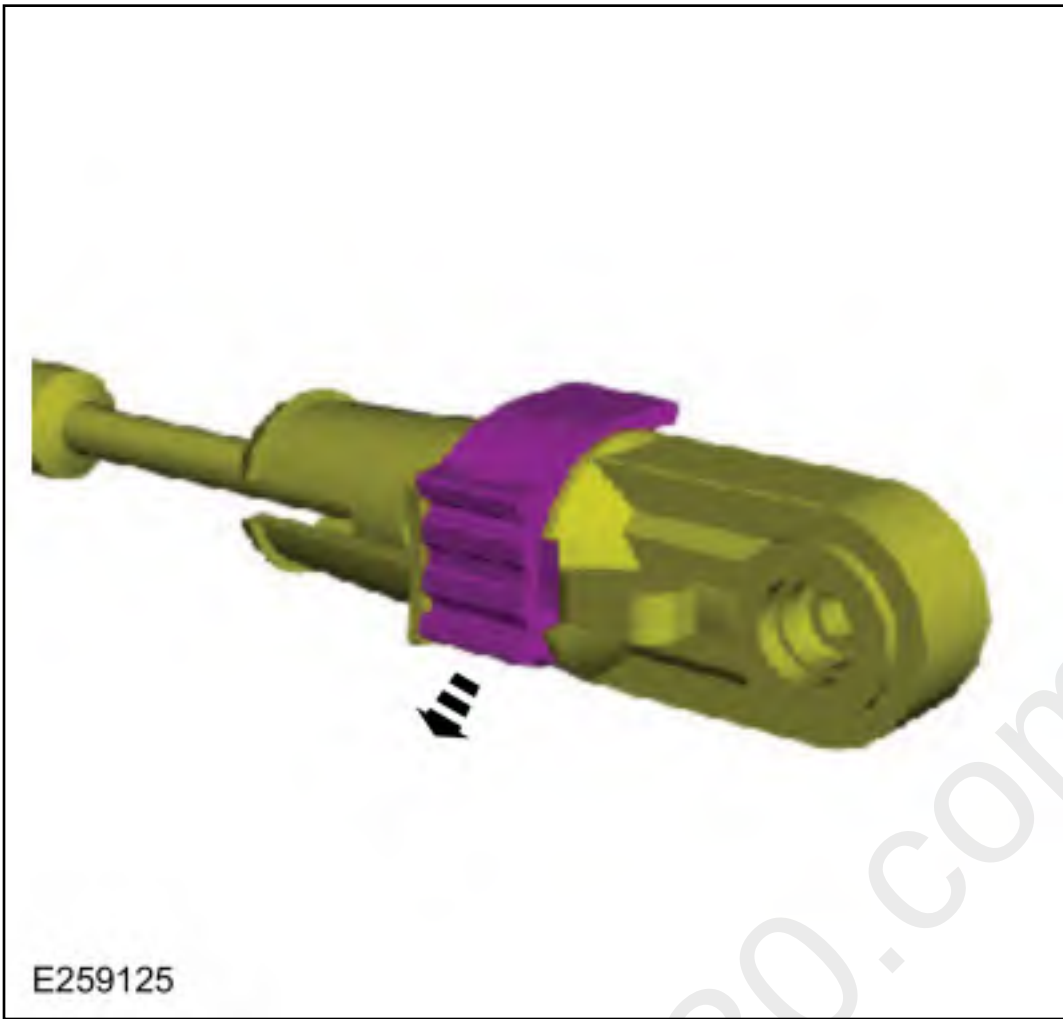

6. Connect the selector lever cable to the manual control lever.

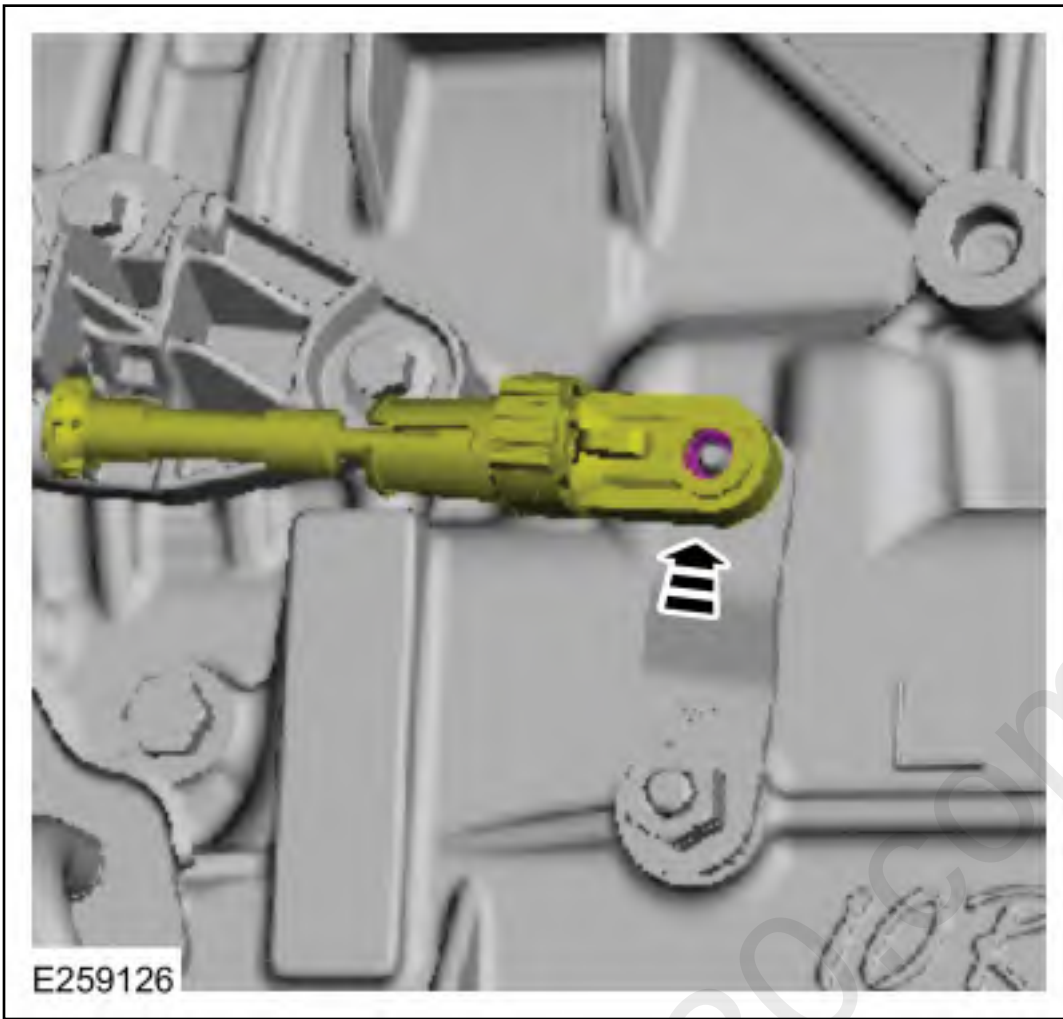

7. Lock the cable adjuster lock.

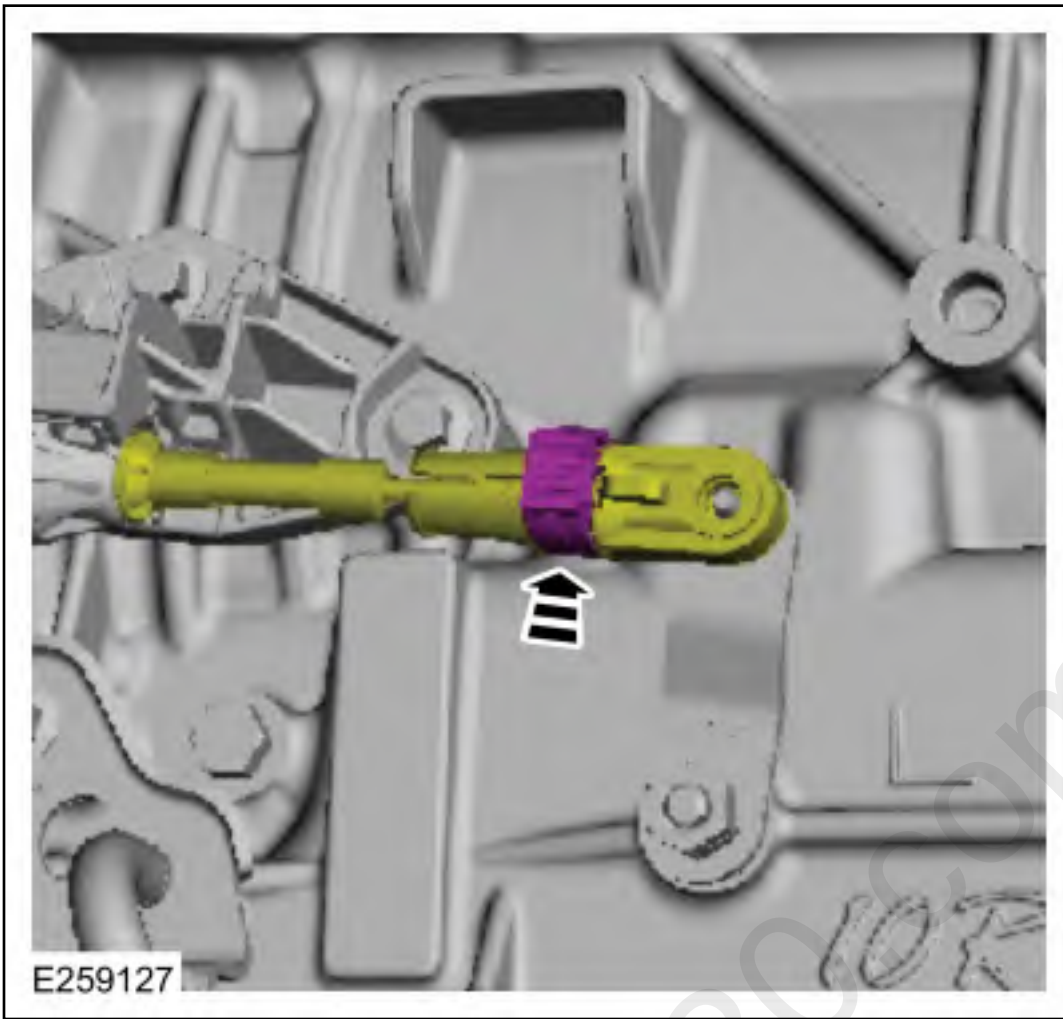

8. Verify the vehicle starts in P and N only and that the reverse lamps illuminate in R.