


Brake Shift Interlock Actuator Manual Override - Vehicles With: Floor Shift

Activation

NOTE: *If it is necessary to use the brake shift interlock actuator override procedure to move the selector lever out of the PARK position, it is possible that a fuse has blown and the brake lights are not operational. Before driving the vehicle, verify the brake lights are working.*

This vehicle is equipped with a brake shift interlock actuator feature that prevents the selector lever from being moved out of the PARK position when the ignition is in the ON position until the brake pedal is applied. If the selector lever cannot be moved out of the PARK position when the ignition is in the ON position and the brake pedal is applied:


1. Fully apply the parking brake.

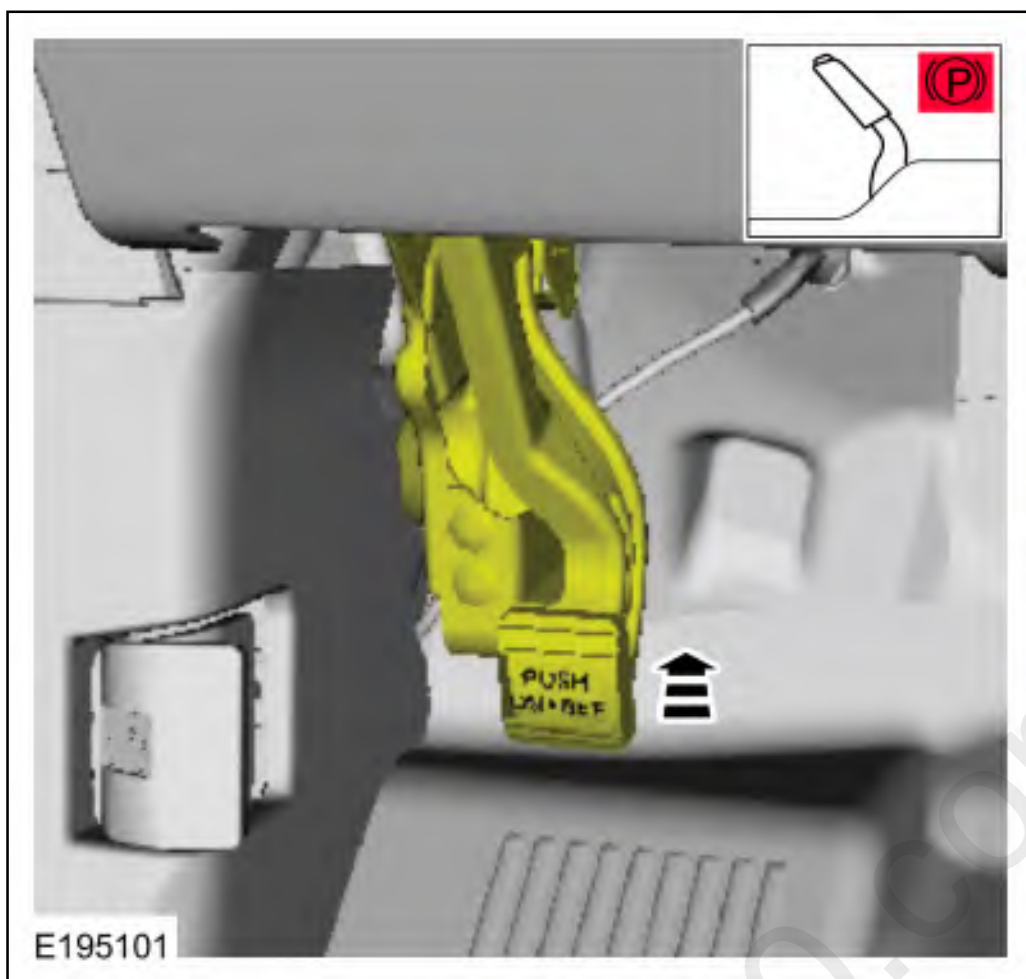


2. Set the ignition switch to the 0 position (ignition off) and remove the key.




3. Remove the rubber insert.

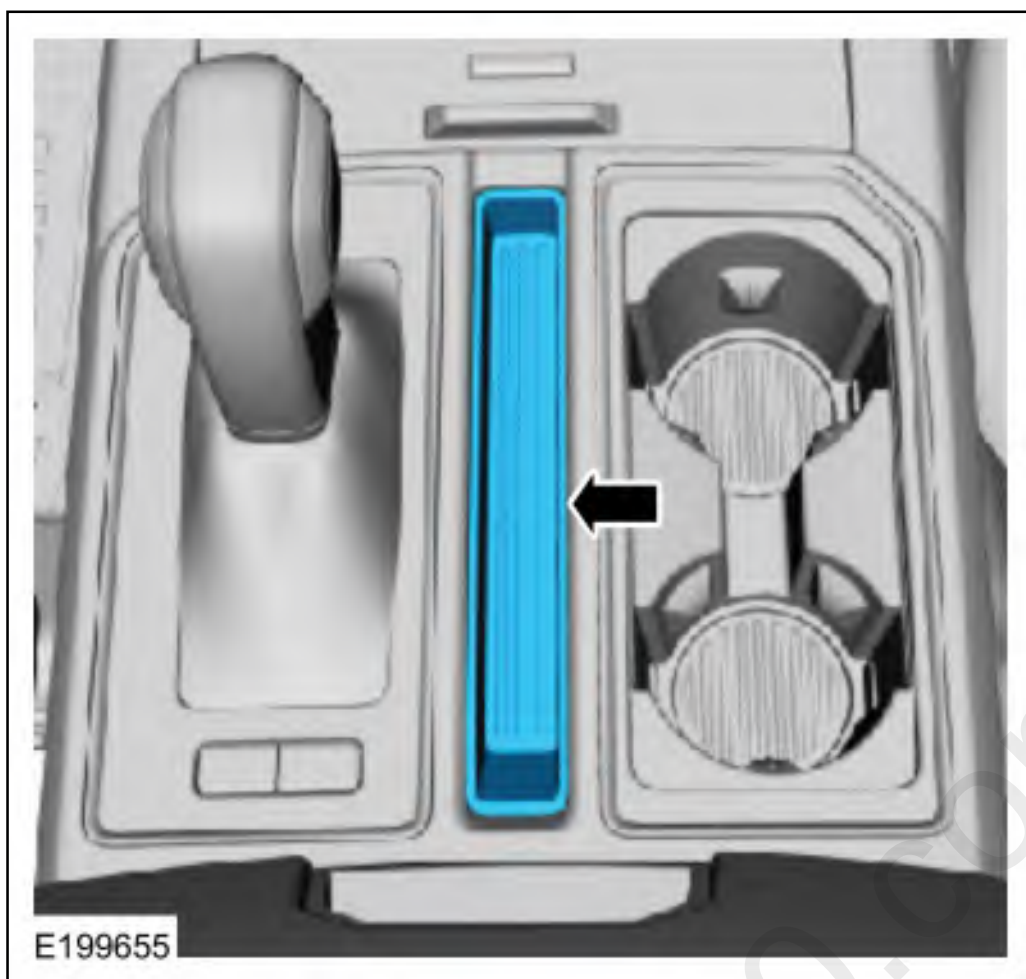


4. Using a small screwdriver, remove the access cover.

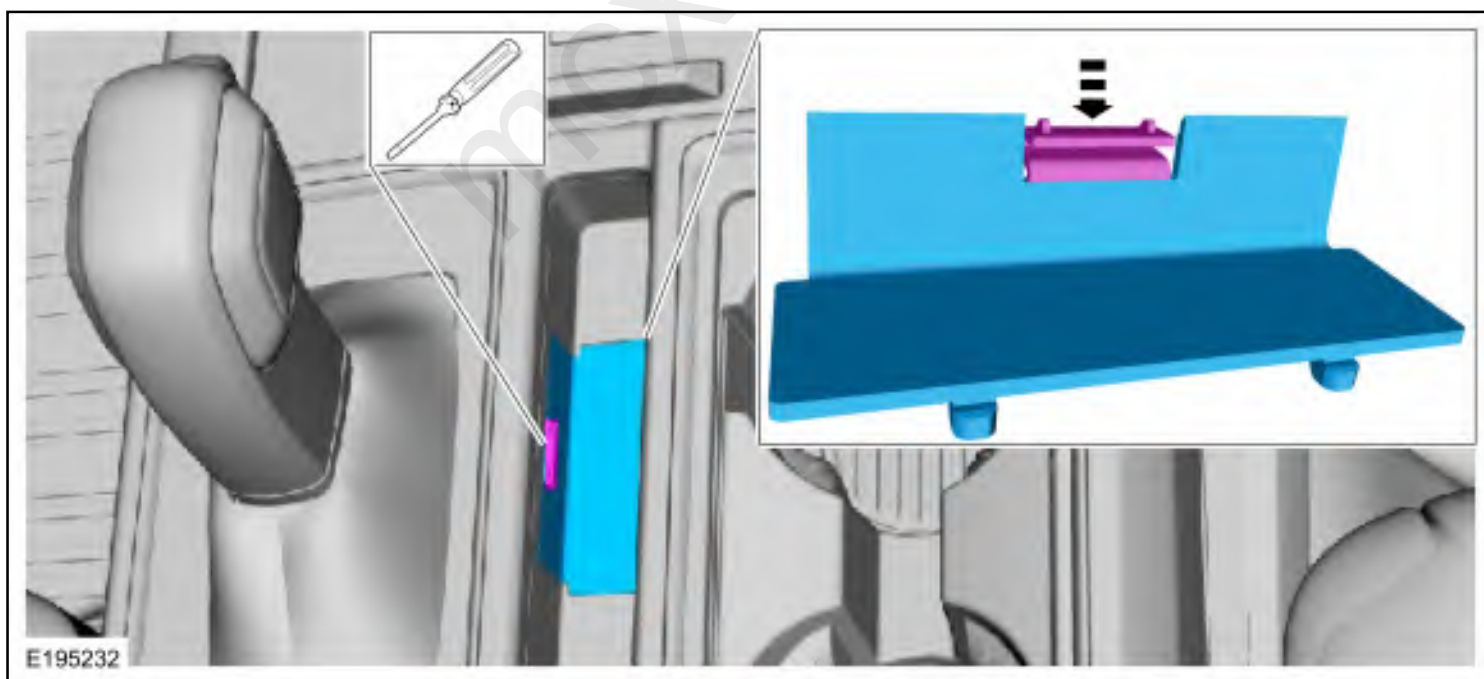


5. Move the brake shift interlock actuator forward, apply the brake pedal and position the selector lever into NEUTRAL.

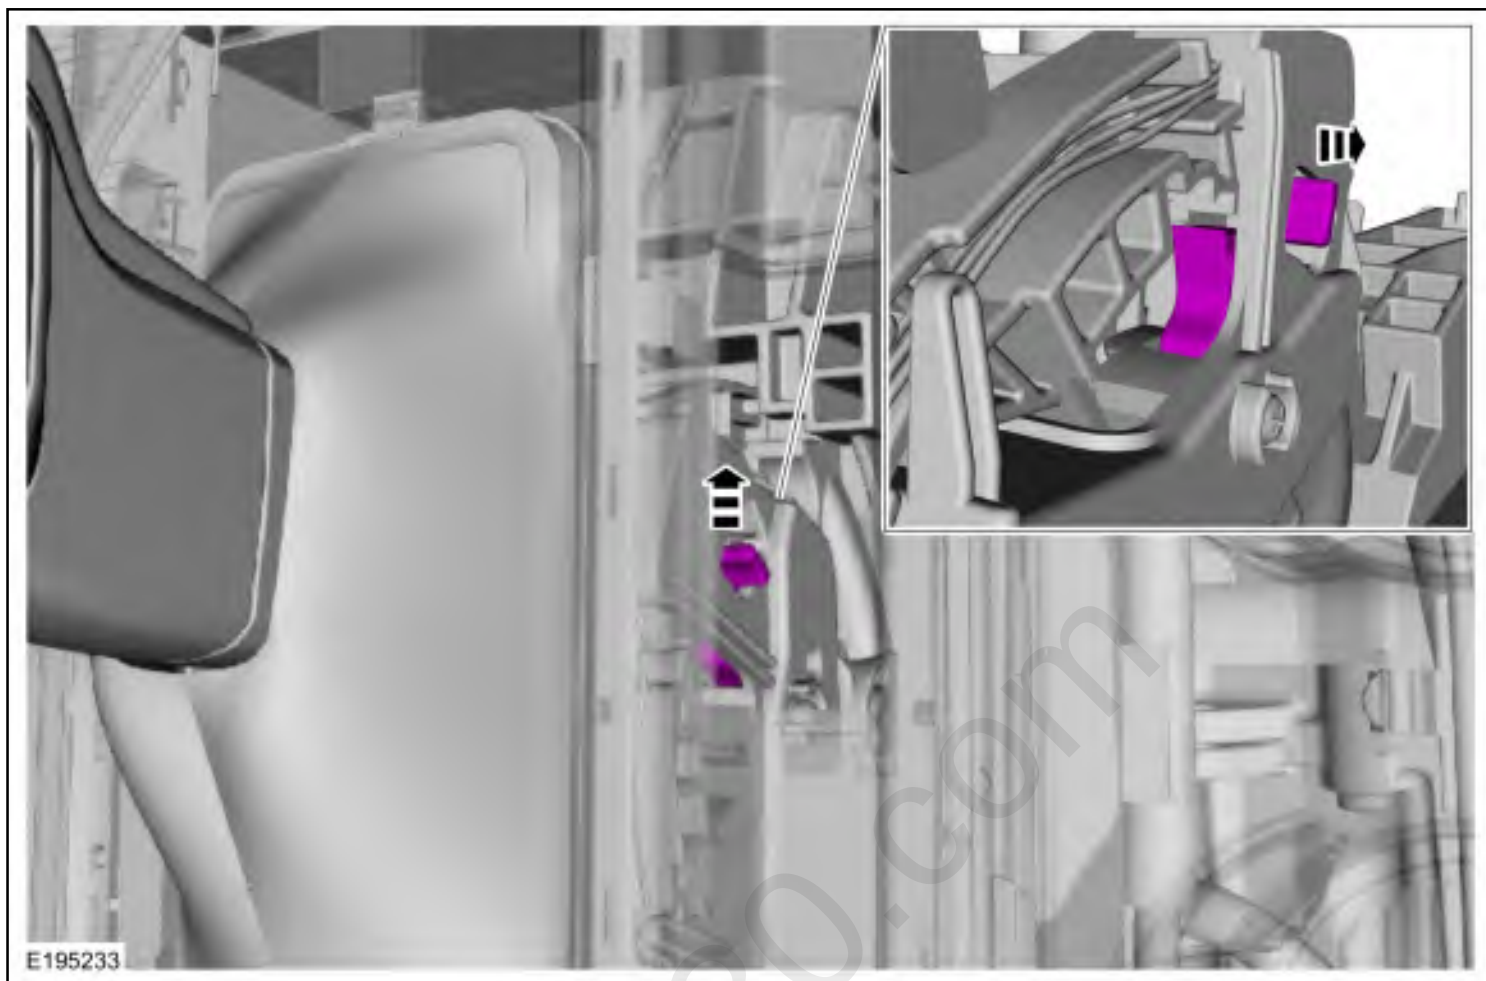

6. Install the access cover.

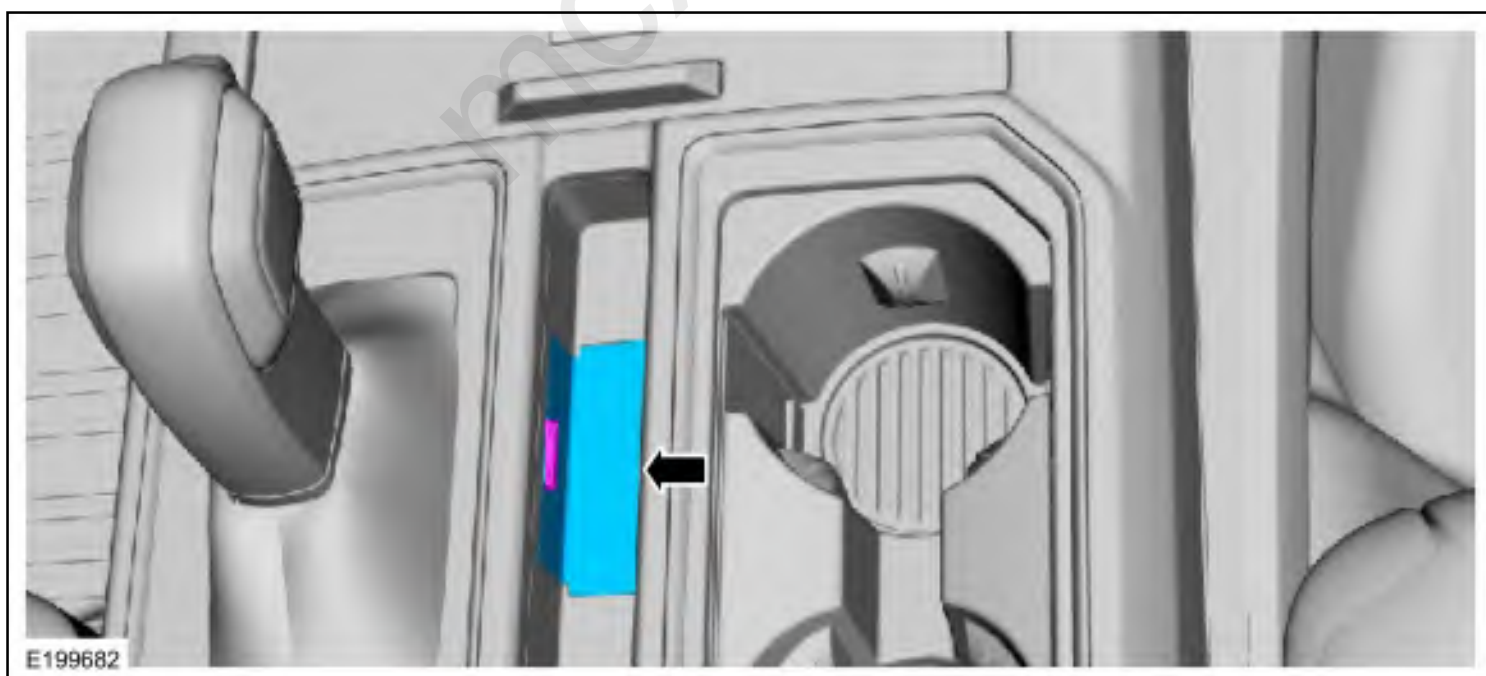

7. Install the rubber insert.

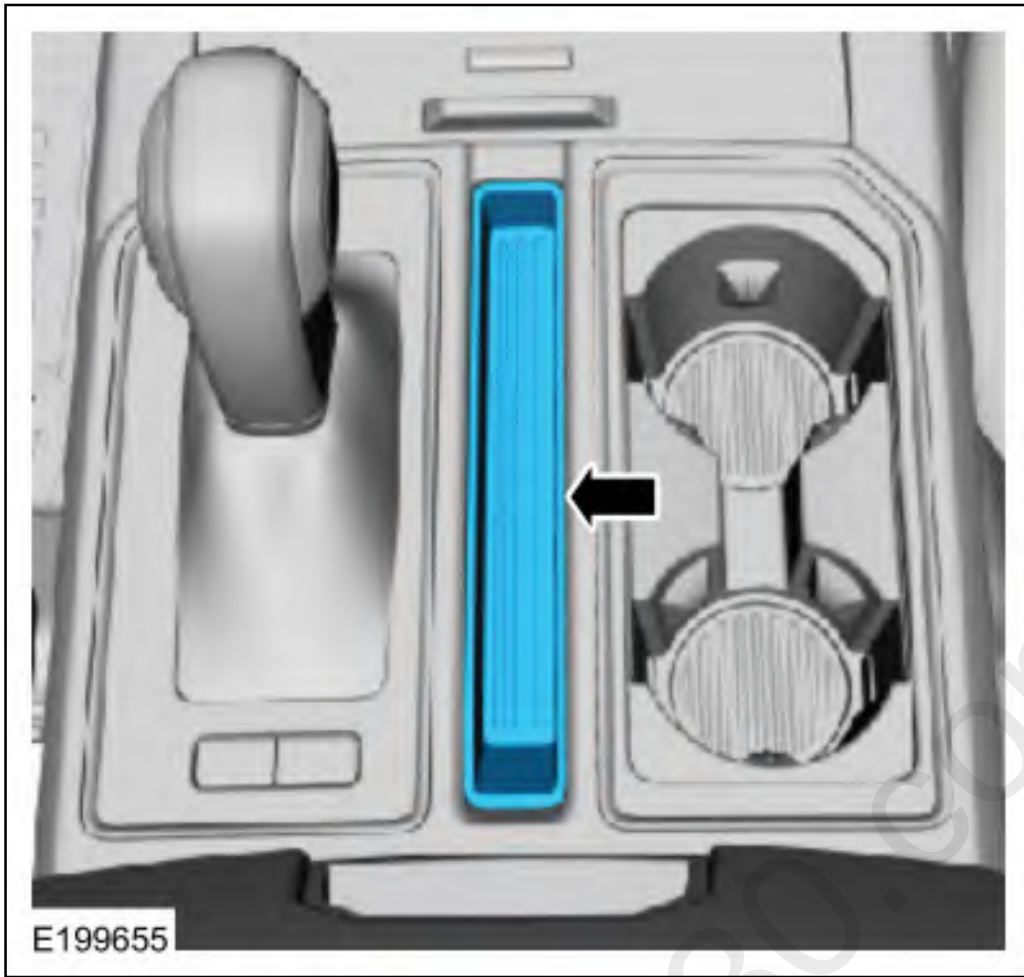

8. Start the vehicle.