


Selector Lever Assembly - Vehicles With: Floor Shift

Base Part Number: Base Part Number: 7K004


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Prior to replacing the selector lever assembly for a no start or high shift effort concern, verify the selector lever cable to bracket clip is fully seated at the transmission and selector lever assembly. Unseated cables can cause selector lever cable binding and prevent the manual shaft from completely returning to the P position.
Torque: 62 lb.in (7 Nm)

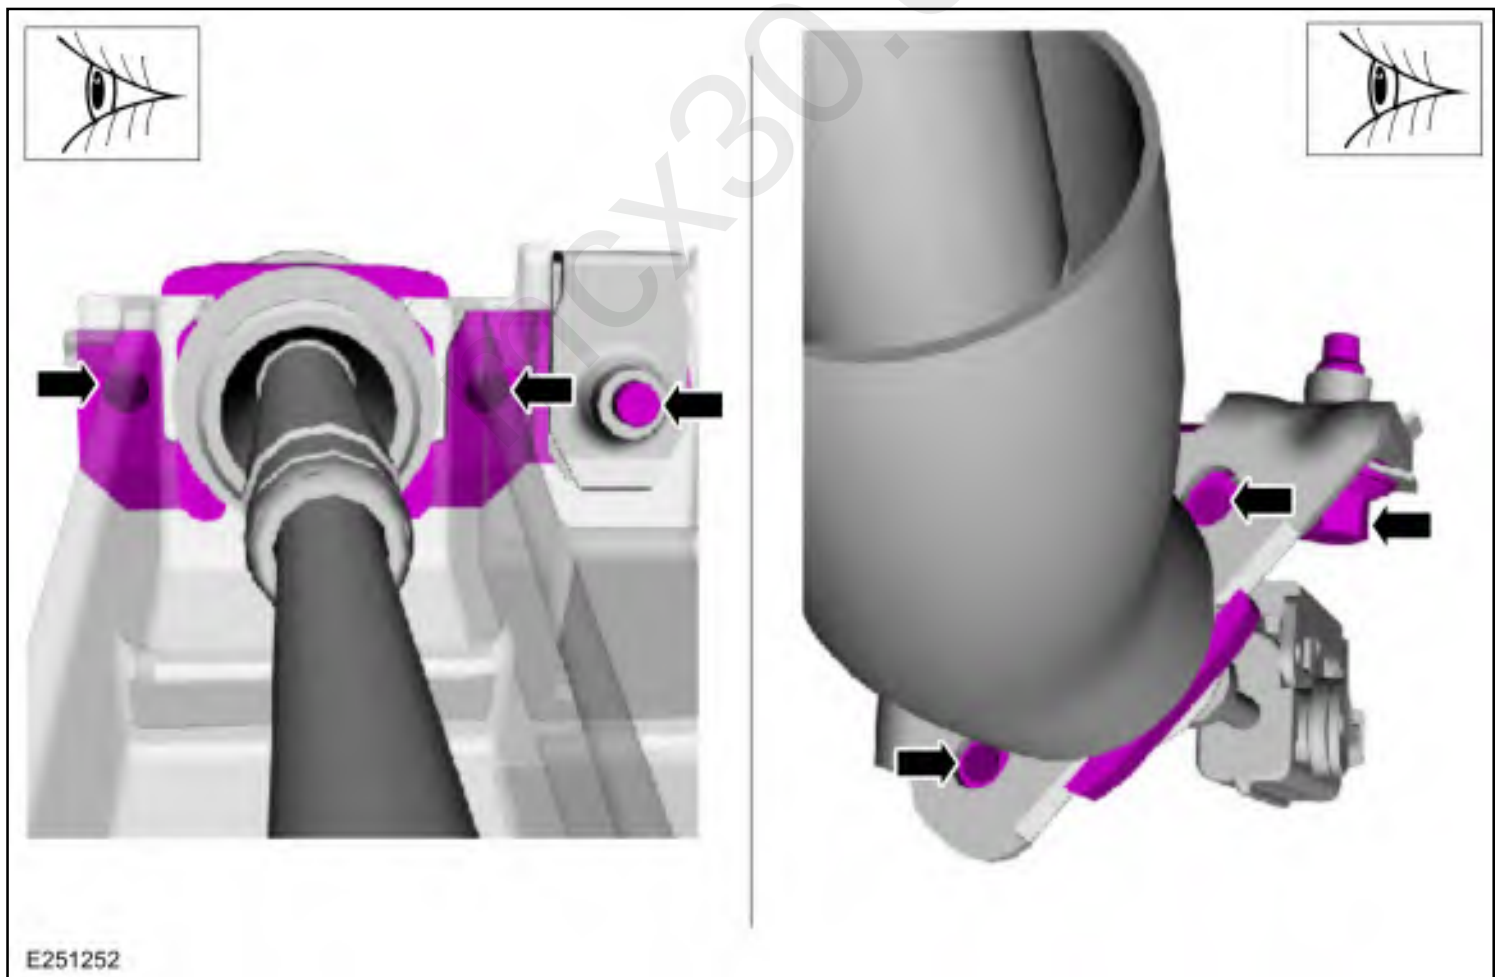

2. Open the console.

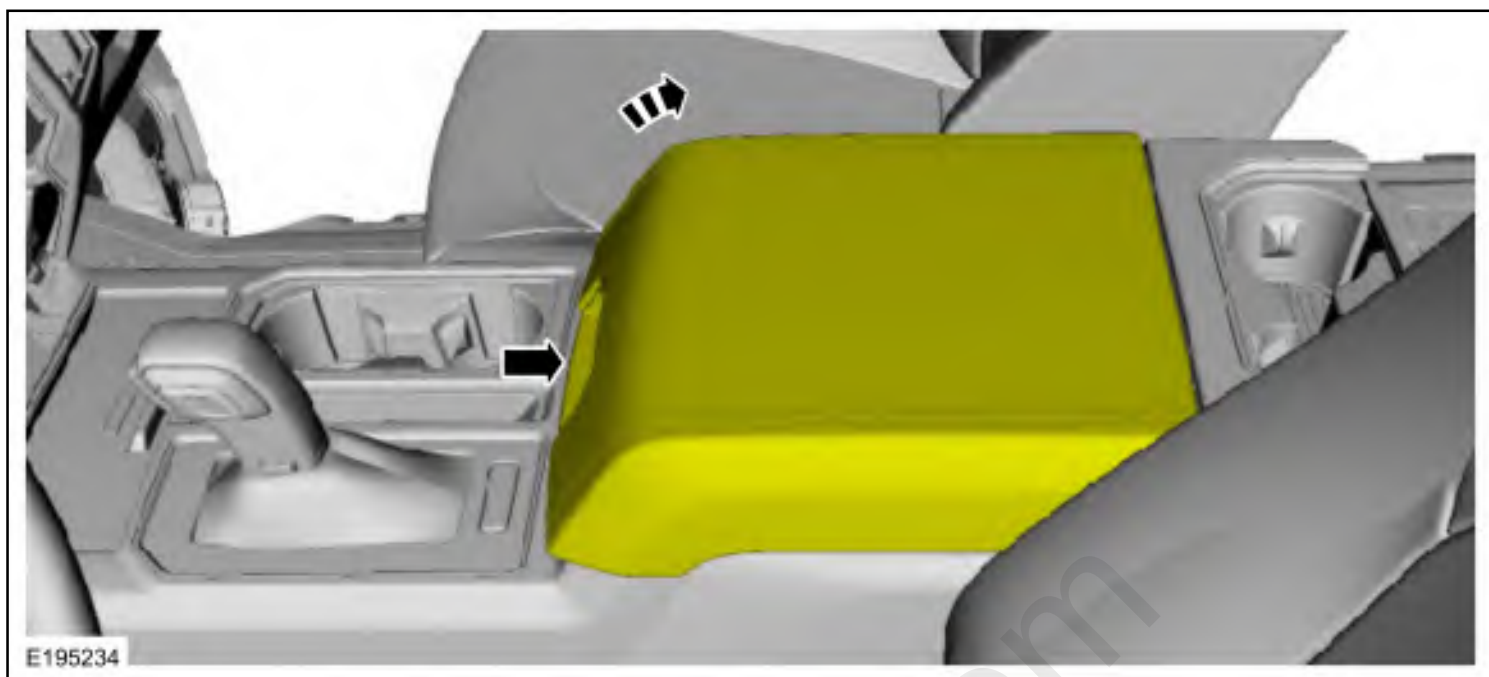


3. Remove the console trim panel.



4.

Remove the selector lever bezel.


1. Remove the screws and lift the bezel to access the selector lever knob boot and the electrical connectors.
2. Release the tabs and disconnect the selector lever knob boot.
3. Disconnect the electrical connectors.

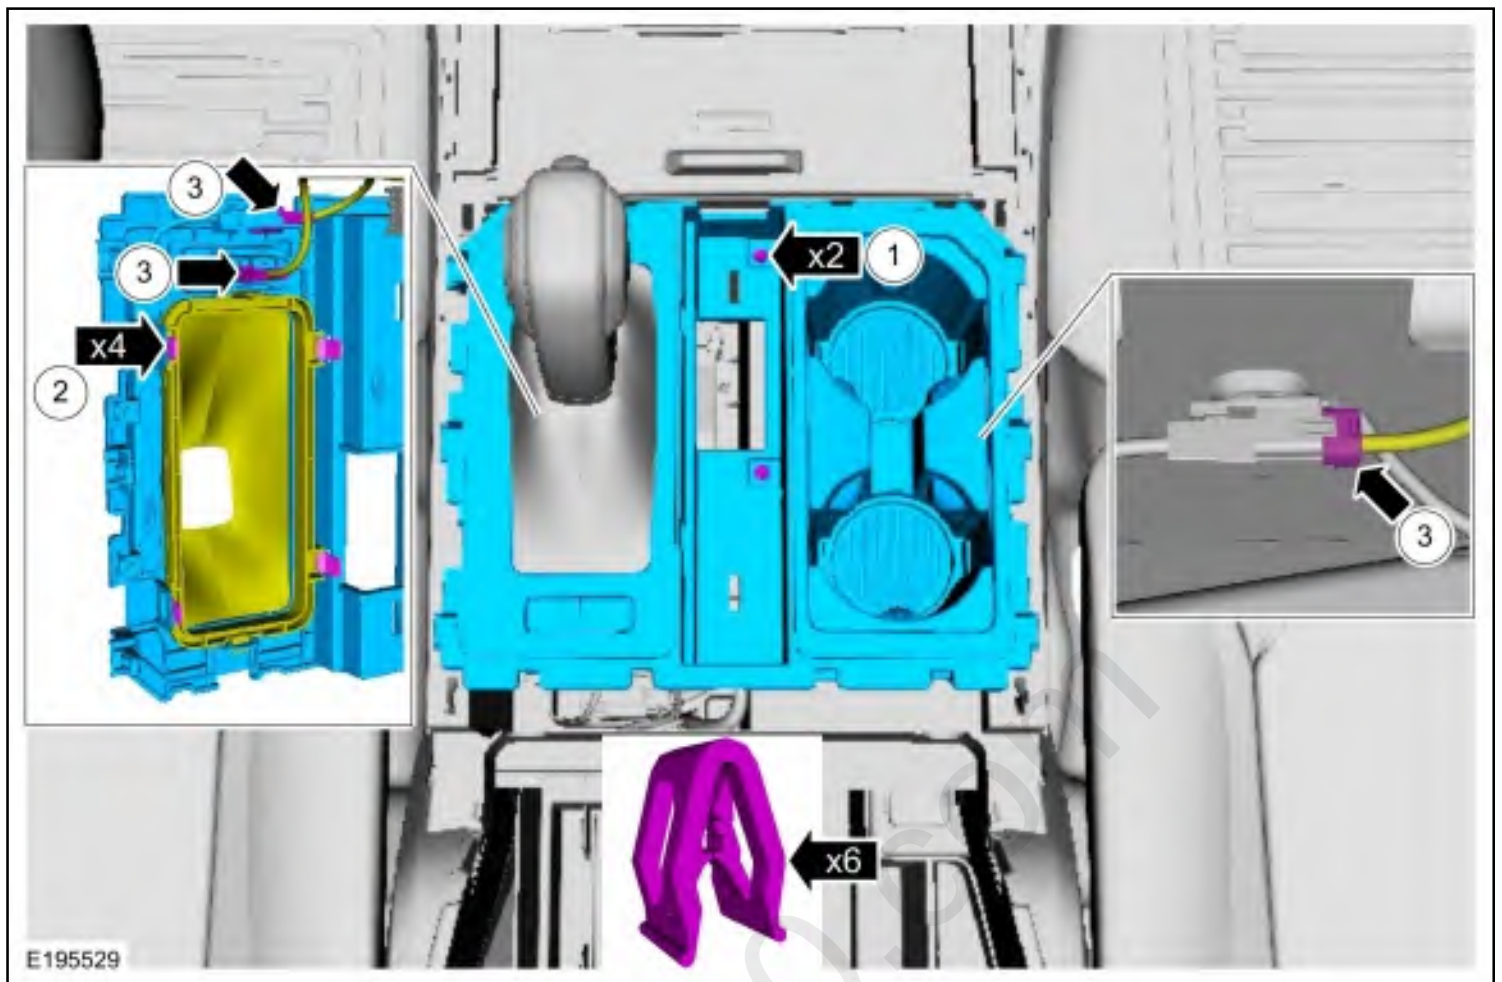


5. **NOTICE:** Moving the selector lever may unseat the selector lever cable grommet. Make sure the grommet is correctly seated during installation.

Remove the selector lever assembly bolts and move the selector lever rearward to access the selector lever cable bolt.

Torque: 89 lb.in (10 Nm)

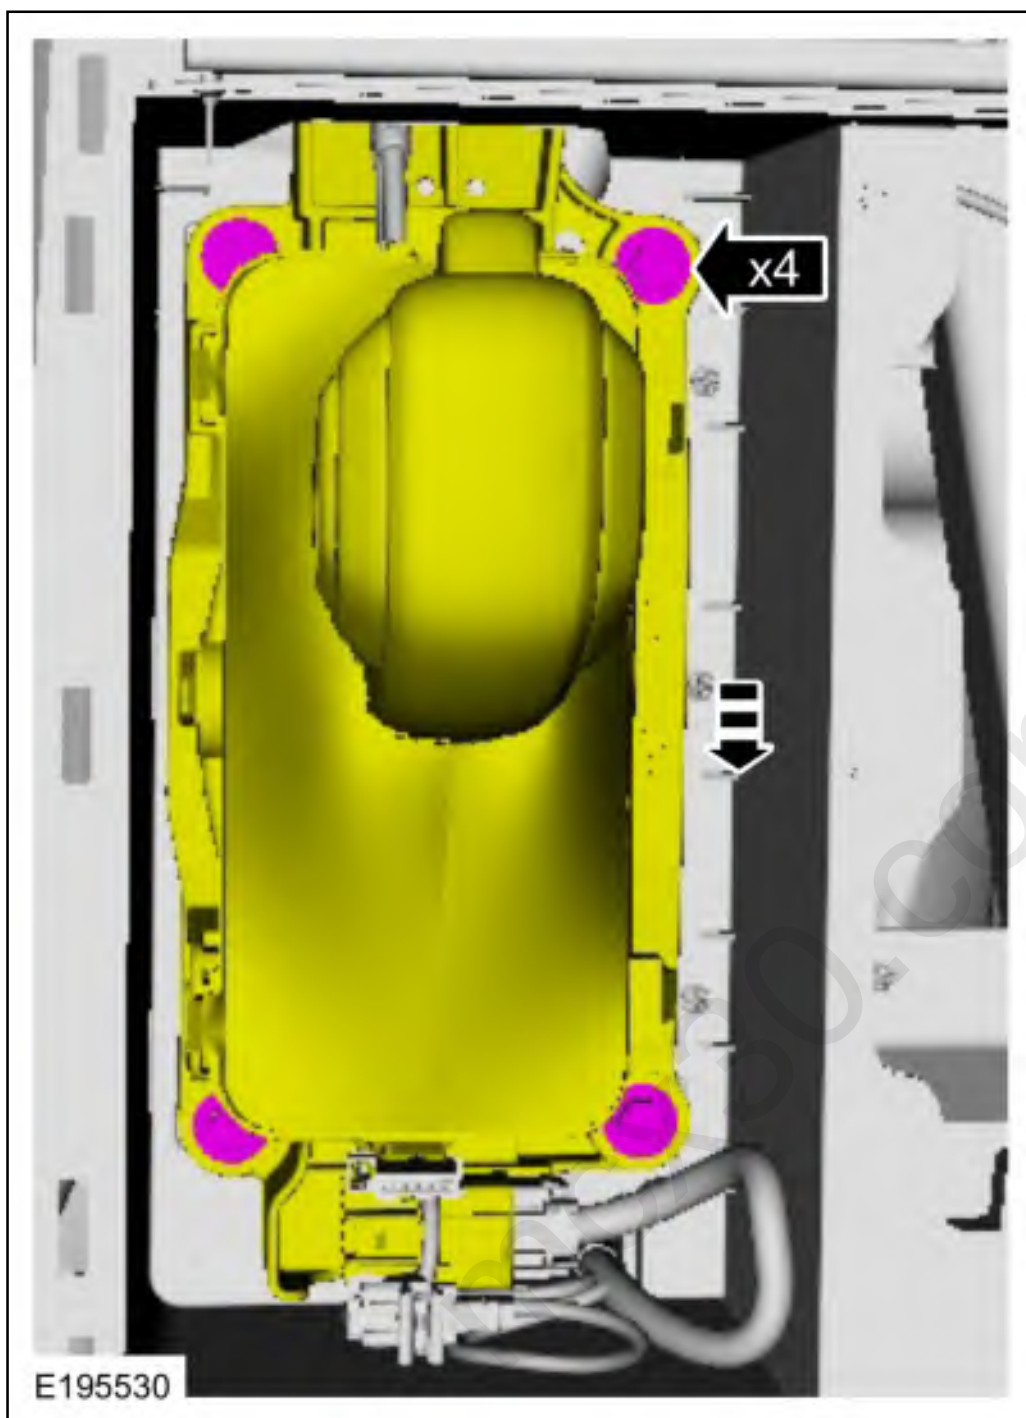


6. Remove the selector lever cable retainer bolt.
Torque: 62 lb.in (7 Nm)

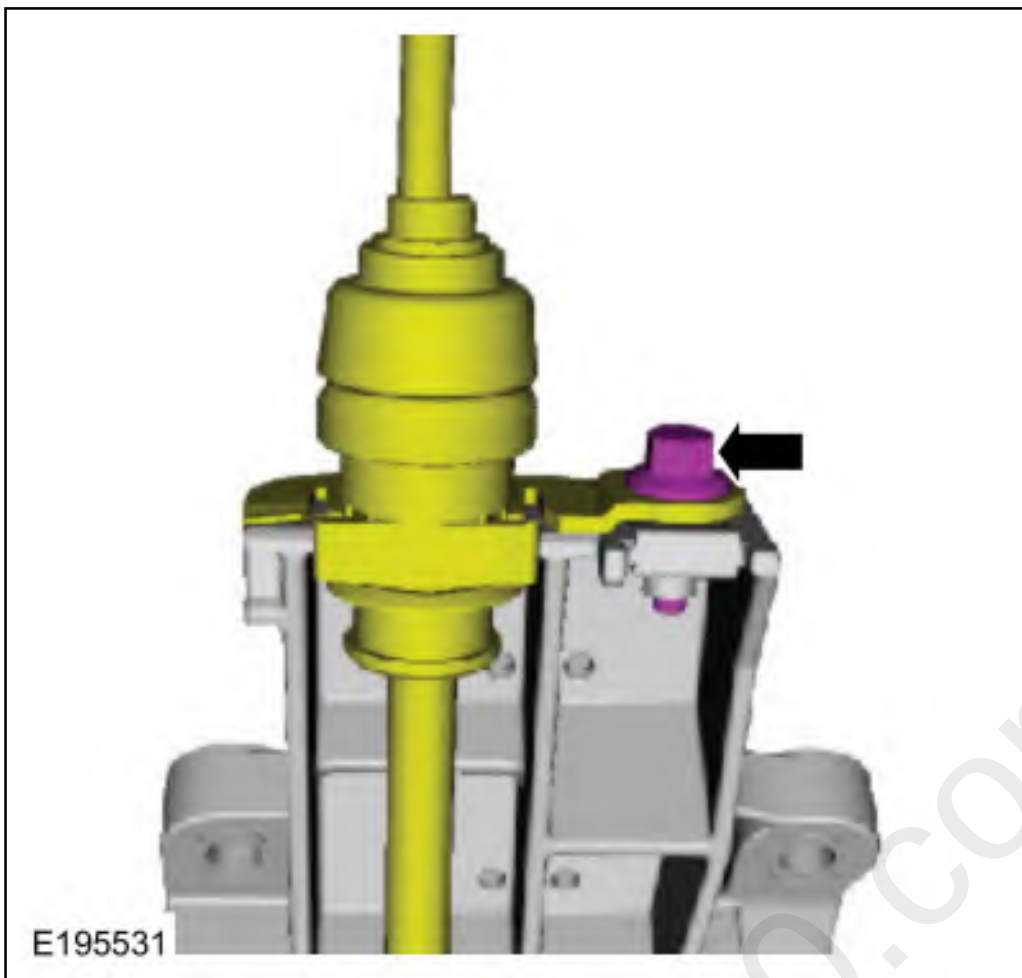


7. **NOTICE:** Do not pull or pry on the selector lever cable or the selector lever cable end may be damaged. Use a screwdriver and turn the screwdriver as shown to pry the cable end off the post as close to the post as possible.

Using a screwdriver, pry the selector lever cable end from the selector lever and disconnect the selector lever cable clip from the selector lever assembly.

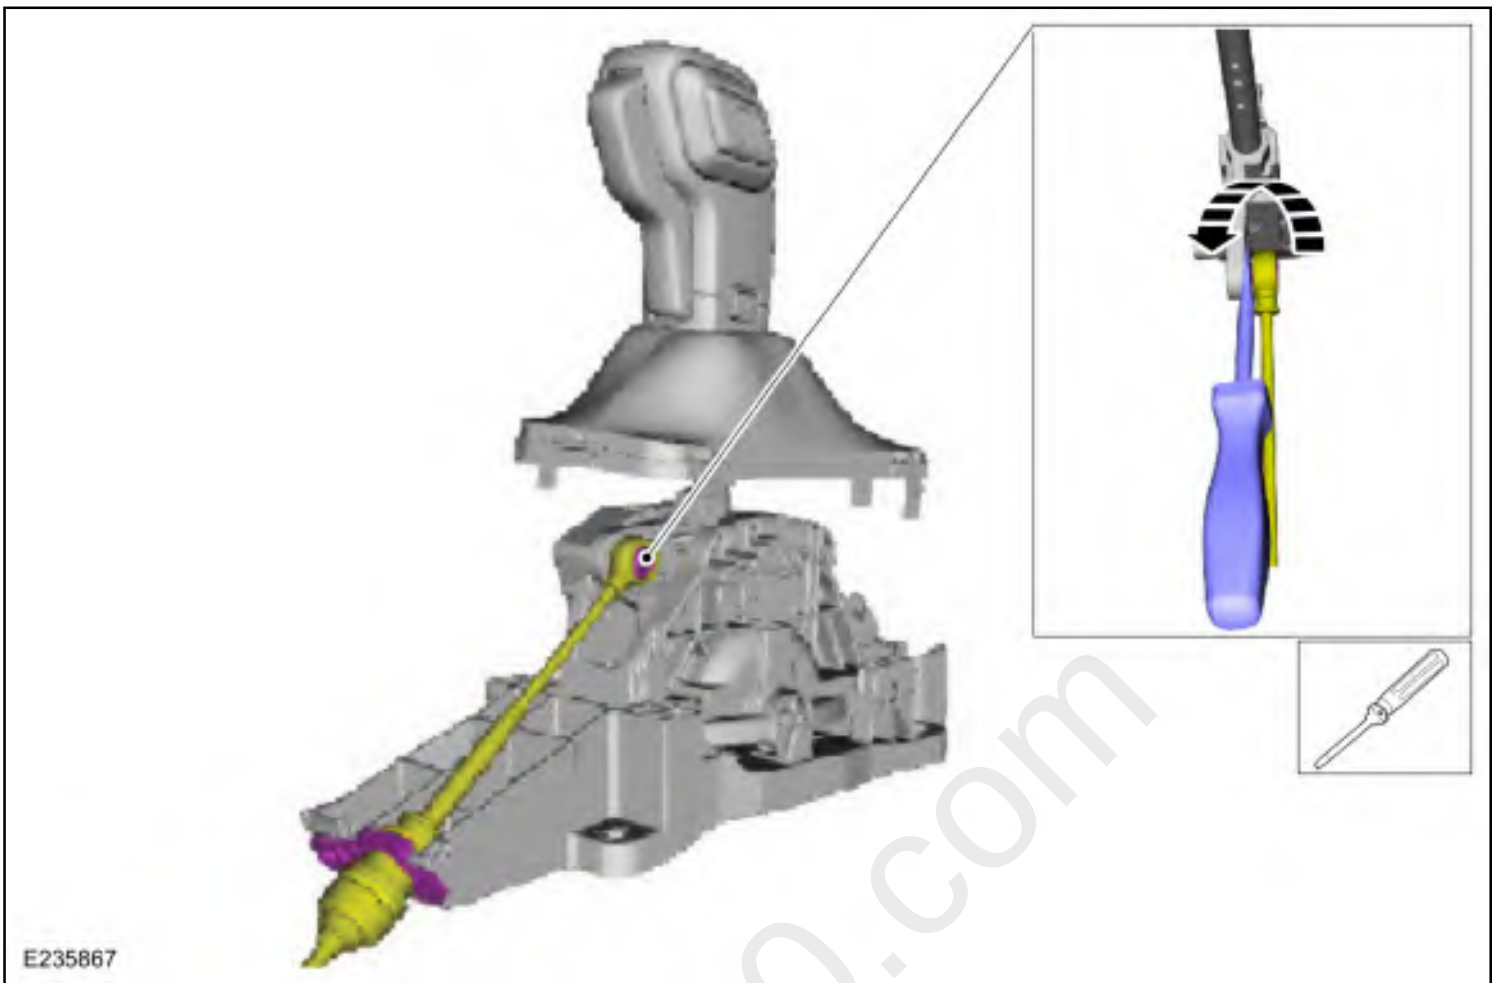

8. Disconnect the electrical connector and remove the selector lever assembly.

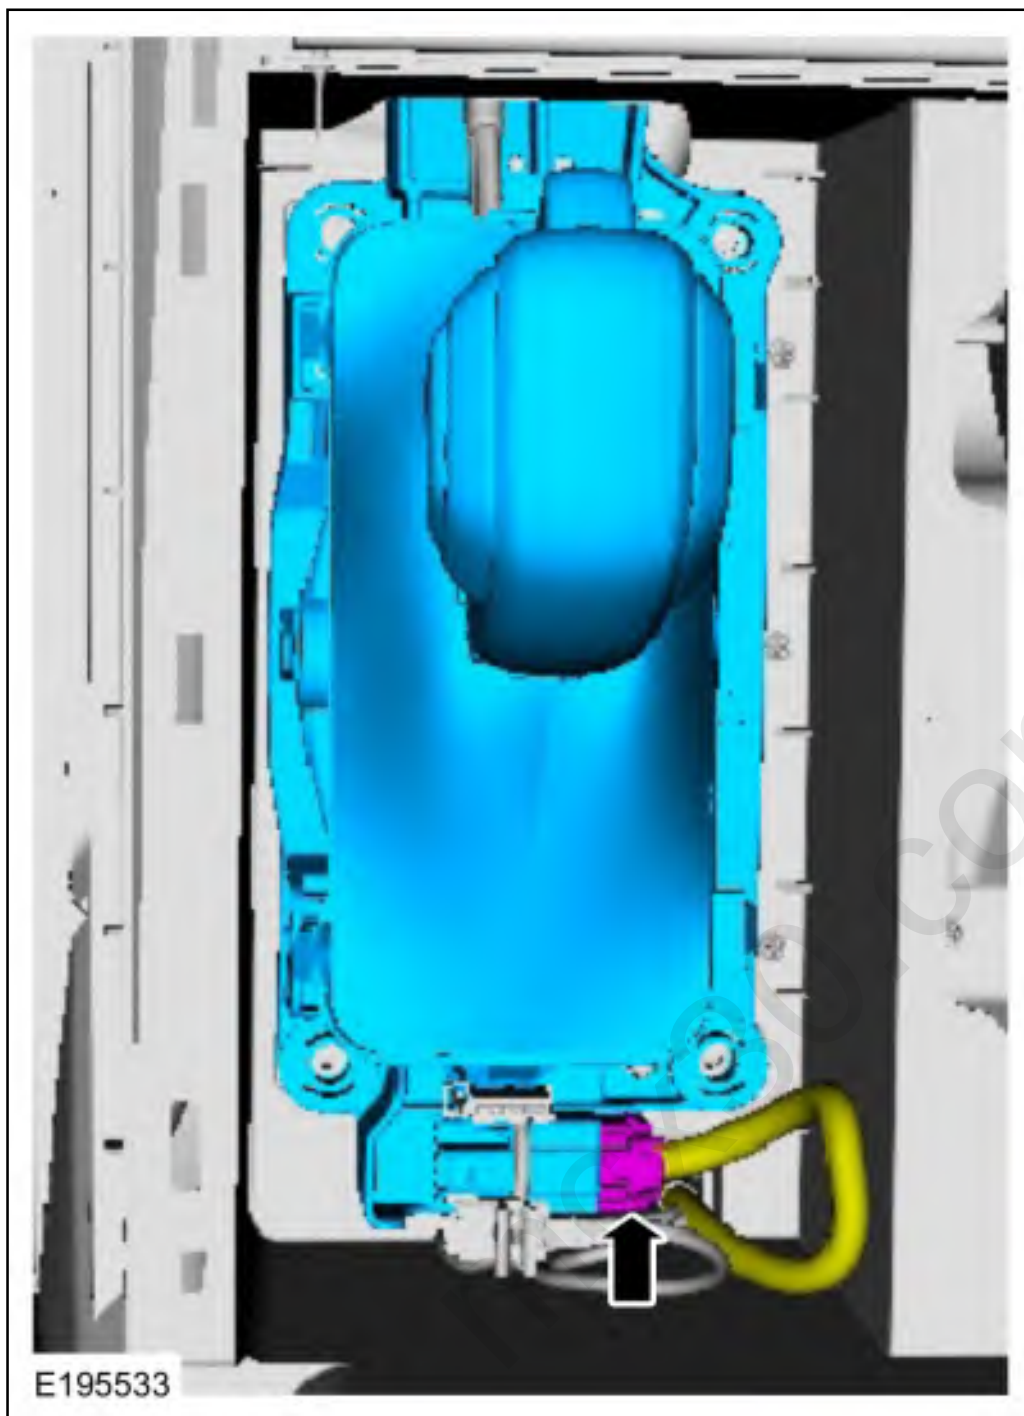

Installation


1. To install, reverse the removal procedure.
2. **NOTE:** *Verify correct grommet seating after cable adjustment before lowering the vehicle.*

Adjust the selector lever cable.

Refer to: [Selector Lever Cable Adjustment - 6-Speed Automatic Transmission - 6R80, Vehicles With: Column Shift](#) (307-05 Automatic Transmission External Controls, General Procedures).

3. **NOTICE:** Moving the selector lever may unseat the selector lever cable grommet. Make sure the grommet is correctly seated during installation.

Verify the selector lever cable grommet is correctly seated.

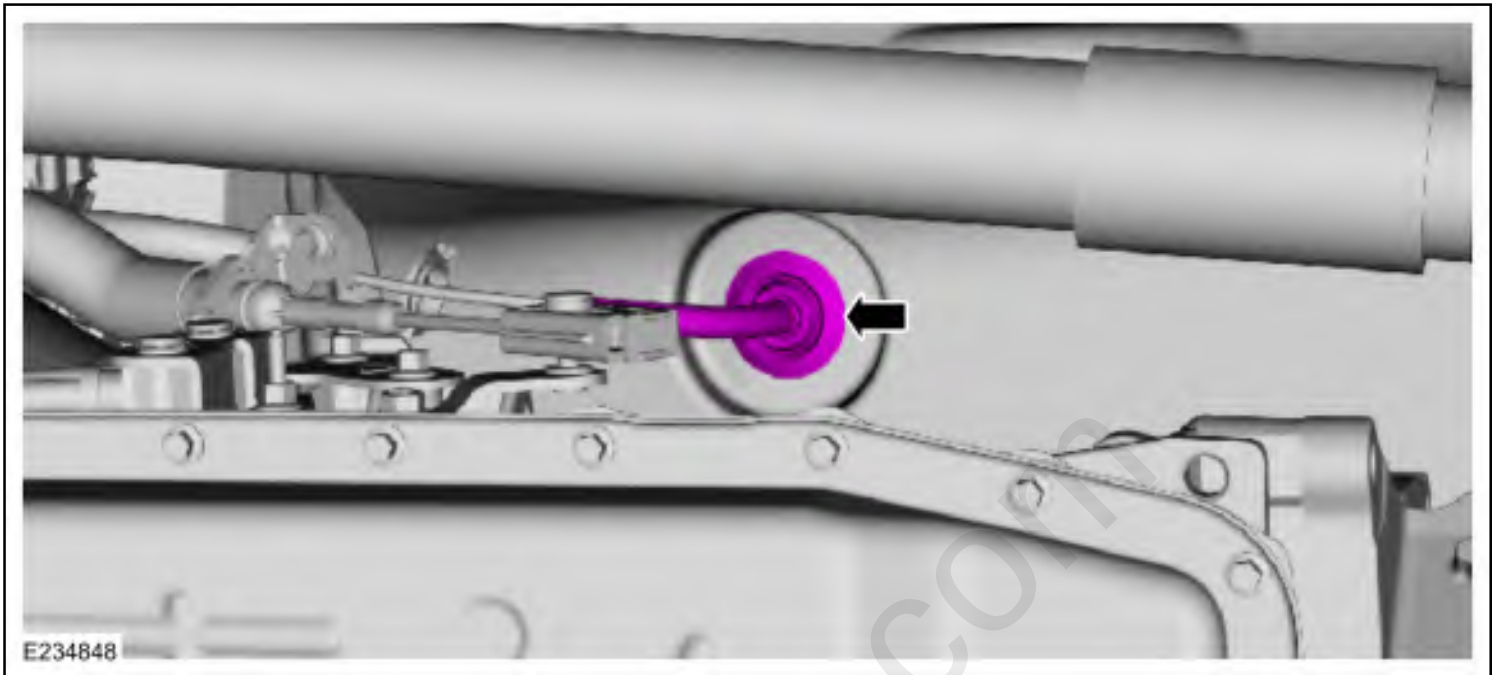

Copyright © 2018 Ford Motor Company