

# Selector Lever Knob

Base Part Number: Base Part Number: 7L010


## Removal

**NOTE:** Removal steps in this procedure may contain installation details.


1. Remove the selector lever bezel.

Refer to: [Selector Lever Bezel](#) (307-05 Automatic Transmission External Controls, Removal and Installation).


2. Shift the selector lever into 1.

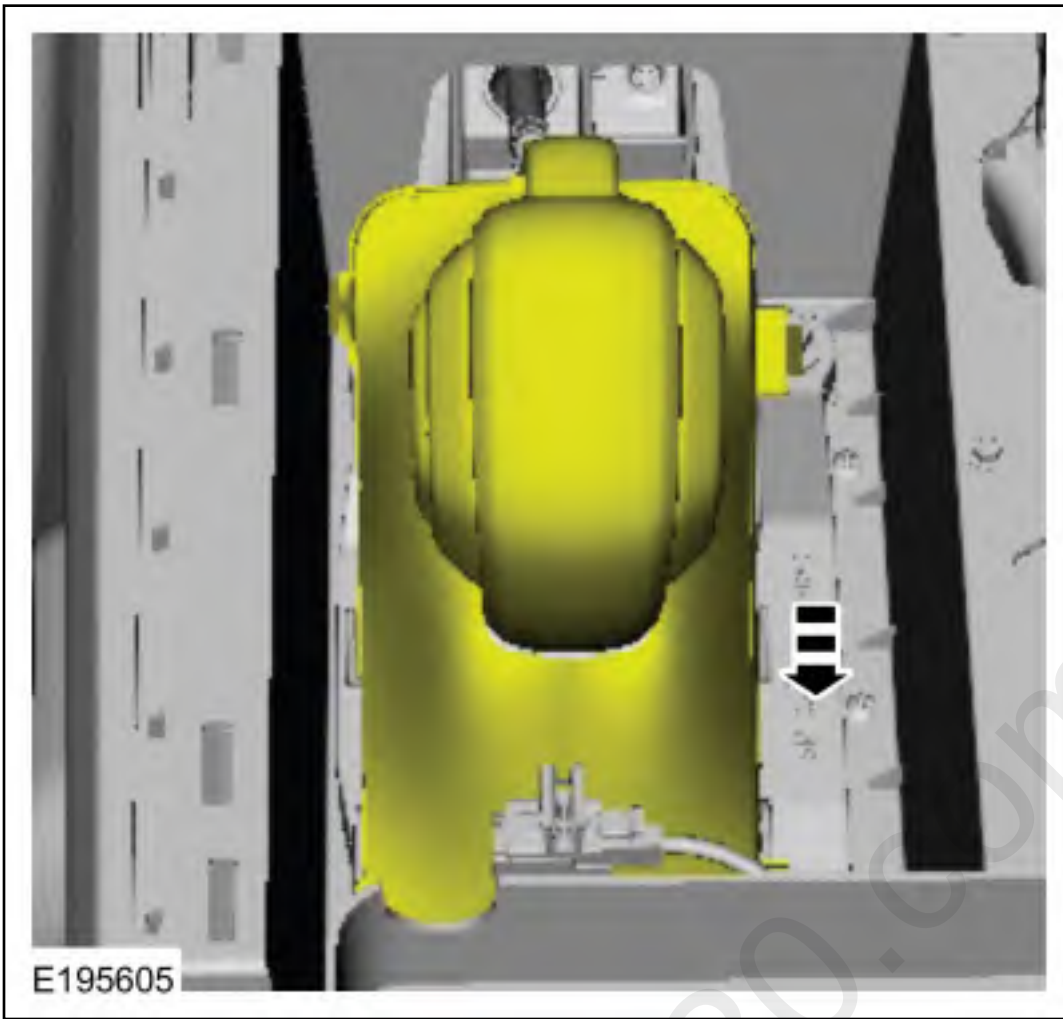

3. Disconnect the electrical connector.

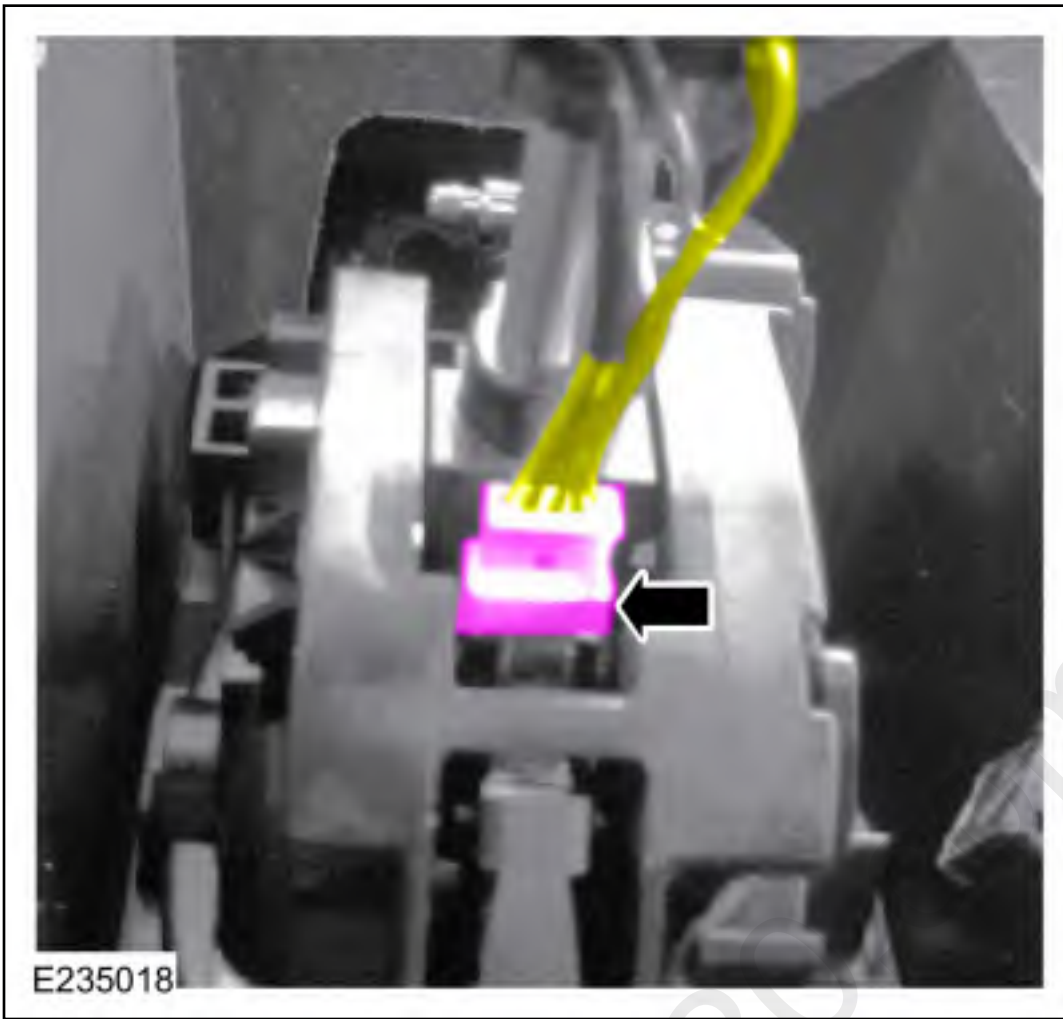

4. Remove the screws and the selector lever knob and boot.

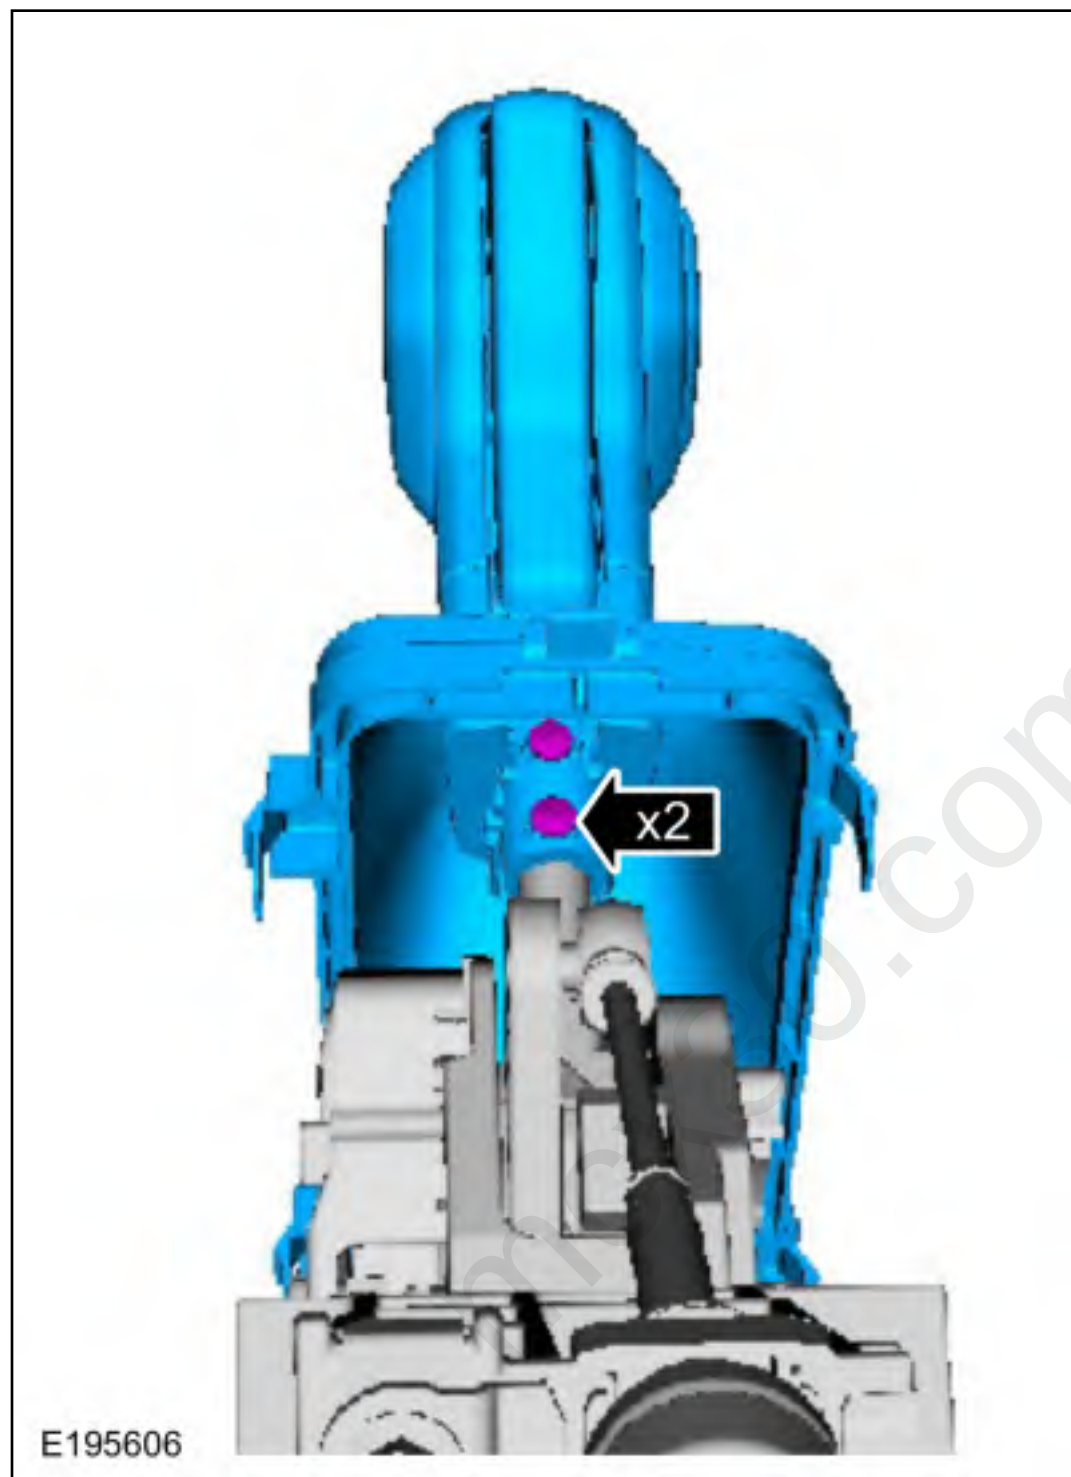

5. Remove the selector lever knob from the boot.



## Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

---