


Selector Lever Cable - 10-Speed Automatic Transmission - 10R80, Vehicles With: Floor Shift

Base Part Number: Base Part Number: 7E395


Removal

1. Remove the floor shift selector lever assembly.
Refer to: [Selector Lever Assembly - Vehicles With: Floor Shift](#) (307-05 Automatic Transmission External Controls, Removal and Installation).
2. Push the rubber grommet and the selector lever cable through the floor pan.

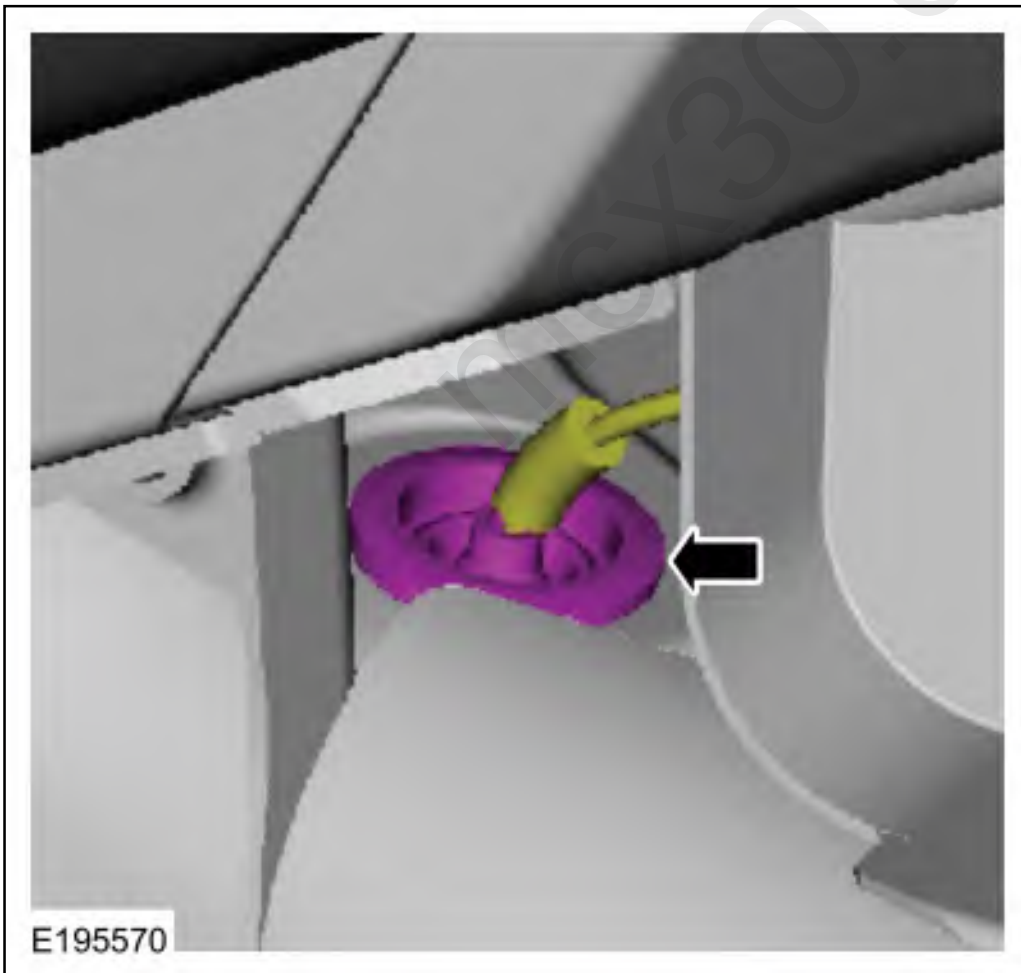


3. **NOTICE:** To prevent selector lever cable damage, do not apply force to the selector lever cable between the manual control lever and the selector lever cable bracket.

Disconnect the selector lever cable from the manual control lever.

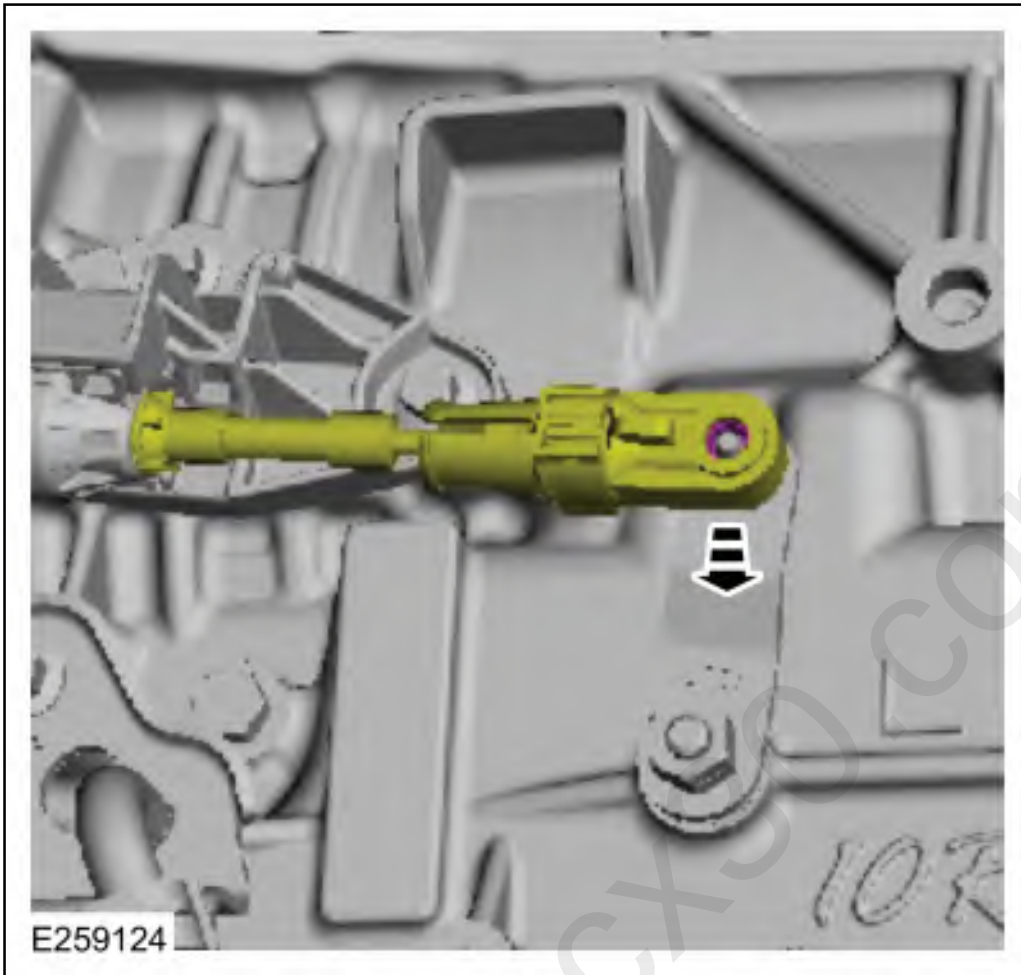


4. Disconnect the selector lever cable from the upper retainer, use a screwdriver to release the selector lever cable retainer and detach the selector lever cable retainer from the bracket, and remove the selector lever cable.

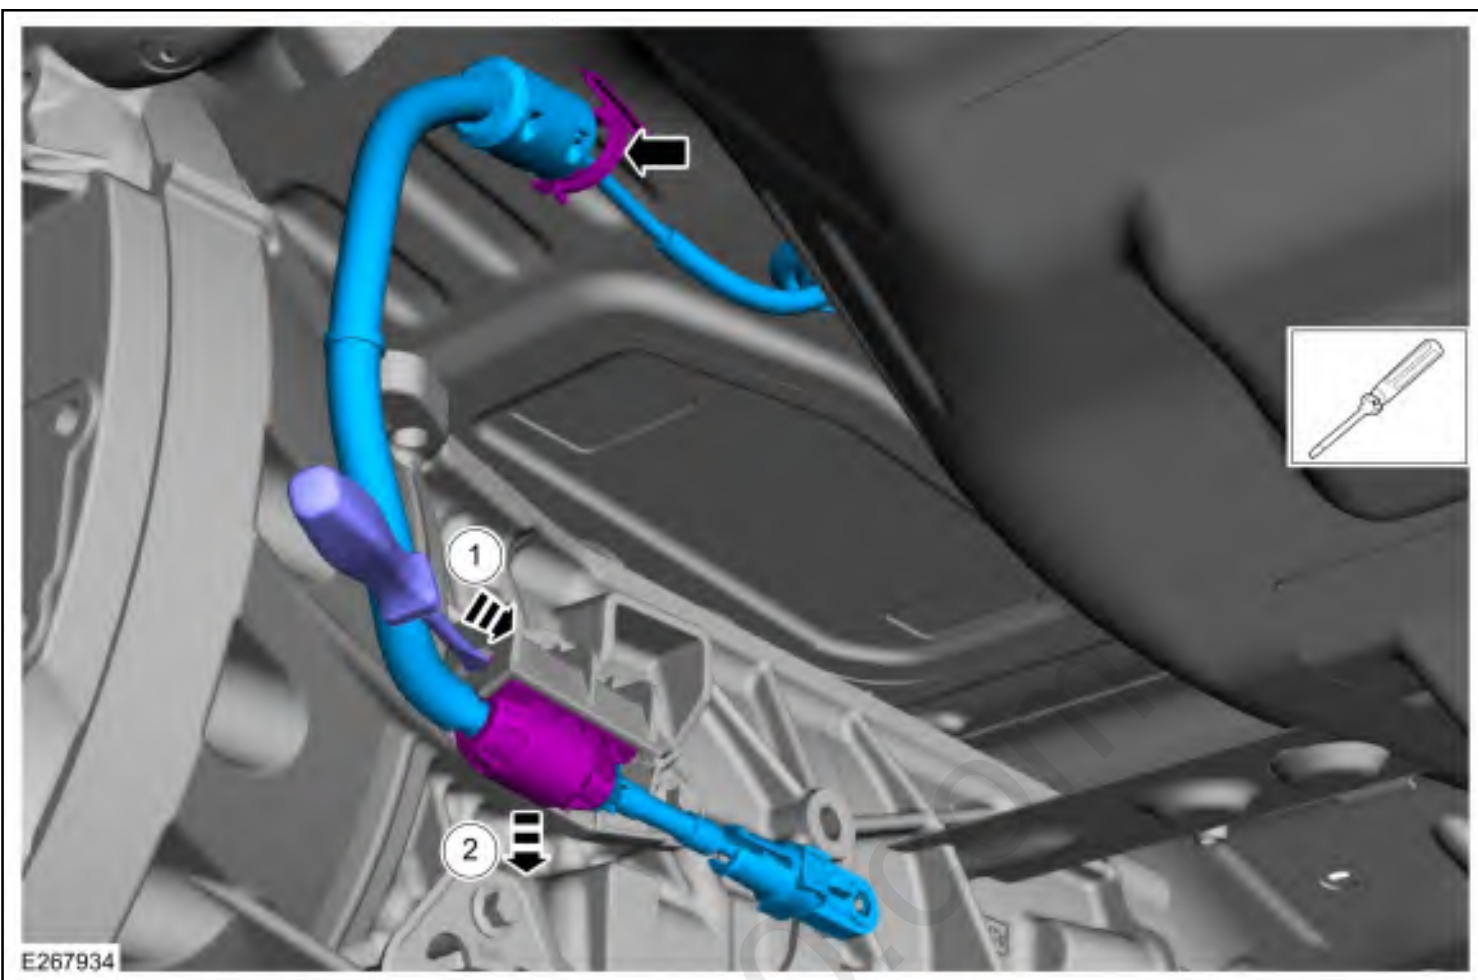


Installation


- 1. Unlock the cable adjuster lock.

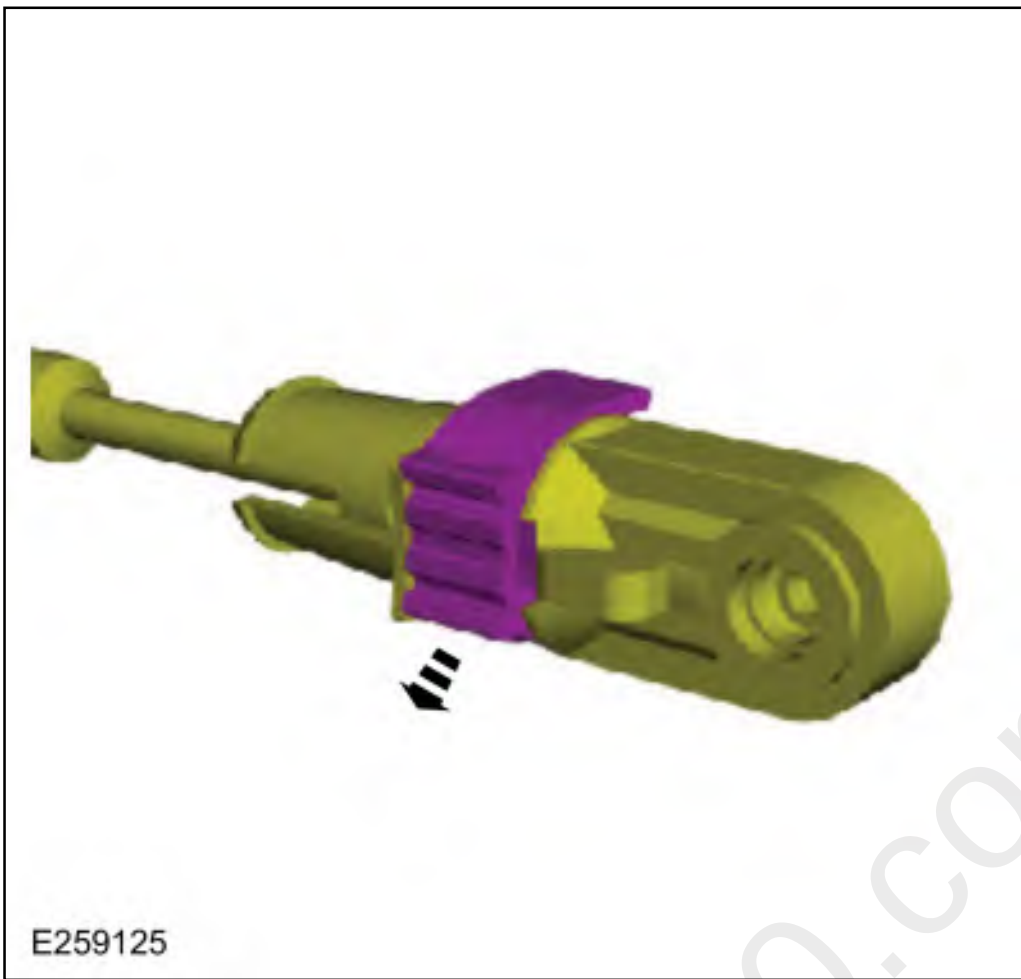

2. Install the selector lever cable, attach the selector lever cable retainer to the bracket and connect the selector lever cable to the upper retainer.

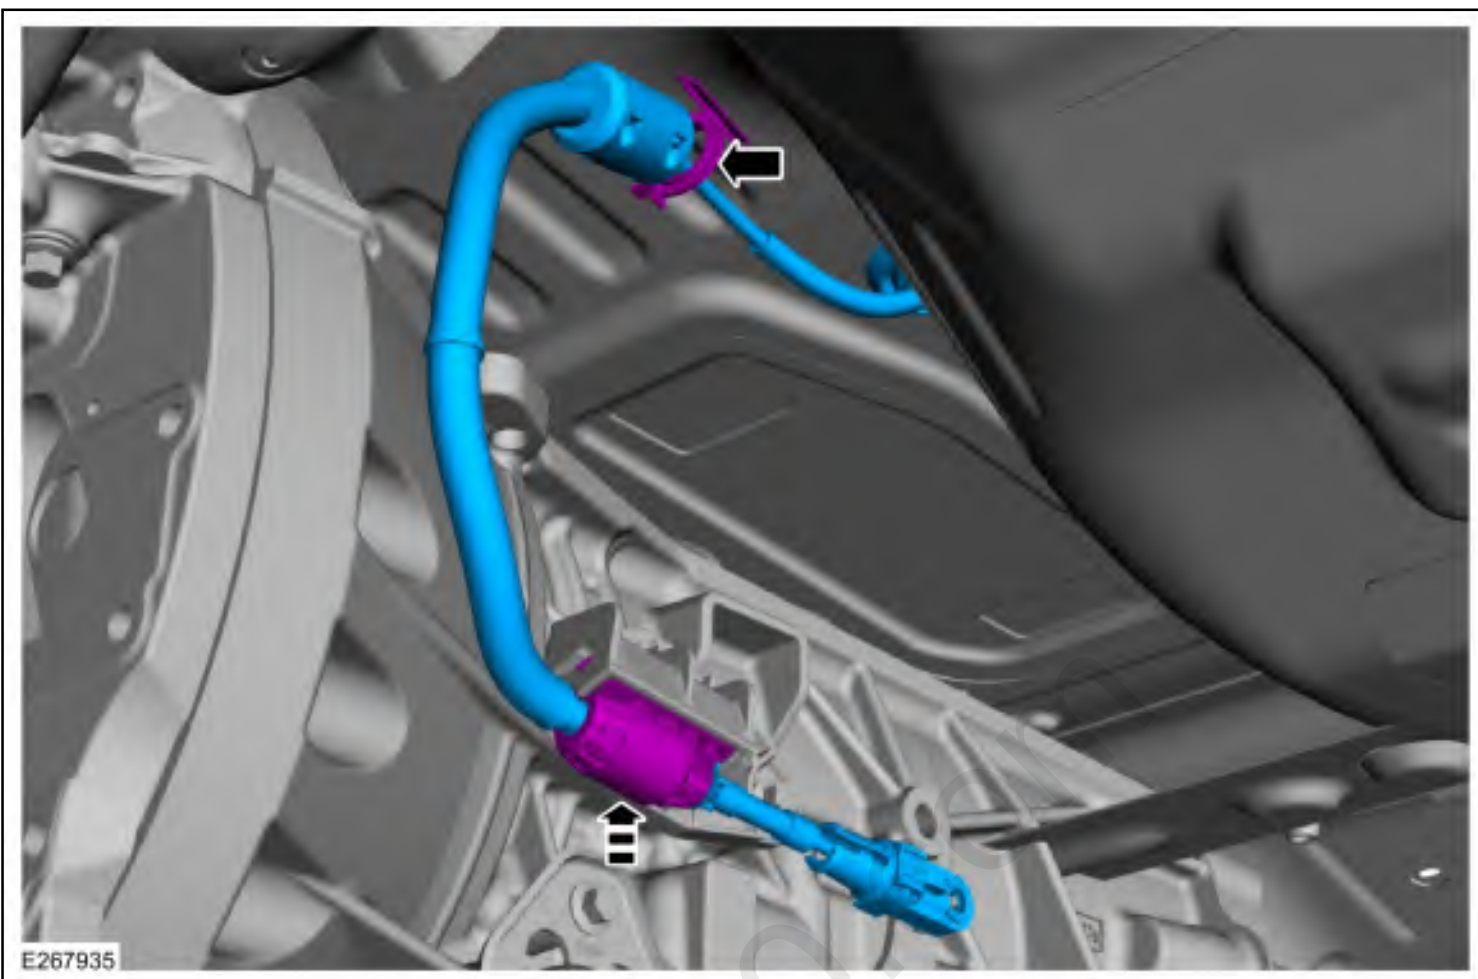

3. Pull the selector lever cable and the rubber grommet through the floor pan and route the cable toward the floor shift selector lever assembly.

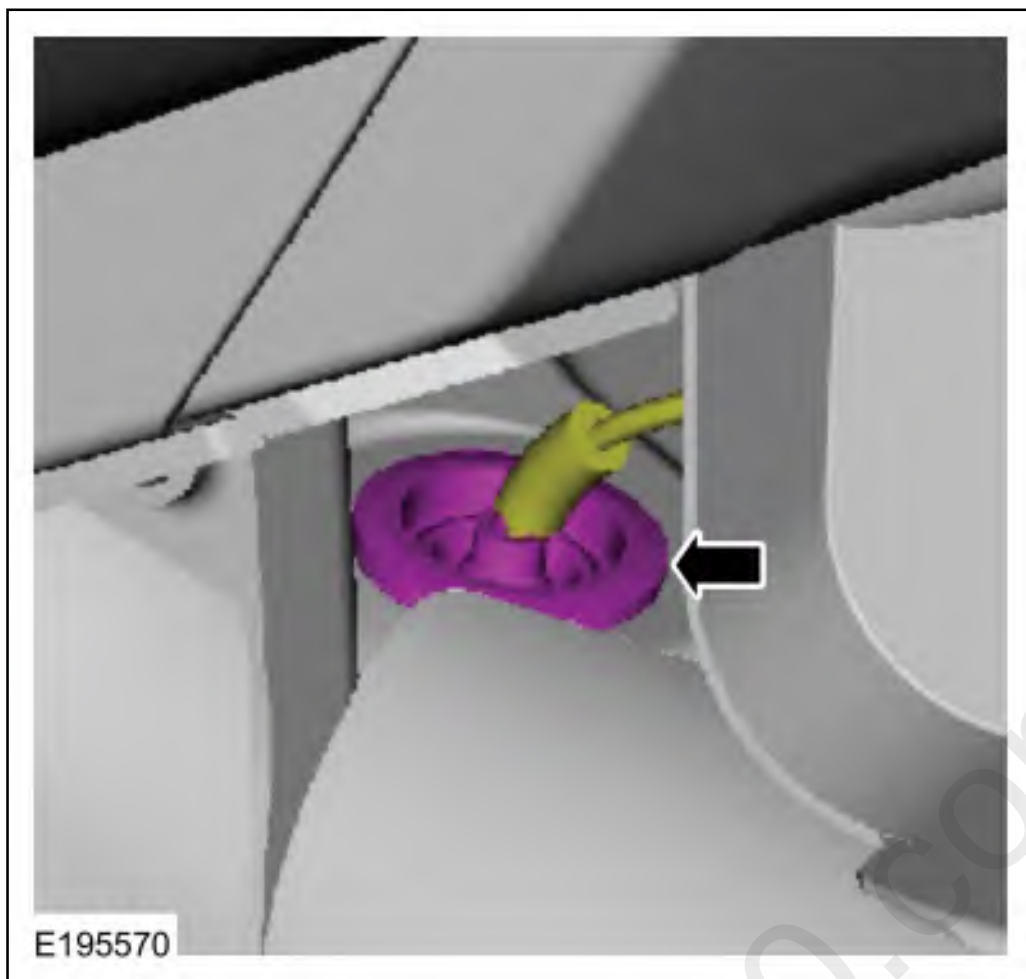

4. Install the floor shift selector lever assembly.

Refer to: [Selector Lever Assembly - Vehicles With: Floor Shift](#) (307-05 Automatic Transmission External Controls, Removal and Installation).