

Brake Shift Interlock Actuator - Vehicles With: Floor Shift

Removal

1. **NOTE:** *The brake shift interlock actuator is not serviced separately. If a new brake shift interlock actuator is required, install a new floor shift selector lever assembly.*

Install a new floor shift selector lever assembly.

Refer to: [Selector Lever Assembly - Vehicles With: Floor Shift](#) (307-05 Automatic Transmission External Controls, Removal and Installation).

Installation

1. **NOTE:** *The brake shift interlock actuator is not serviced separately. If a new brake shift interlock actuator is required, install a new floor shift selector lever assembly.*

Install a new floor shift selector lever assembly.

Refer to: [Selector Lever Assembly - Vehicles With: Floor Shift](#) (307-05 Automatic Transmission External Controls, Removal and Installation).