

Fuel System Pressure Check

Special Tool(s) / General Equipment

	310-D009 (D95L-7211-A) Fuel Pressure Test Kit
--	--

Check

NOTE: *This Fuel System Pressure Check is for the low pressure side of the system.*

1. Release the fuel system pressure.

Refer to: [Fuel System Pressure Release](#) (310-00D Fuel System - General Information - 5.0L 32V Ti-VCT, General Procedures).

2. Disconnect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).

- Release fuel jumper tube from the bell housing bracket.
- Release the fuel jumper tube from the retainer.