

Muffler and Tailpipe


Removal

NOTE: *Muffler and tailpipe assemblies will vary in configuration with different wheelbases and powertrains. Typical application shown.*


NOTE: *Removal steps in this procedure may contain installation details.*

NOTE: *Clean all exhaust connections before reassembly.*


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Loosen the clamp.
Torque: 41 lb.ft (55 Nm)

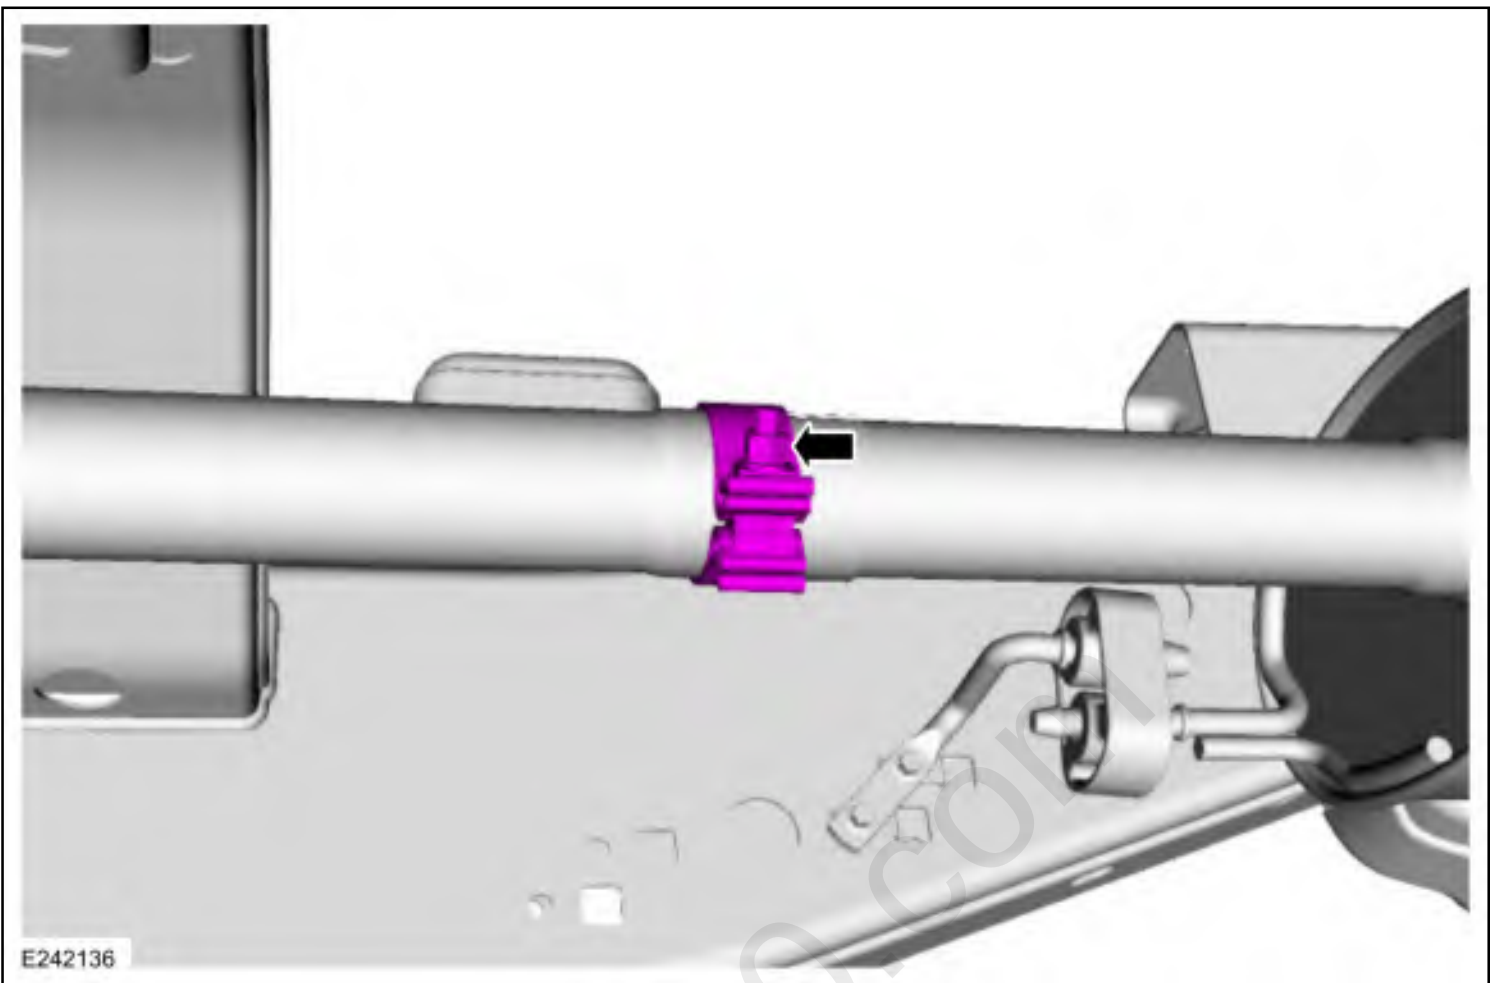

3. Slide the muffler and tailpipe rearward out of the isolators.

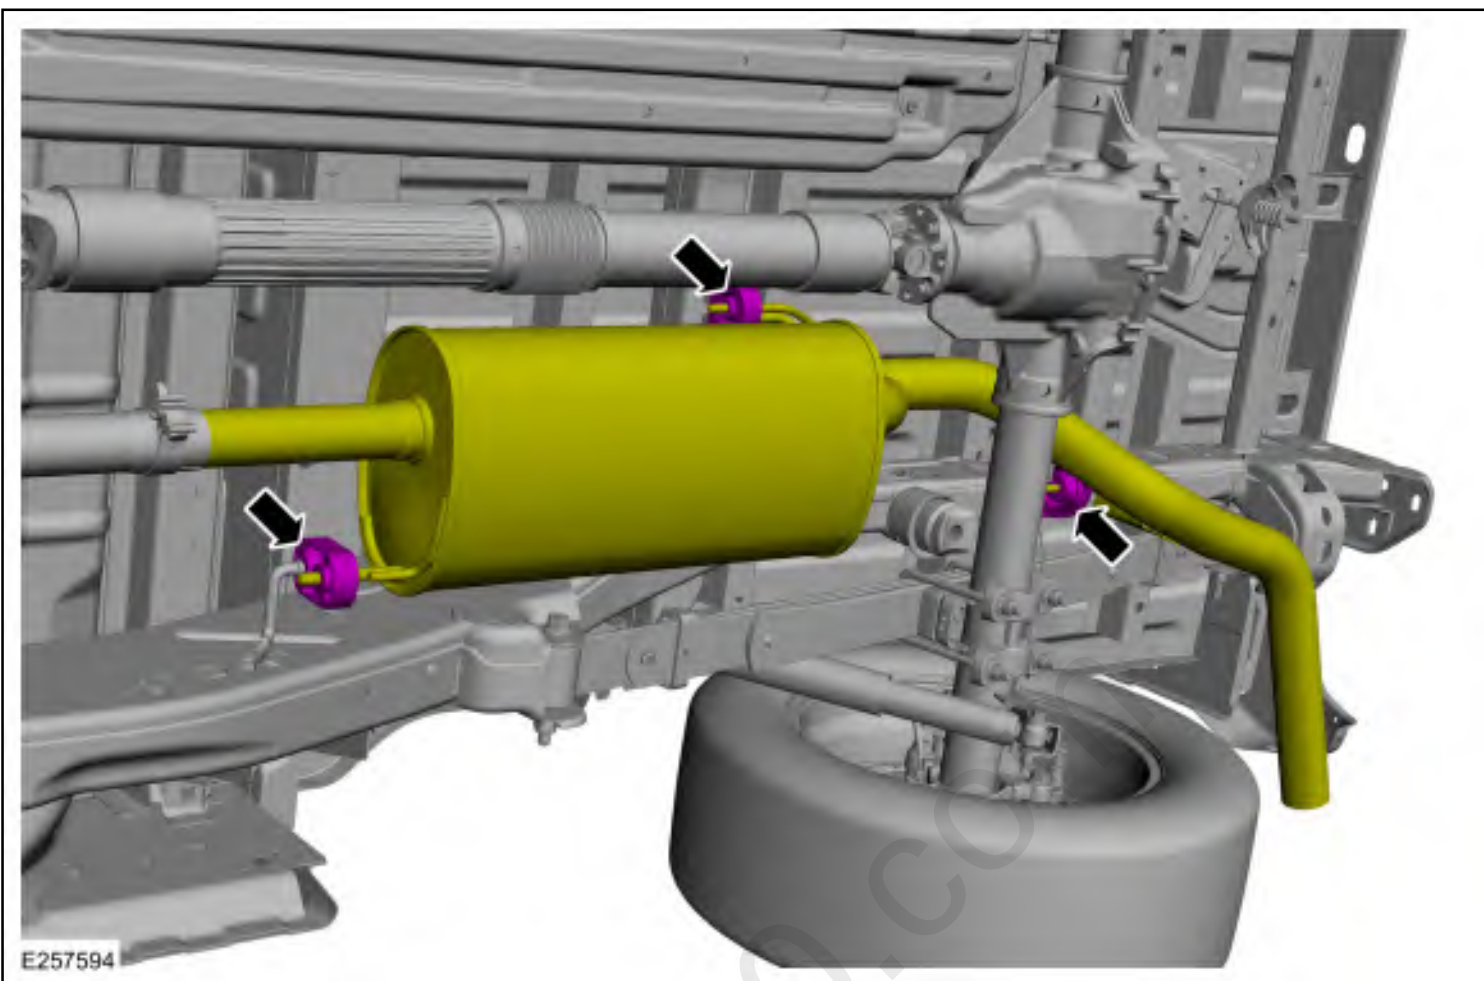

4. Release the locator tab out of the muffler inlet pipe and remove the muffler and tailpipe.

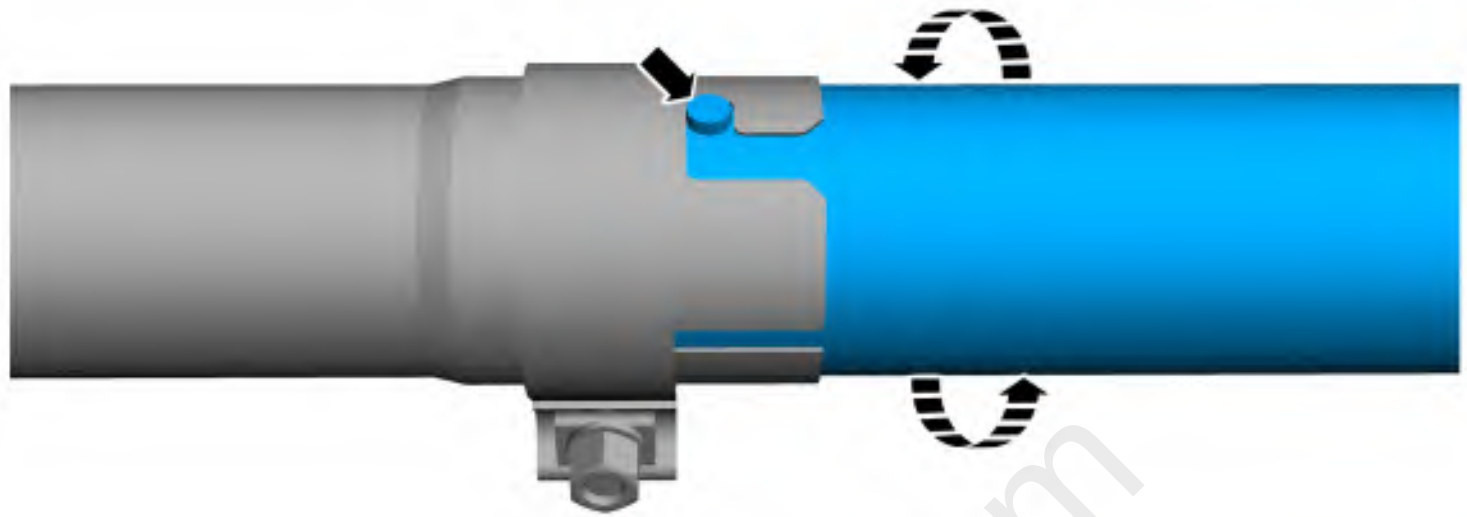

E257593



Installation

1. To install, reverse removal procedure.
2. Check the exhaust system for leaks.

Copyright © 2018 Ford Motor Company