

Muffler Inlet Pipe


Removal

NOTE: *Muffler inlet pipes will vary in configuration with different wheelbases and powertrains. Typical application shown.*


NOTE: *Removal steps in this procedure may contain installation details.*

NOTE: *Clean all exhaust connections before reassembly.*


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Loosen the clamp.
Torque: 41 lb.ft (55 Nm)

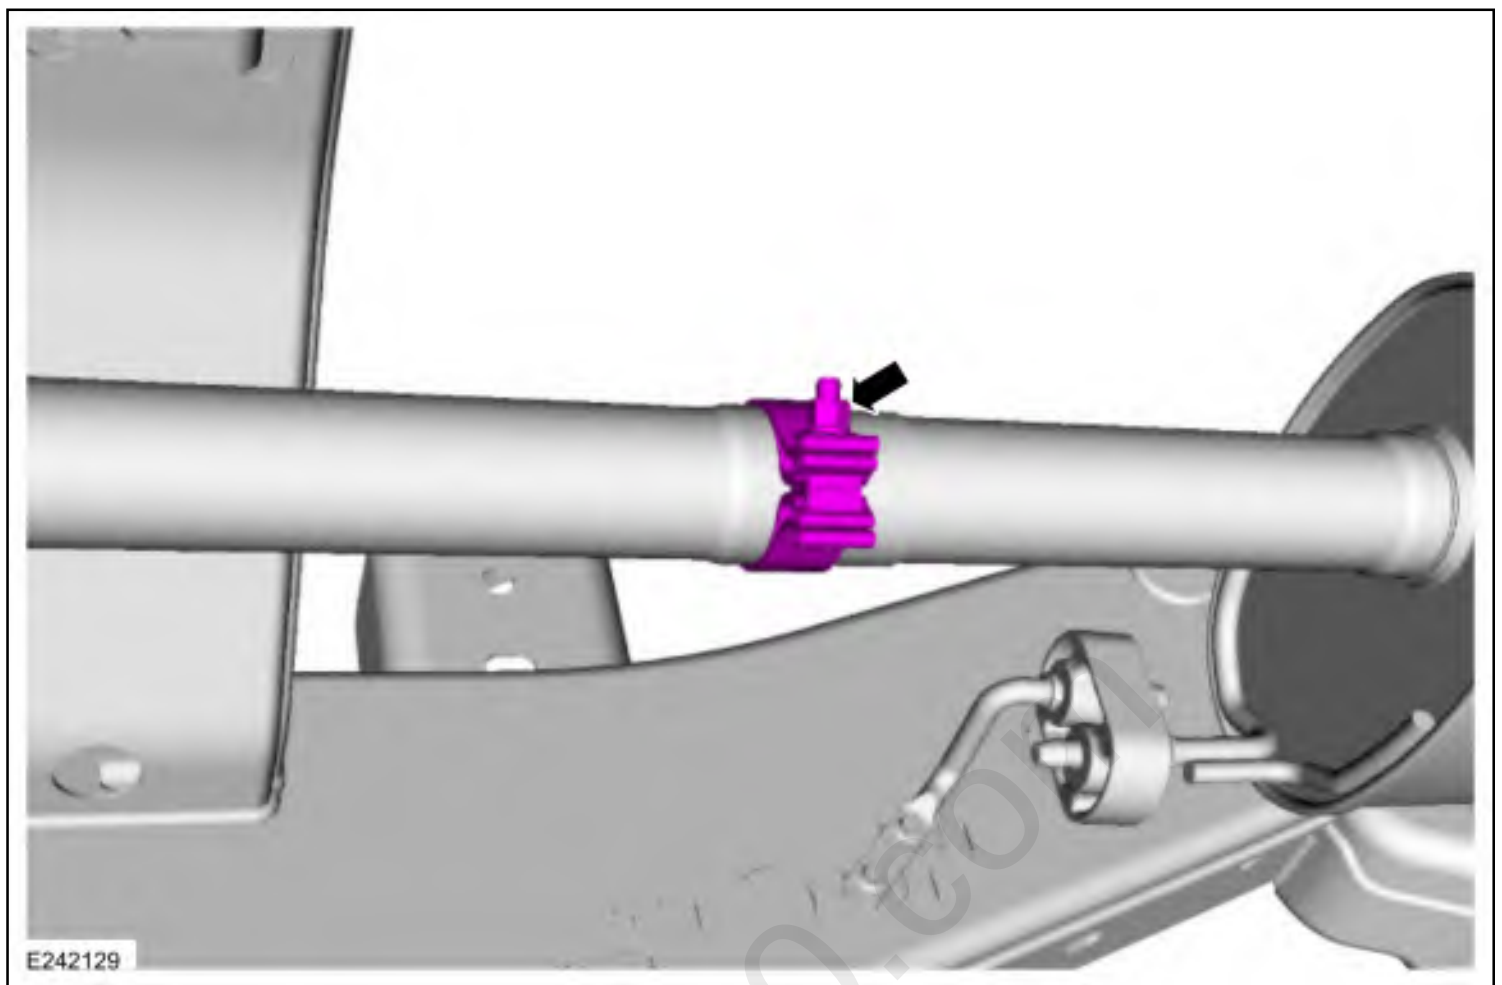

3. Remove the bolts and the muffler inlet pipe.
Torque: 30 lb.ft (40 Nm)

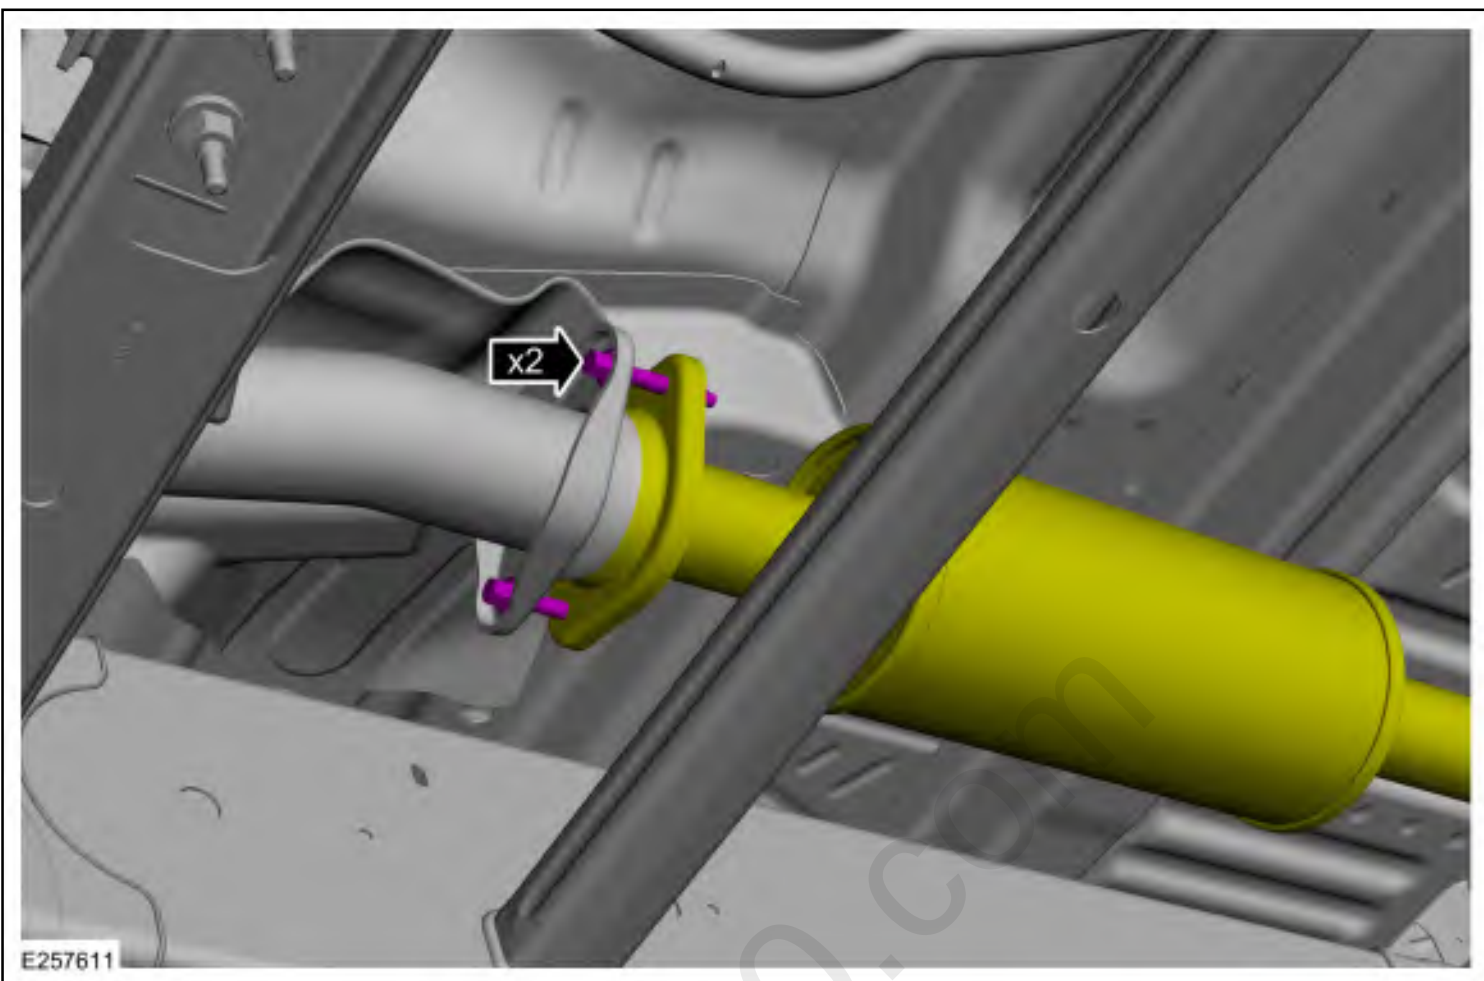

4. During removal, the locator tab needs to be released out of the muffler inlet pipe.

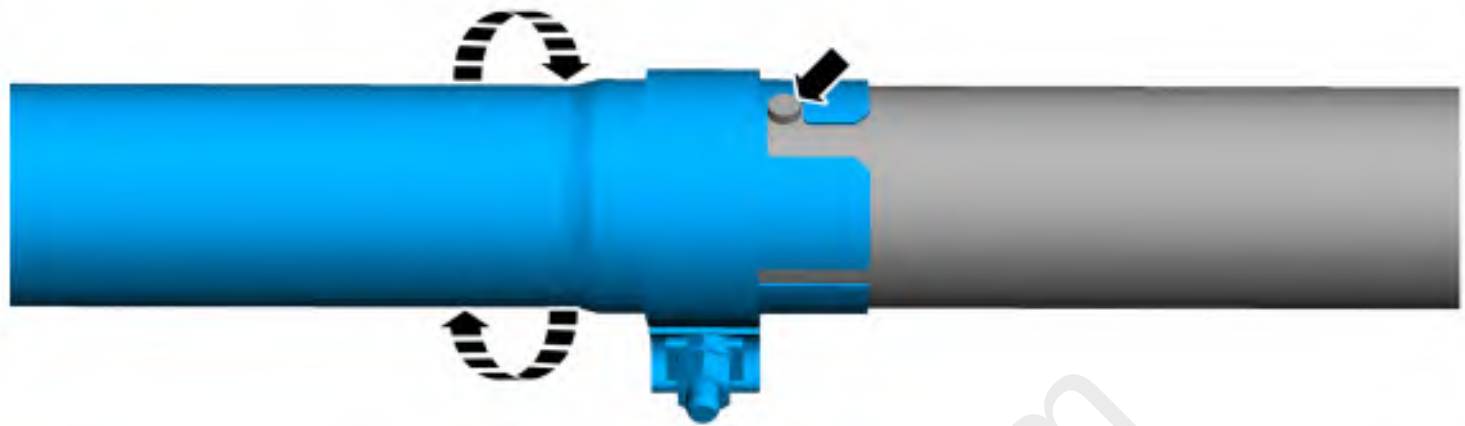

E257610



Installation

1. To install, reverse removal procedure.
2. Check the exhaust system for leaks.

Copyright © 2018 Ford Motor Company