

Catalytic Converter RH

Base Part Number: Base Part Number: 5G218

Removal

NOTE: *If the catalytic converter is not being replaced, the HO2S and the catalyst monitor sensor do not need to be removed from the catalytic converter. Disconnecting the electrical connectors is still necessary.*

NOTE: *The exhaust Y-pipe dual catalytic converter is a 2-piece assembly. The LH and RH converters can be serviced separately as needed.*

NOTE: *Clean all exhaust connections before reassembly.*

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove the LH catalytic converter.
Refer to: Catalytic Converter LH (309-00 Exhaust System - 5.0L 32V Ti-VCT) .
3. Remove the muffler inlet pipe.
Refer to: Muffler Inlet Pipe (309-00 Exhaust System - 5.0L 32V Ti-VCT) .
4. Remove the transmission support insulator.
Refer to: [Transmission Support Insulator](#) (307-01A Automatic Transmission - 6-Speed Automatic Transmission - 6R80, Removal and Installation).
5. Remove the retainers and disconnect the electrical connectors.