

Transfer Case Draining and Filling

Materials

Name	Specification
Motorcraft® MERCON® LV Automatic Transmission Fluid XT-10-QLVC	MERCON® LV WSS-M2C938-A

Draining

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
1. Remove the drain plug and drain the fluid.
2. Clean the drain plug and the area around drain plug.
3. Apply thread sealant to the drain plug threads and install the drain plug.
Torque: 133 lb.in (15 Nm)