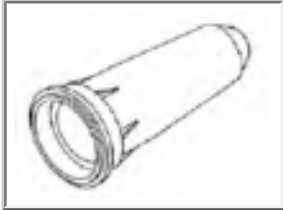



Transfer Case Rear Seal

Special Tool(s) / General Equipment

	308-249 (T96T-7127-A) Installer, Input Shaft Oil Seal TKIT-1996-F/FM TKIT-1996-FLM2
--	--


Removal

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove the rear driveshaft.
Refer to: [Rear Driveshaft](#) (205-01 Driveshaft, Removal and Installation).
3. Remove the rear output shaft seal.

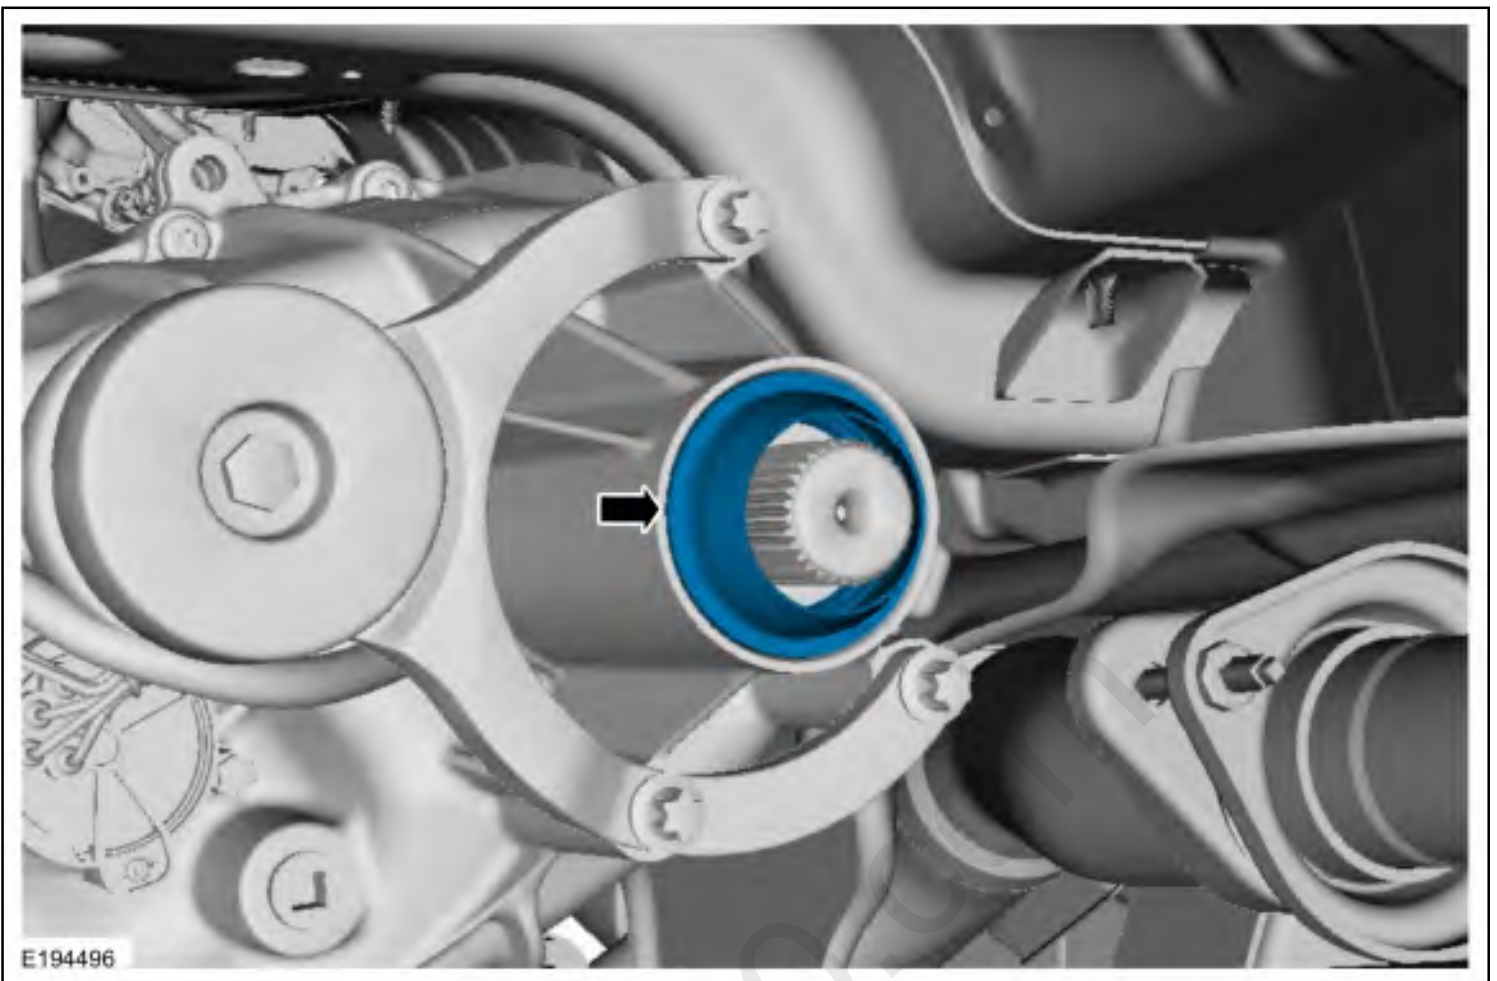

Installation

1. Using the special tool, install the rear output shaft seal.
Use Special Service Tool: 308-249 (T96T-7127-A) Installer, Input Shaft Oil Seal.

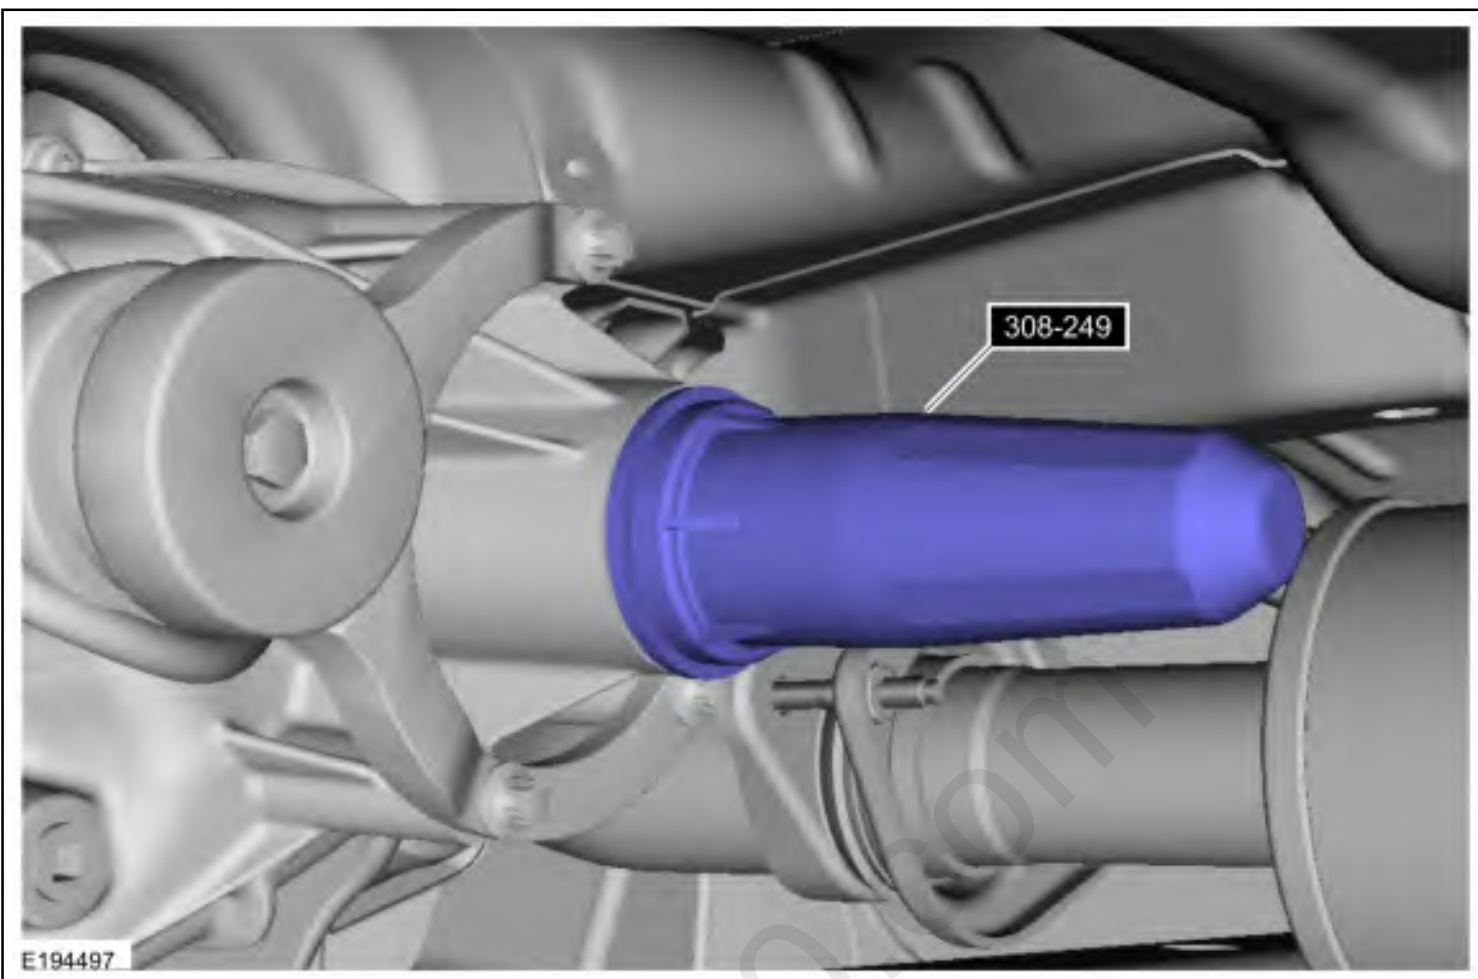

2. Install the rear driveshaft.

Refer to: [Rear Driveshaft](#) (205-01 Driveshaft, Removal and Installation).