


Transfer Case

Base Part Number: Base Part Number: 7251

1. With the vehicle in Neutral, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. If equipped.
Remove the skid plate bolts and the skid plate.

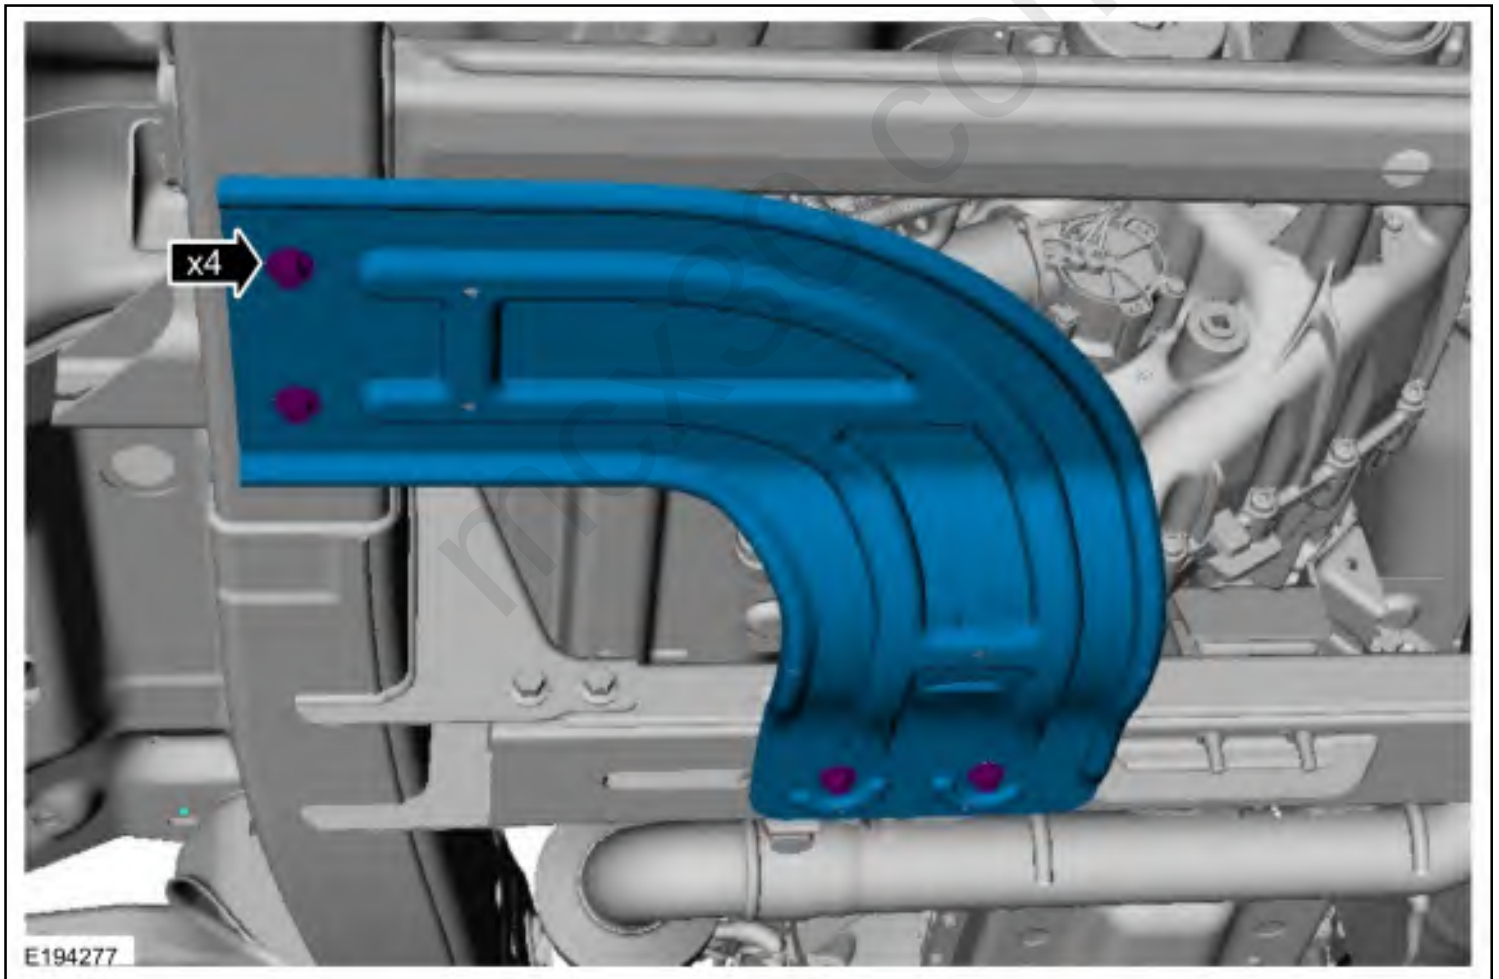

3. Drain the fluid if the transfer case is to be disassembled.
Refer to: [Transfer Case Draining and Filling](#) (308-07B Transfer Case, General Procedures).


4. Remove the front driveshaft.

Refer to: [Front Driveshaft](#) (205-01 Driveshaft, Removal and Installation).


5. Remove the rear driveshaft.

Refer to: [Rear Driveshaft](#) (205-01 Driveshaft, Removal and Installation).


6. Disconnect the shift motor electrical connector and detach the harness retainer clip from the transfer case.

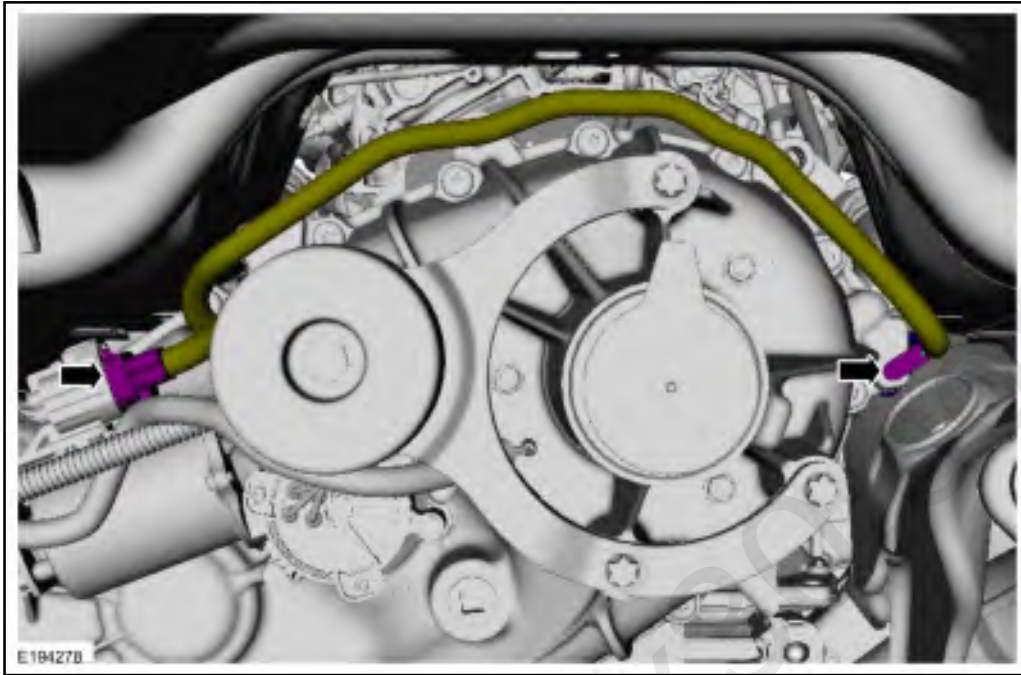


7. Disconnect the vent hose from the transfer case.

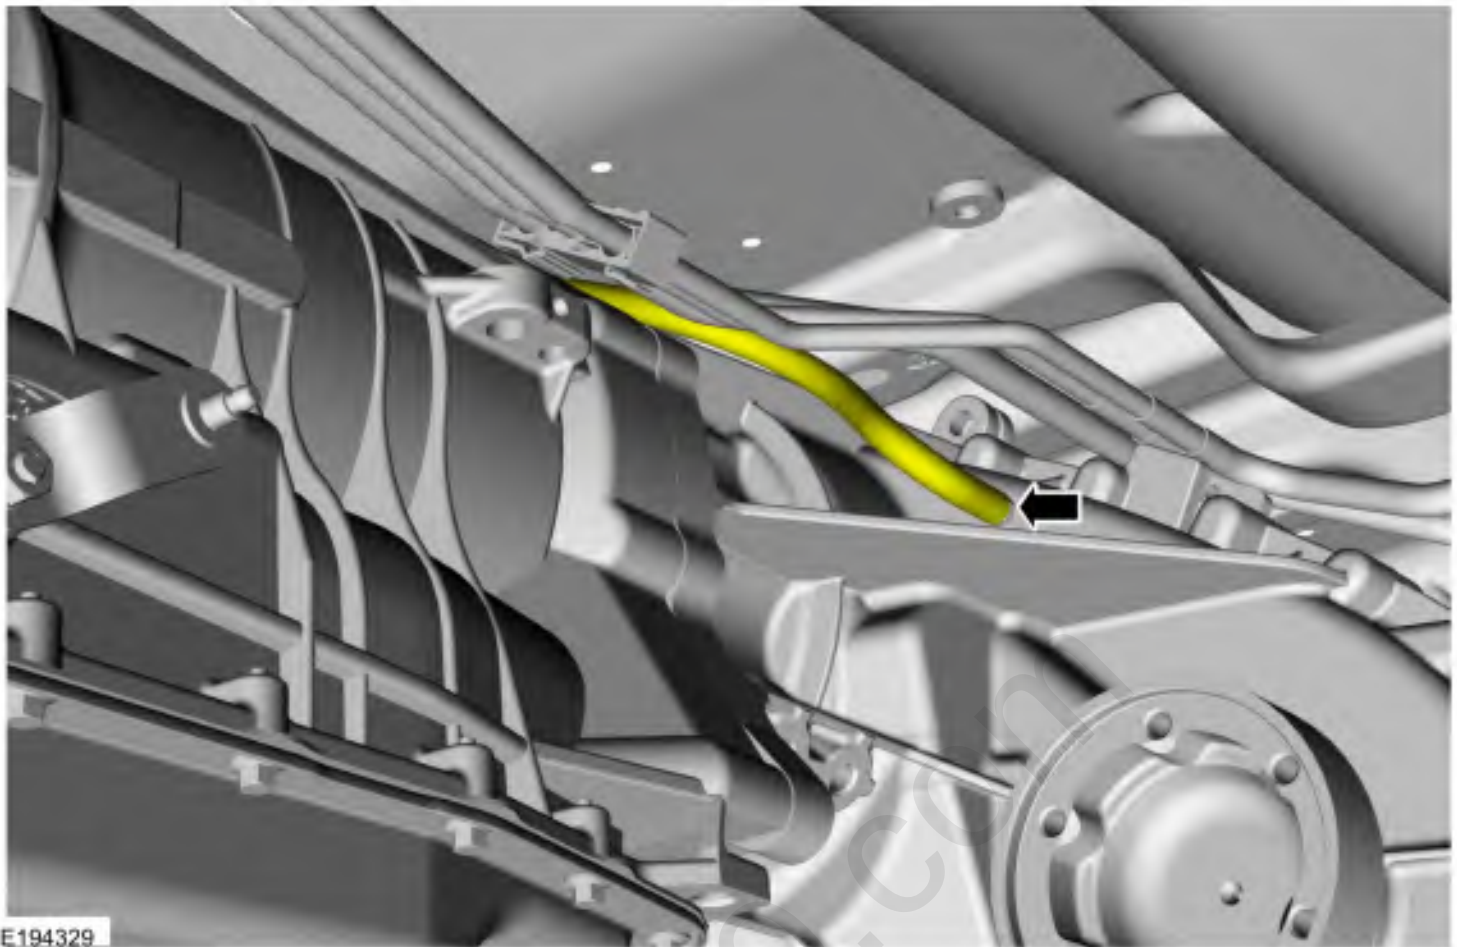

8. Remove the transmission support crossmember.
Refer to: [Transmission Support Crossmember](#) (502-02 Full Frame and Body Mounting, Removal and Installation).
9. Remove the bolt from the LH exhaust support bracket.

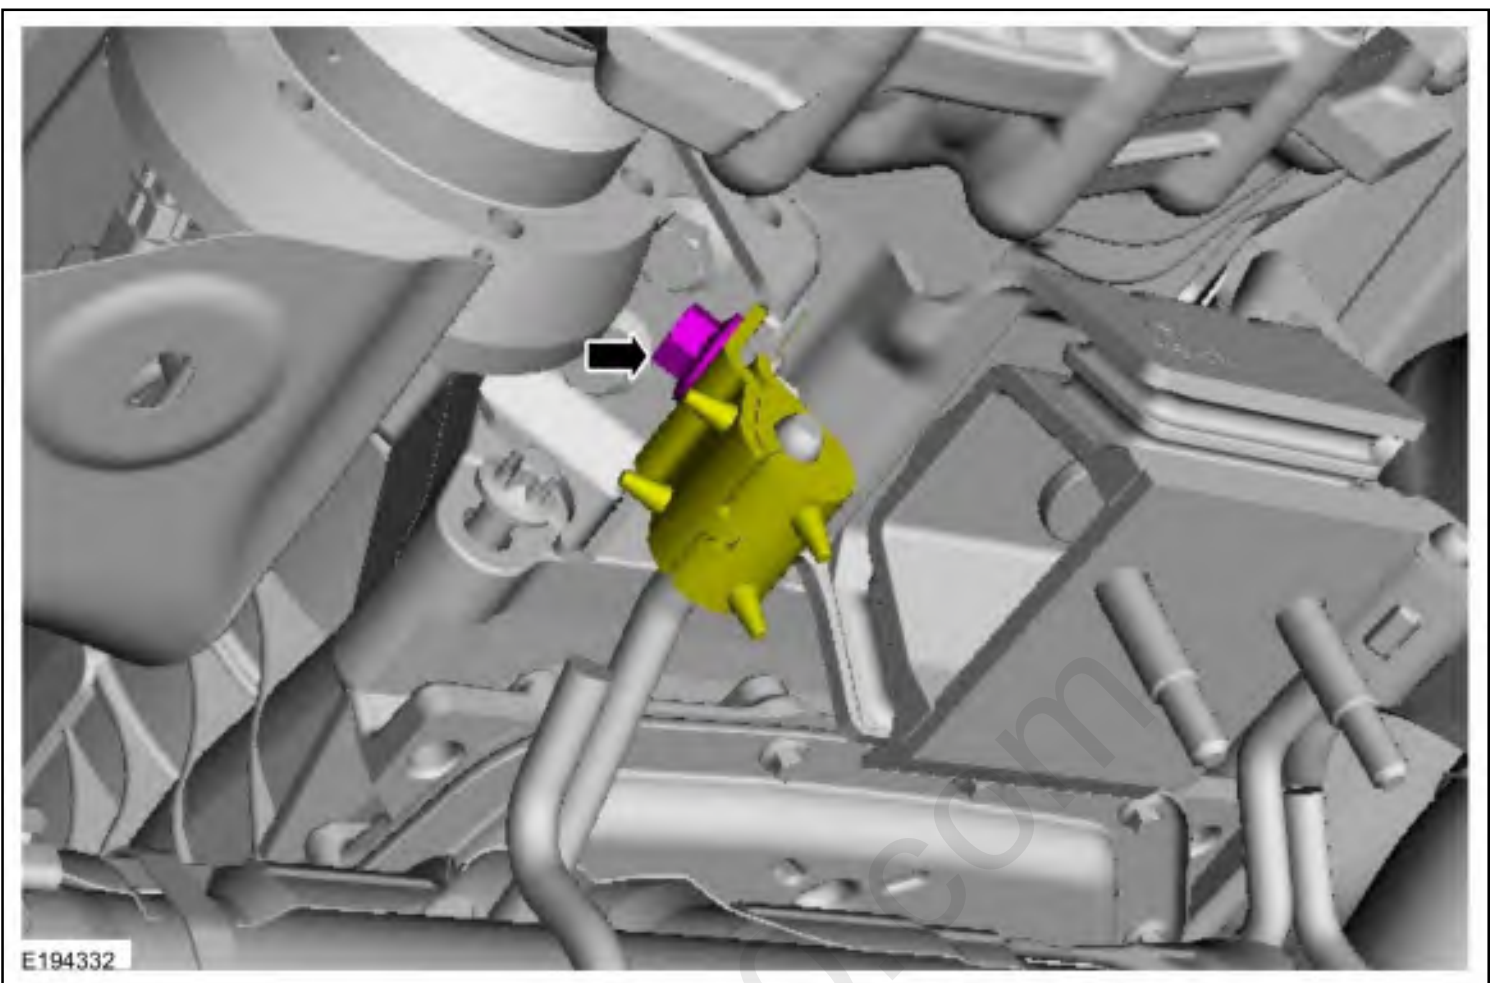


10. Refer to: [Transmission Support Insulator](#) (307-01A Automatic Transmission - 6-Speed Automatic Transmission - 6R80, Removal and Installation).
Refer to: [Transmission Support Insulator](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).
11. Remove and discard the transfer case-to-transmission bolts.

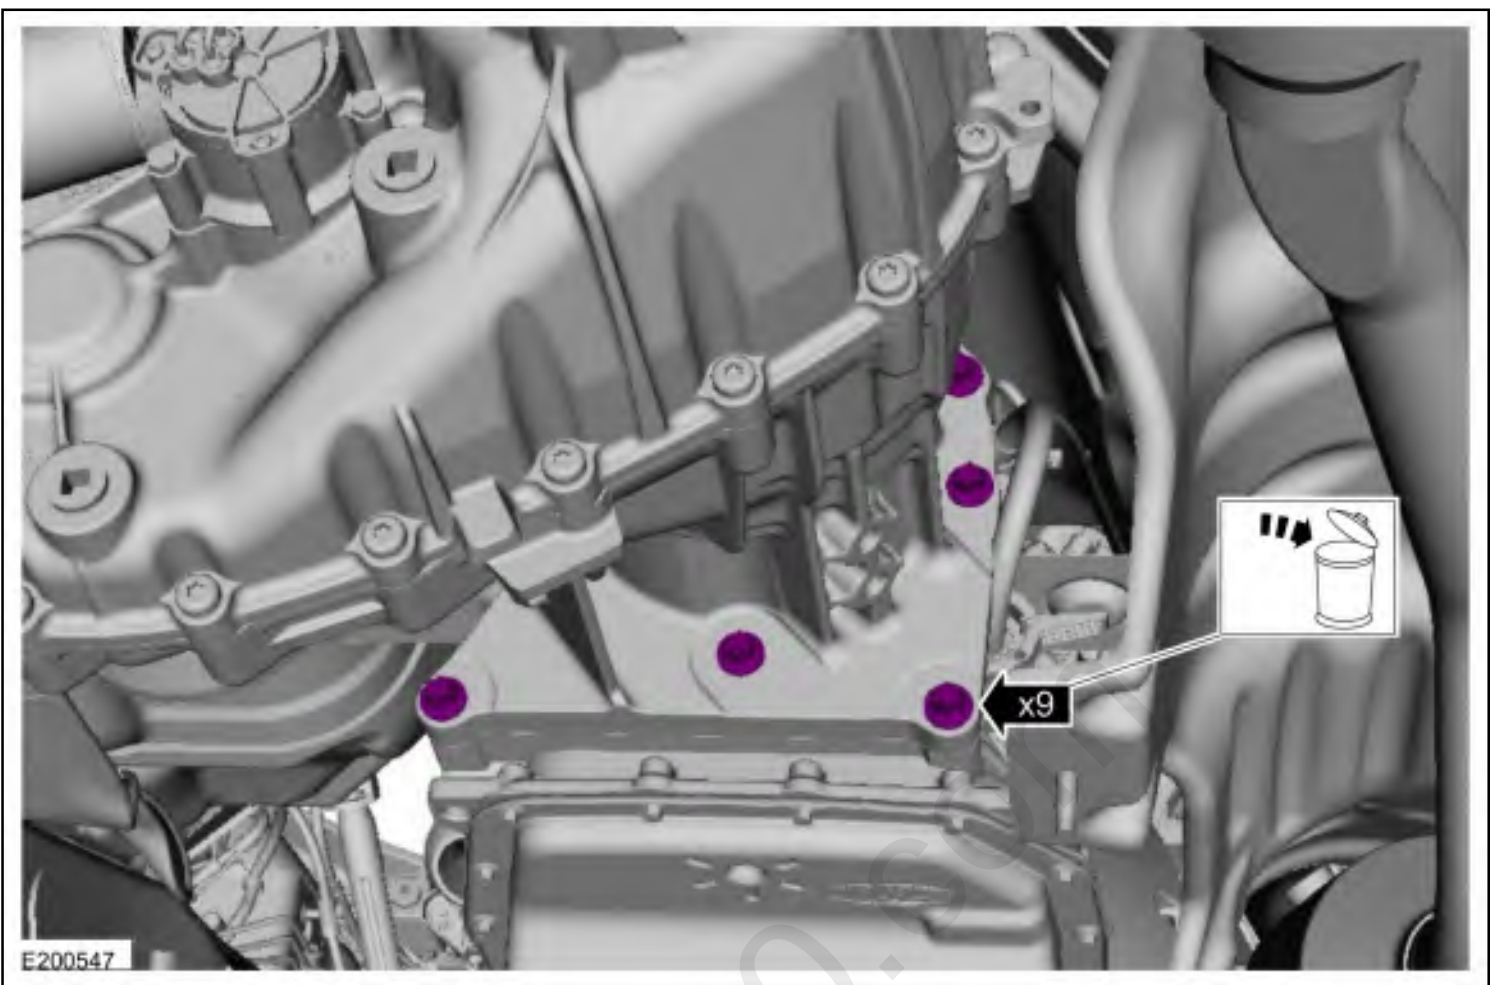


12. **NOTE:** *The transfer case will need to be positioned on top of the crossmember and will require the help of an assistant.*

Separate the transfer case from the transmission and move the transfer case rearward.

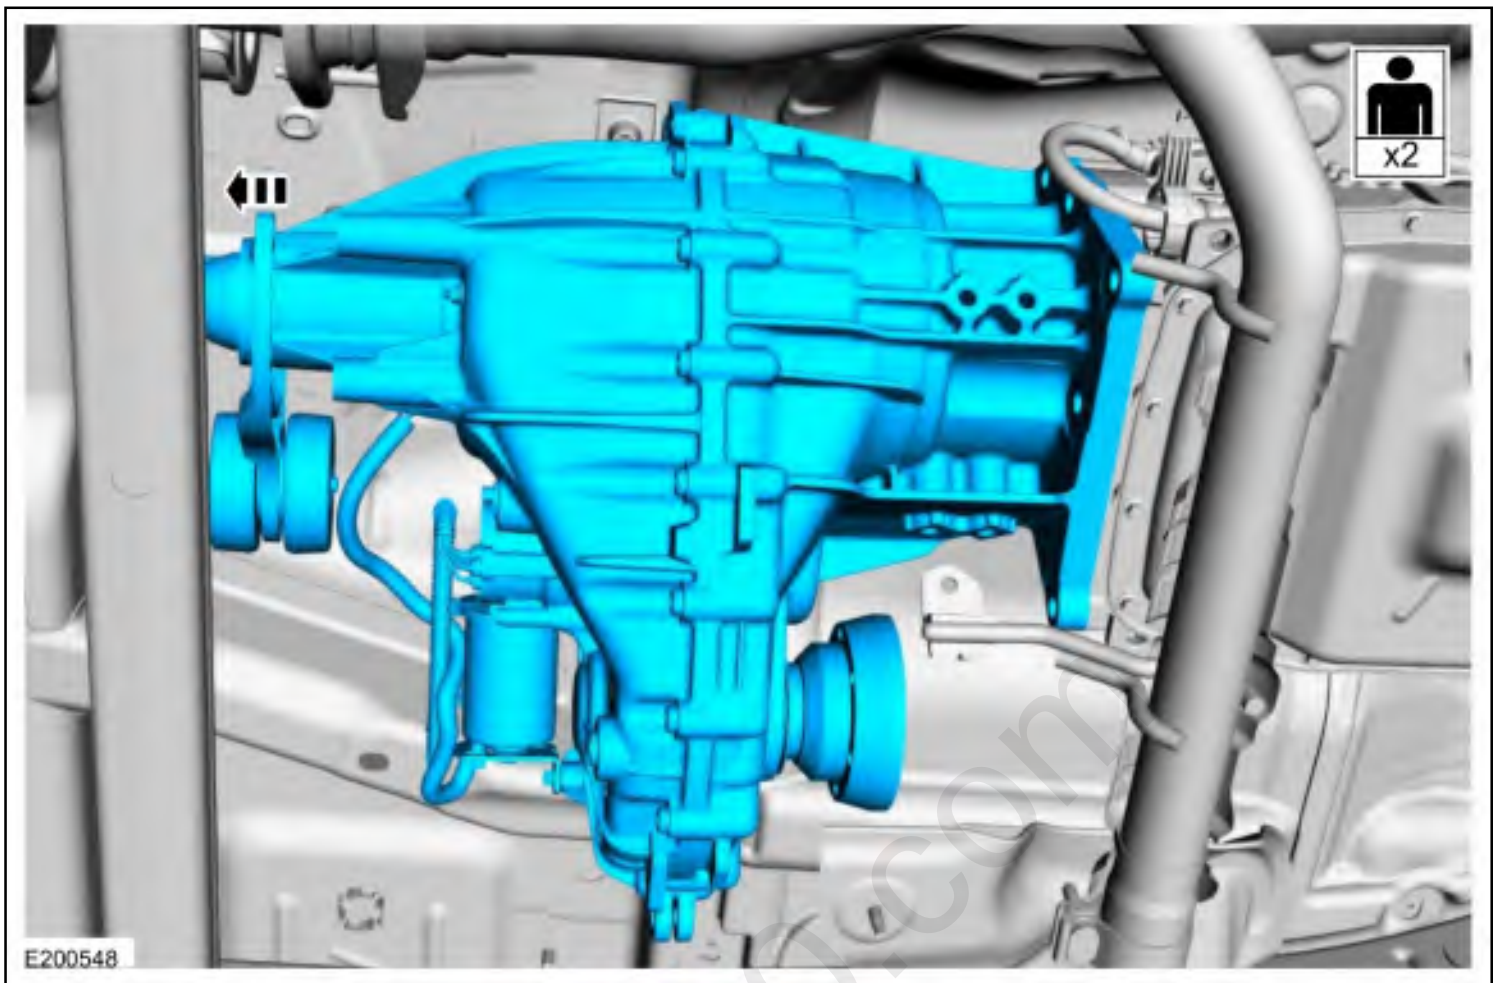

13. **NOTE:** *An assistant will be required to remove the transfer case.*

Raise the transmission for clearance. Remove the transfer case and lower it from the vehicle.

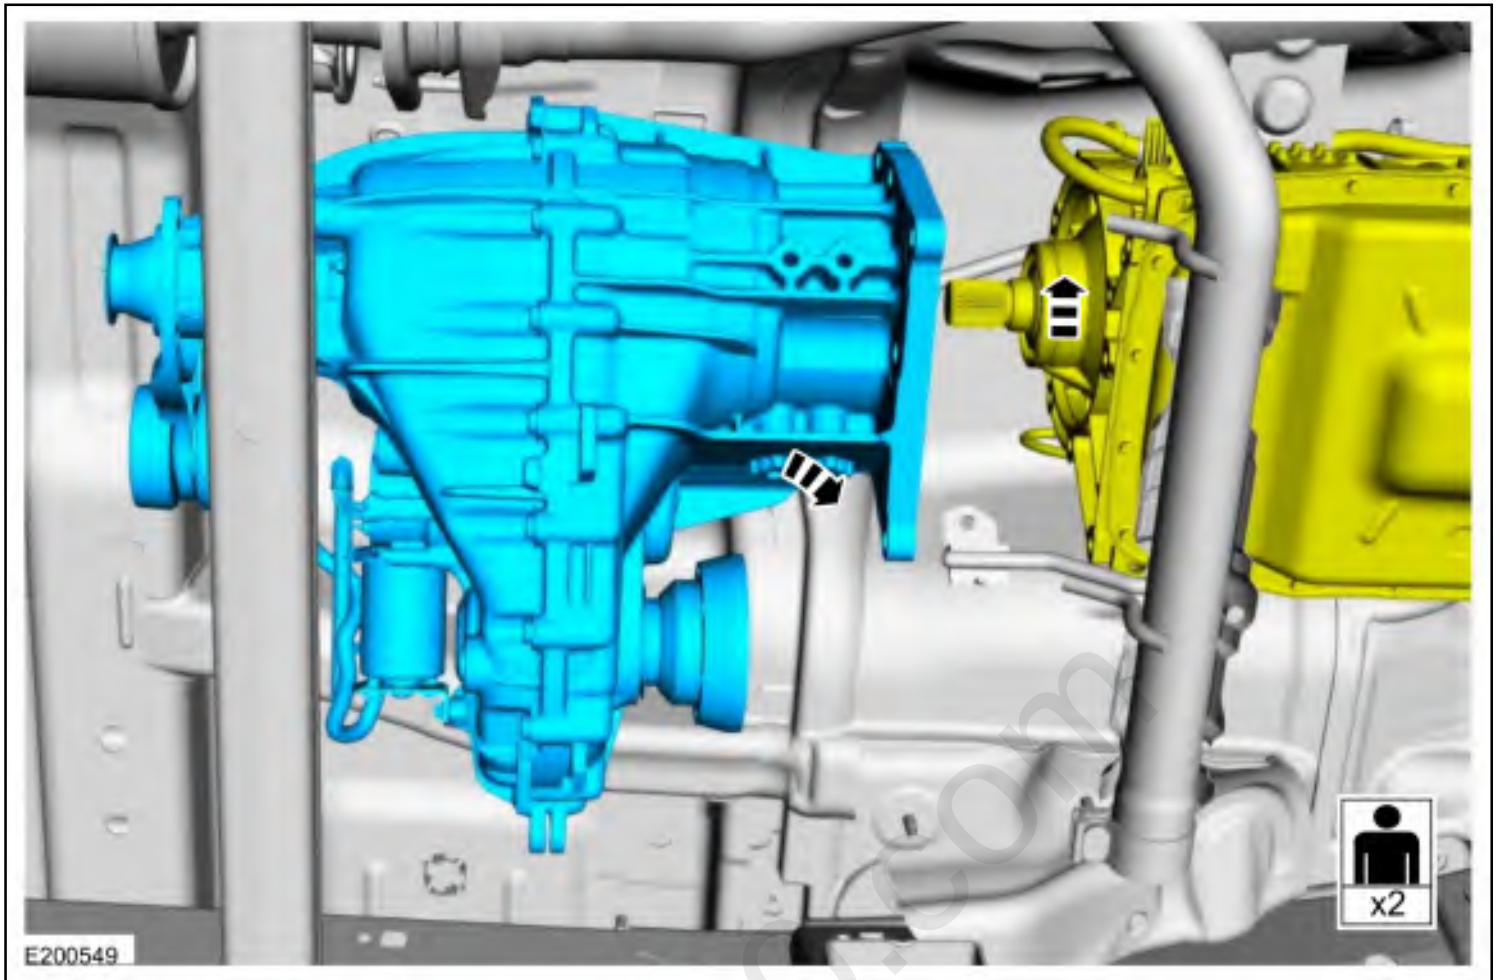

Copyright © 2018 Ford Motor Company