

Fuel Tank

Base Part Number: Base Part Number: 9002

Special Tool(s) / General Equipment

 ST1134A	292-00004 Fuel Tanker 100 GPM
 ST1293-A	300-OTC1585AE Powertrain Lift

Removal

NOTE: If the fuel pump is operational, connect the fuel tanker hose to the engine supply hose. Connect a scan tool to the vehicle and command the fuel pump to run.

NOTE: Removal steps in this procedure may contain installation steps.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Release the fuel system pressure.
Refer to: [Fuel System Pressure Release](#) (310-00D Fuel System - General Information - 5.0L 32V Ti-VCT, General Procedures).
3. If equipped, remove the nuts and the skid plate.