


Fuel Level Sender

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the Fuel Pump and Sender Unit.
Refer to: [Fuel Pump and Sender Unit](#) (310-01D Fuel Tank and Lines - 5.0L 32V Ti-VCT, Removal and Installation).
2. Disconnect the electrical connector.

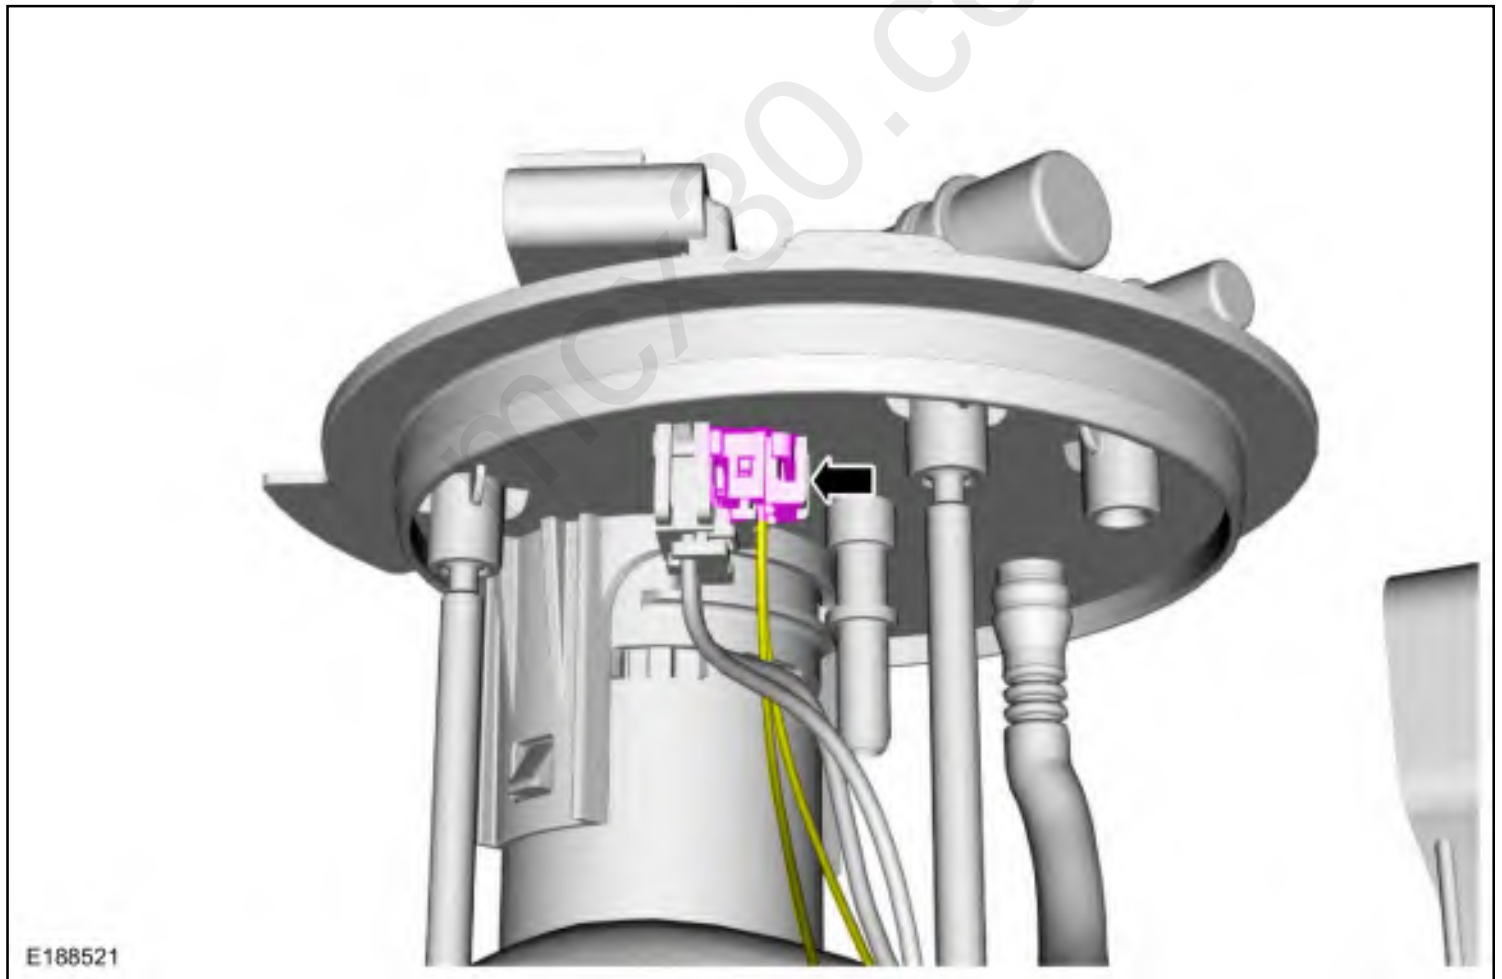

1. Release the retainer tab.

2. Remove the Fuel Level Sender.

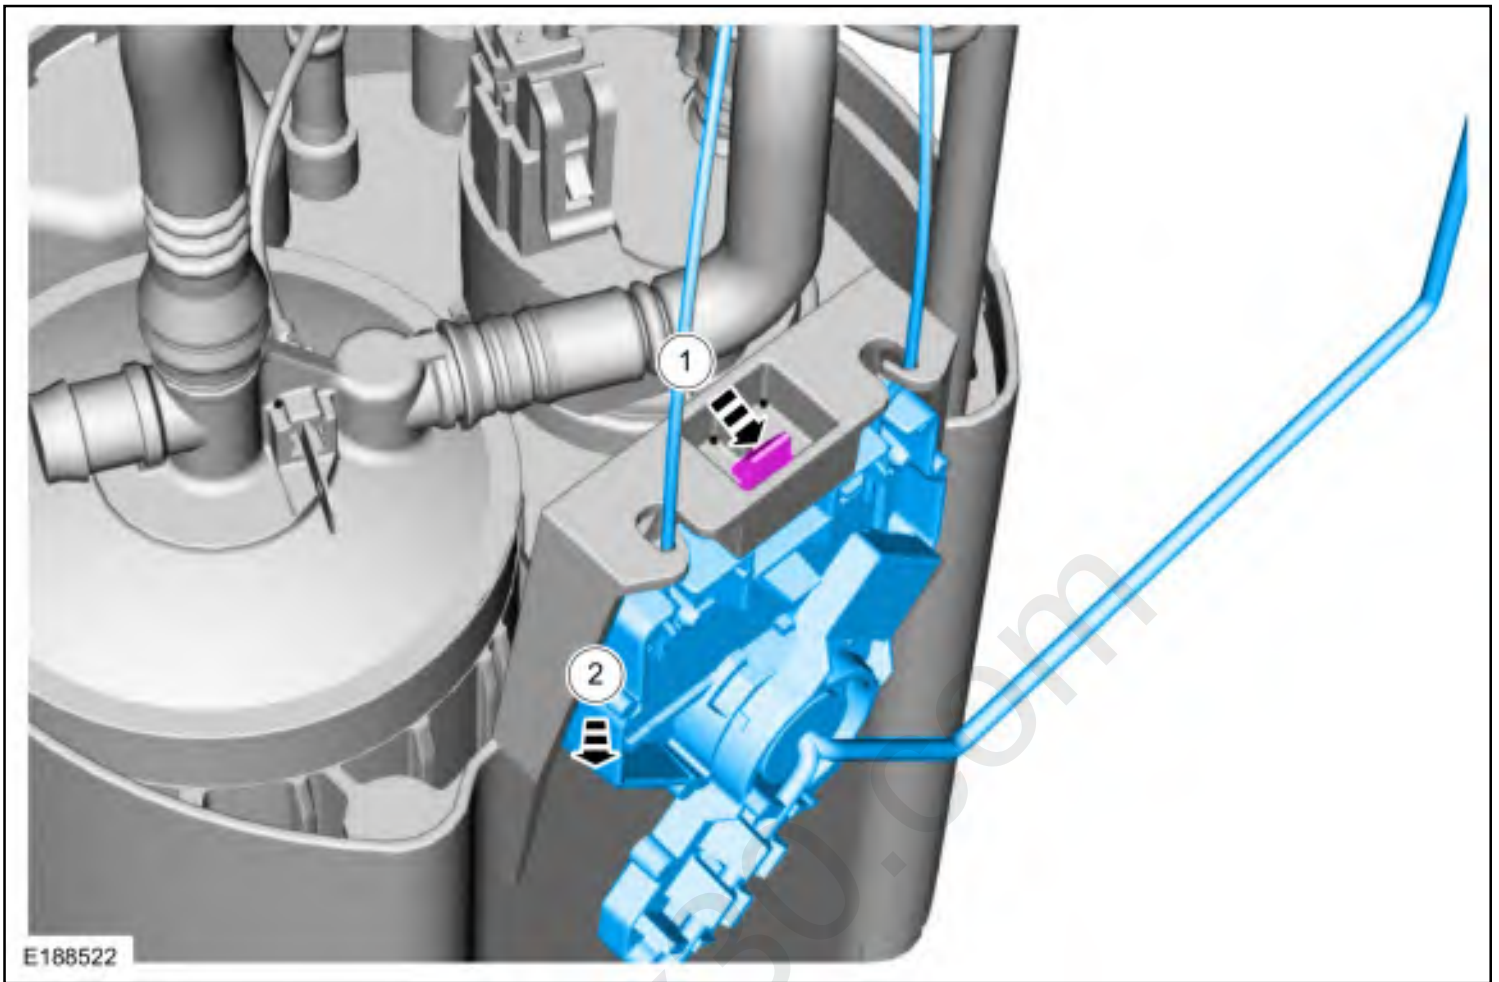

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company