



Climate Control System - Raptor, Vehicles With: Dual Automatic Temperature Control (DATC) - Component Location

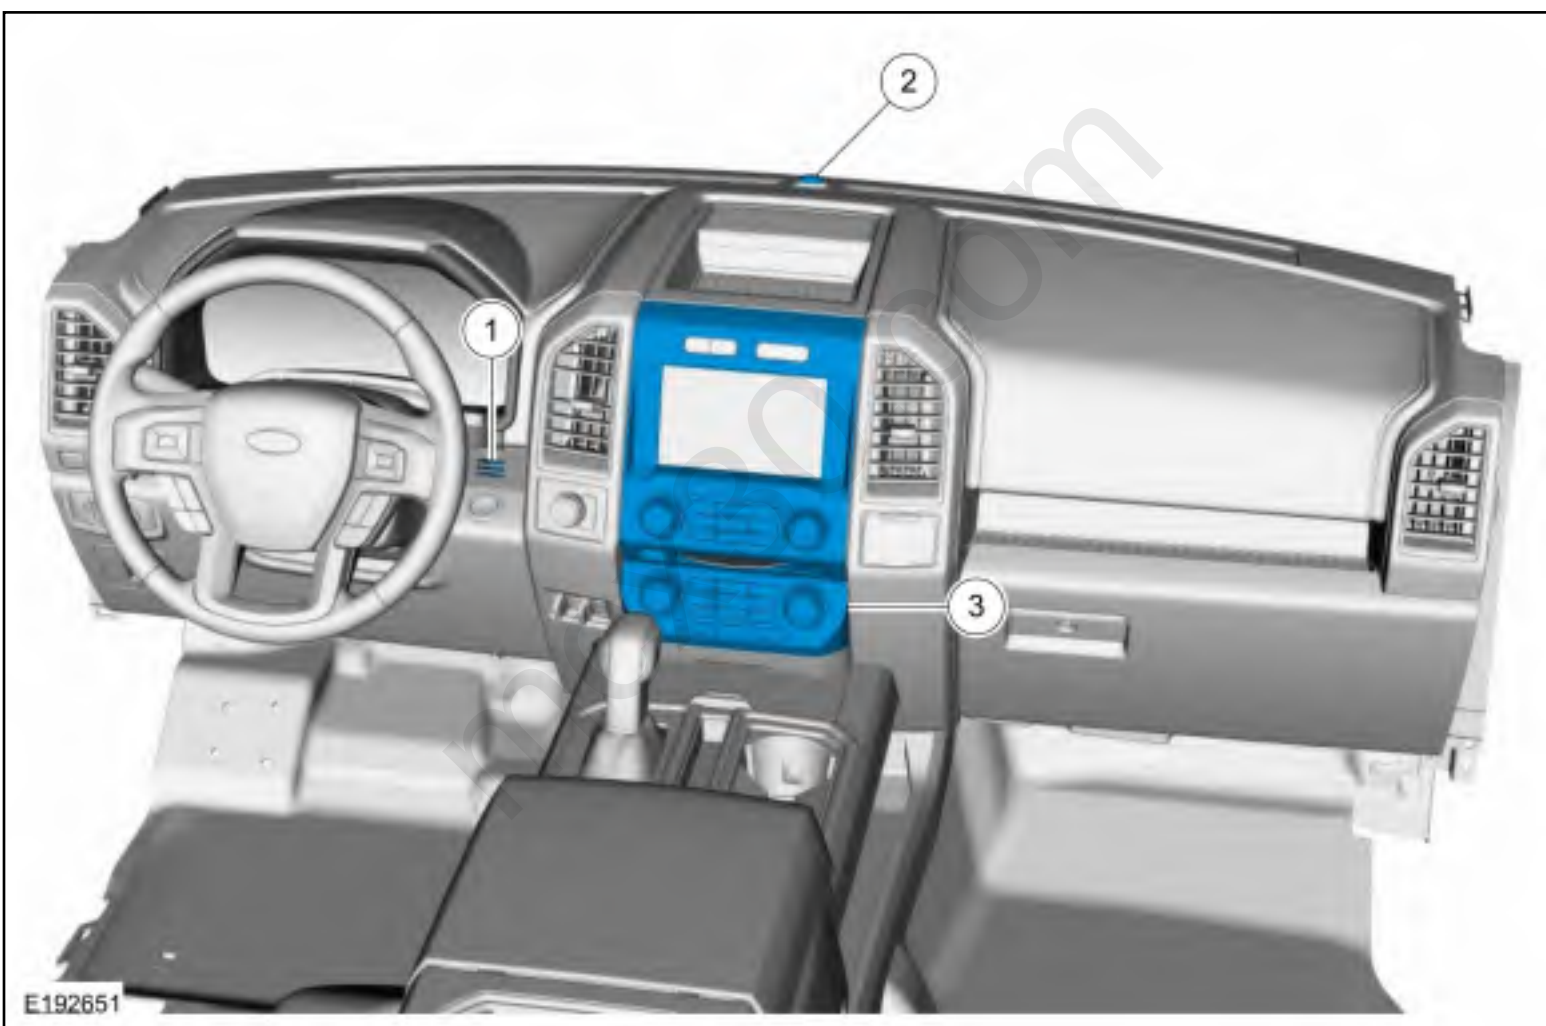


Item	Description
1	In-Vehicle Temperature & Humidity Sensor
2	Auto Lamp & Sunload Sensor
3	FCIM & HVAC Module

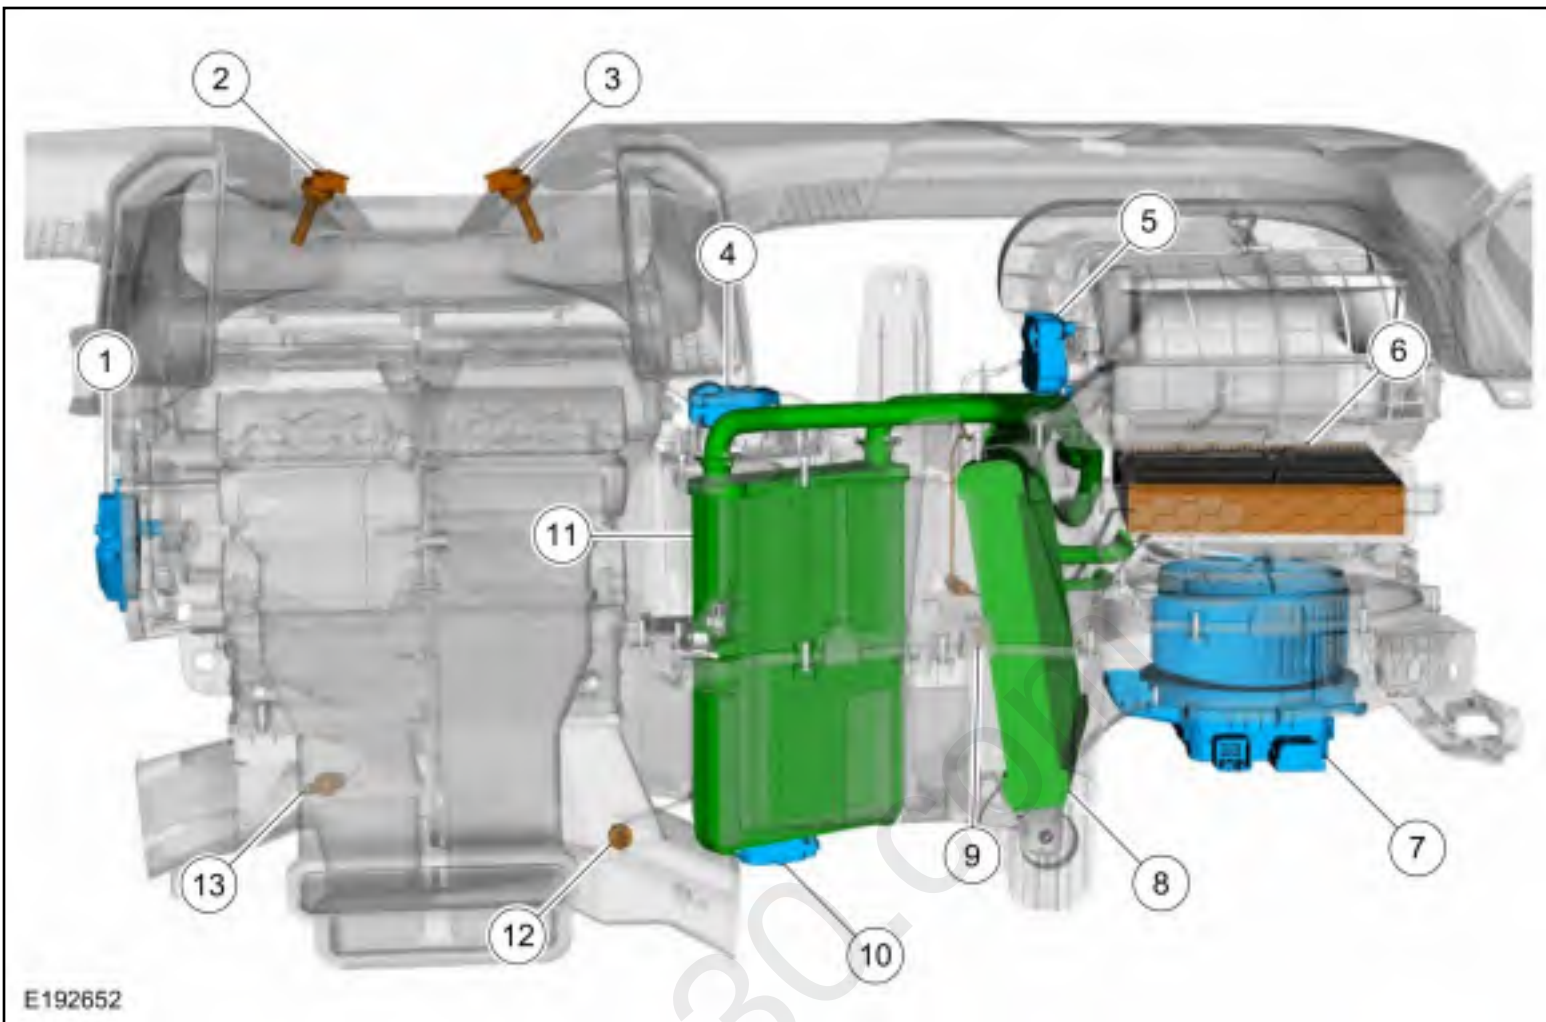

Item	Description
1	Air Distribution Door Actuator
2	Driver Side Register Air Discharge Temperature Sensor
3	Passenger Side Register Air Discharge Temperature Sensor
4	Passenger Side Temperature Door Actuator
5	Air Inlet Door Actuator
6	Cabin Air Filter
7	Blower Motor Control Module
8	Evaporator
9	Evaporator Temperature Sensor
10	Driver Side Temperature Door Actuator
11	Heater Core
12	Passenger Side Footwell Air Discharge Temperature Sensor

3.5L EcoBoost

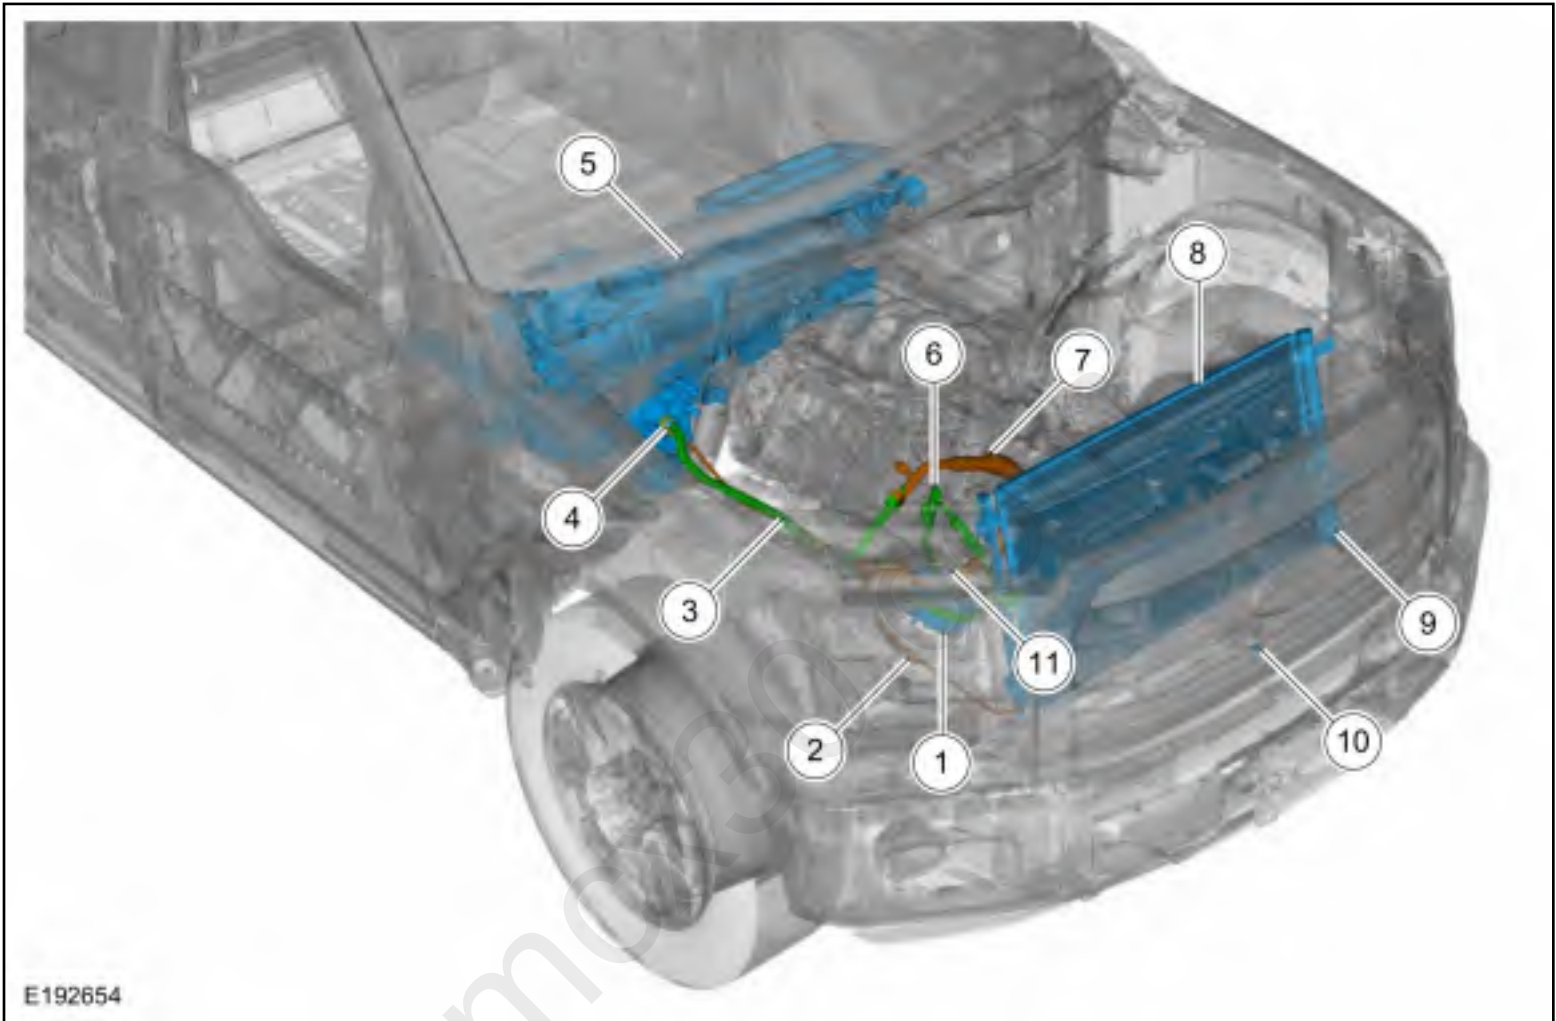

Item	Description
1	A/C Compressor
2	Condenser Outlet Line
3	Evaporator Outlet Line
4	Thermostatic Expansion Valve
5	Climate Control Housing
6	A/C Compressor Outlet Line
7	A/C Compressor Inlet Line
8	Condenser
9	Evaporator Inlet Line
10	Evaporator Outlet Line
11	A/C Compressor Inlet Line

9	Desiccant Bag
10	Ambient Air Temperature Sensor
11	A/C Pressure Transducer

Copyright © 2018 Ford Motor Company

mcx30.com