


Blower Motor Control Module

Removal


NOTE: The blower motor and the blower motor speed control is available only as part of the blower motor control module.

1. Remove the push pins and the RH insulation panel.
 - If equipped, disconnect the electrical connector.

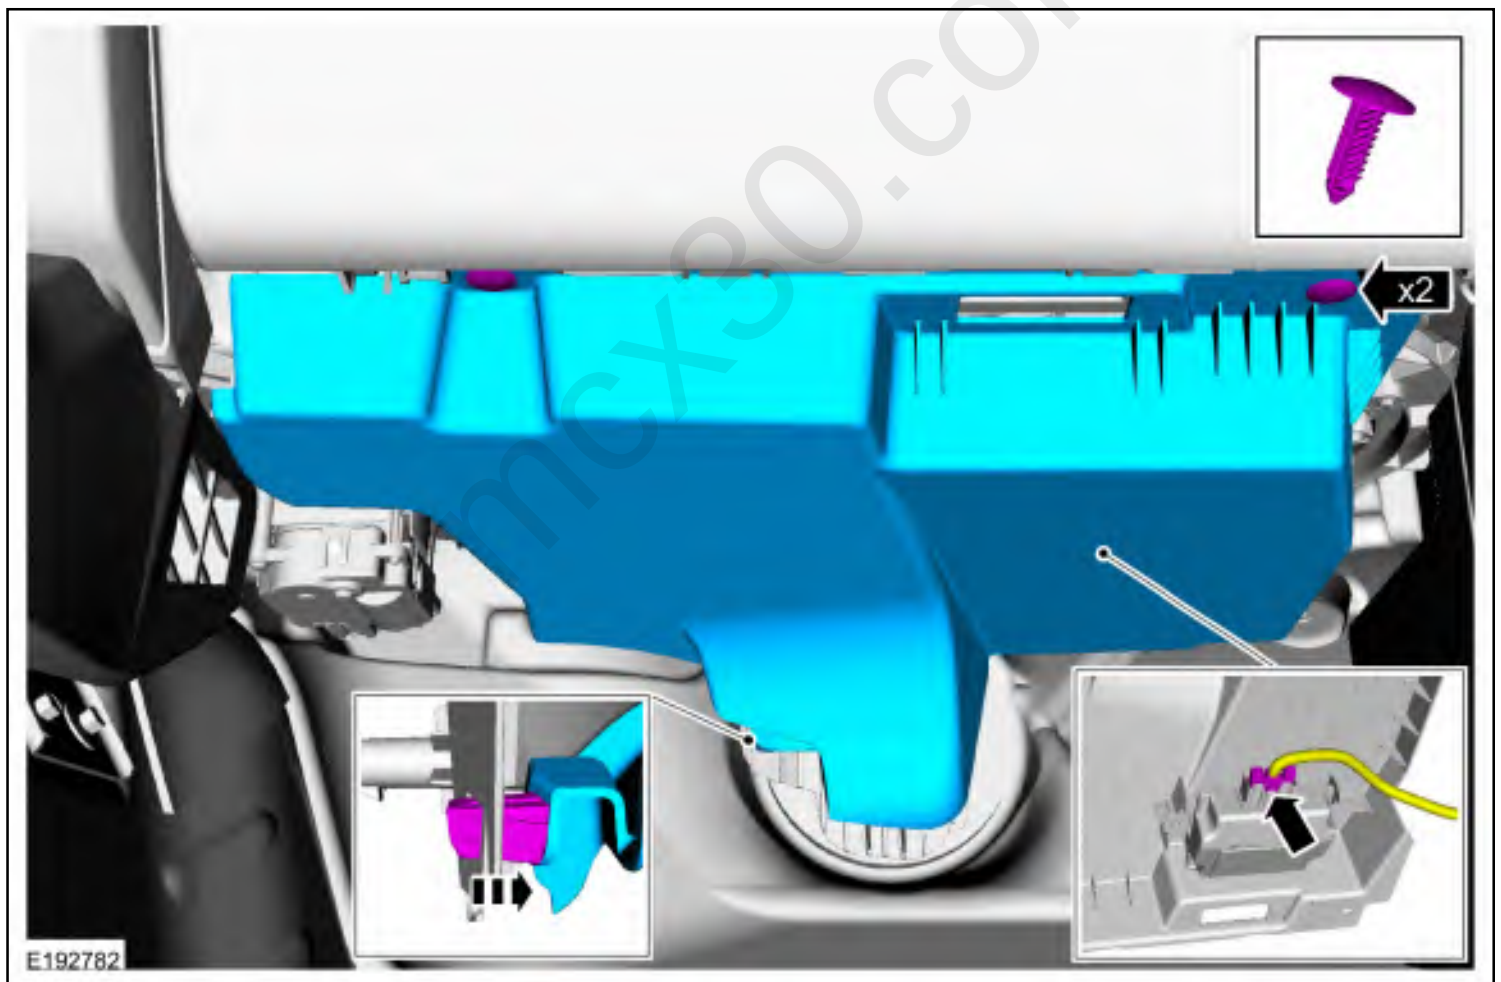

2. **NOTE:** Vehicles equipped with TCCM.


Remove the CJB cover.

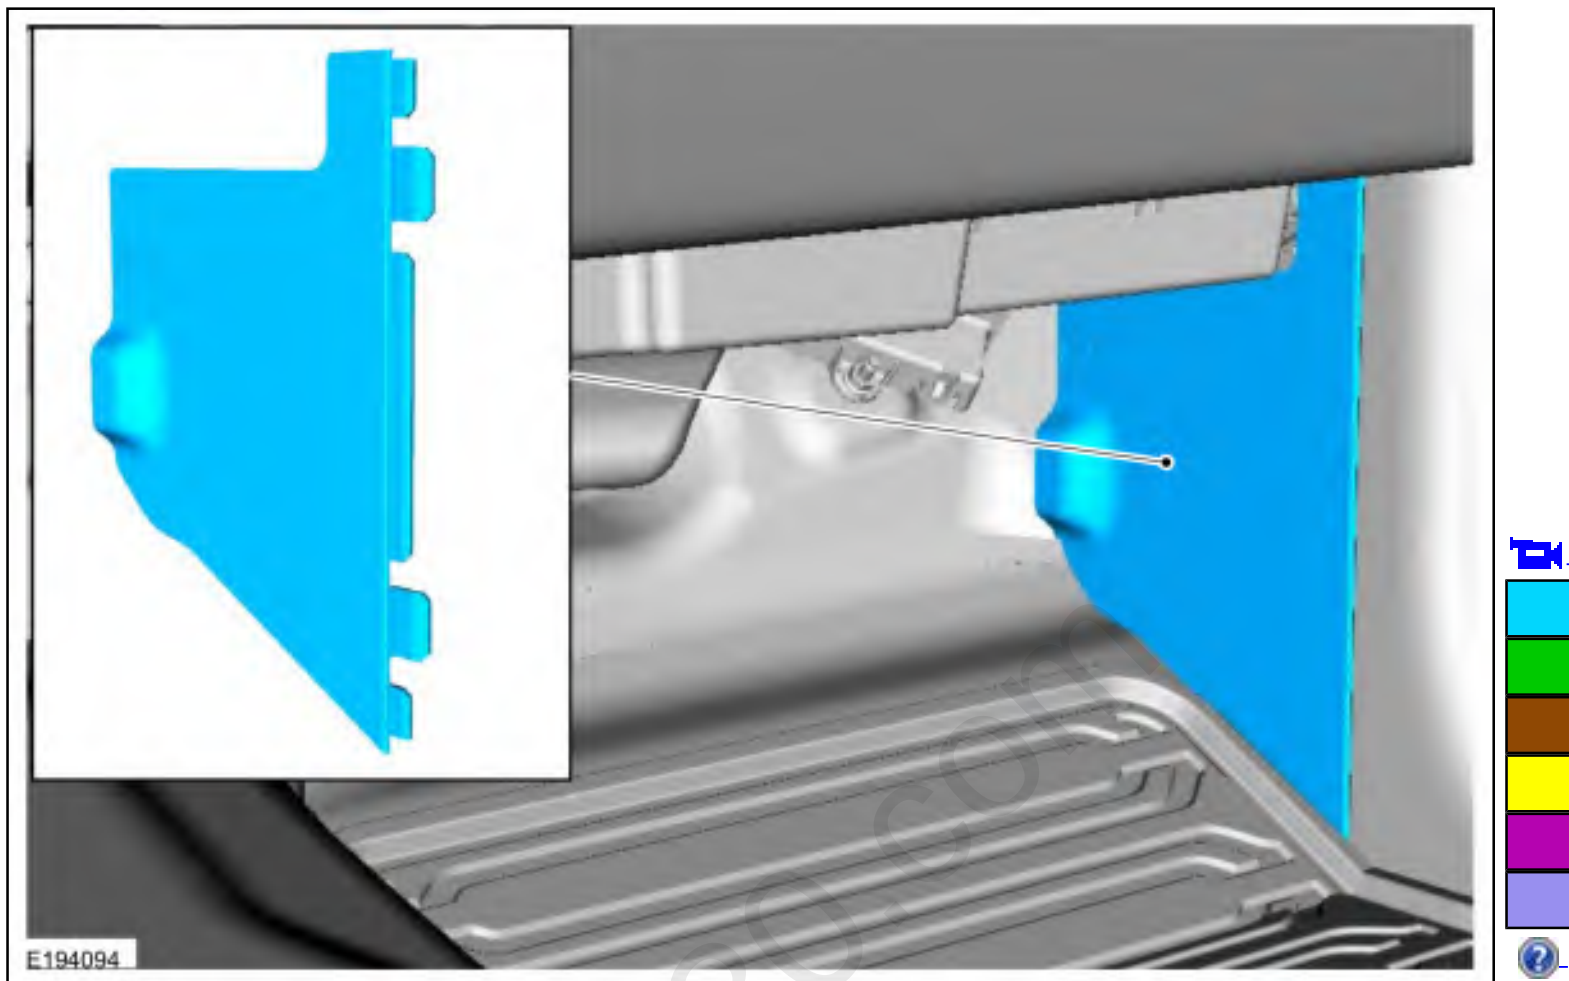


3. **NOTE:** Vehicles equipped with TCCM.

NOTE: The TCCM has slotted mounting holes. It is not necessary to remove the LH TCCM nut when positioning aside the TCCM.

Loosen the LH nut and remove the RH (right-hand) nut.

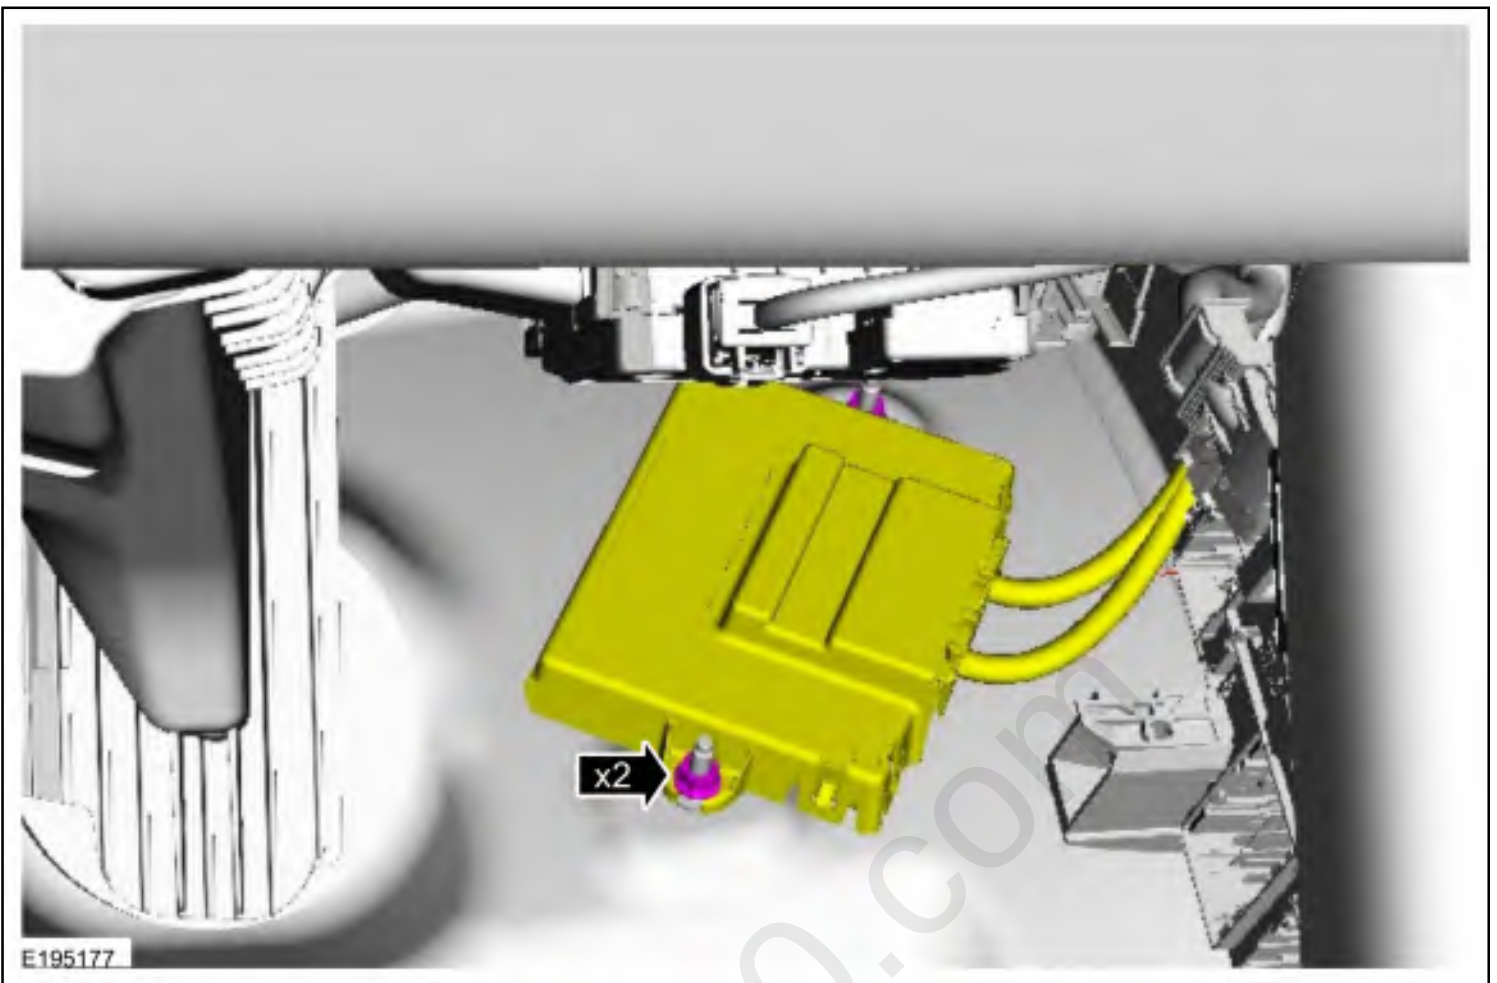

4. Disconnect the electrical connector, remove the retainers and the blower motor control module.

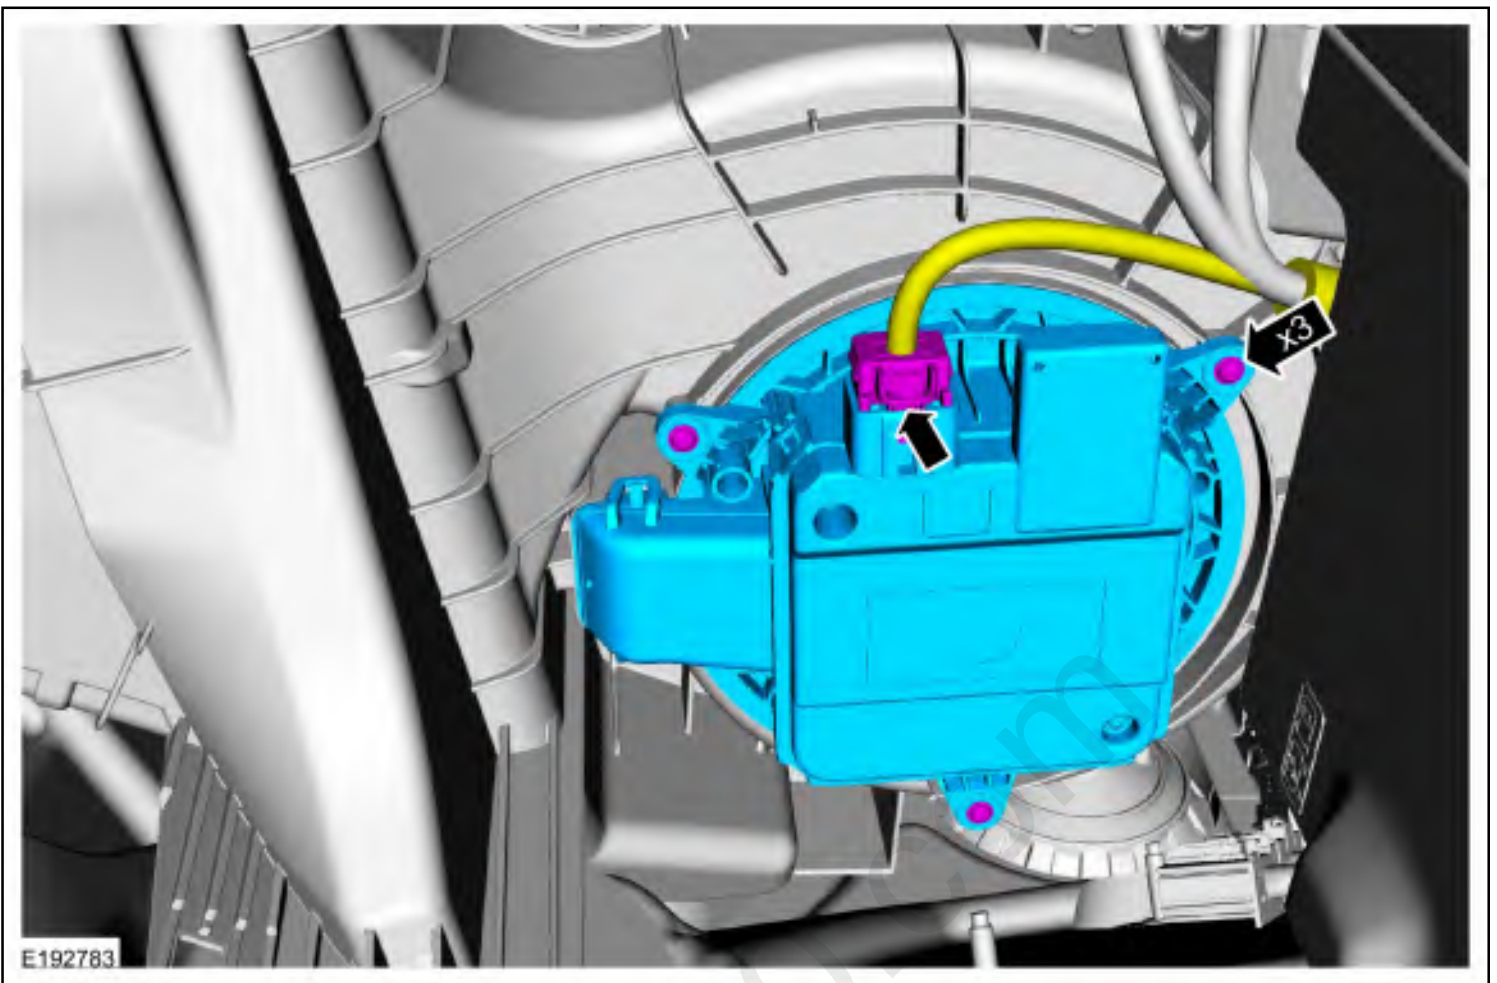

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company