


In-Vehicle Temperature and Humidity Sensor

Removal

1. Remove the IPC.
Refer to: [Instrument Panel Cluster \(IPC\)](#) (413-01 Instrumentation, Message Center and Warning Chimes, Removal and Installation).
2. Remove the in-vehicle temperature and humidity sensor and disconnect the electrical connector.

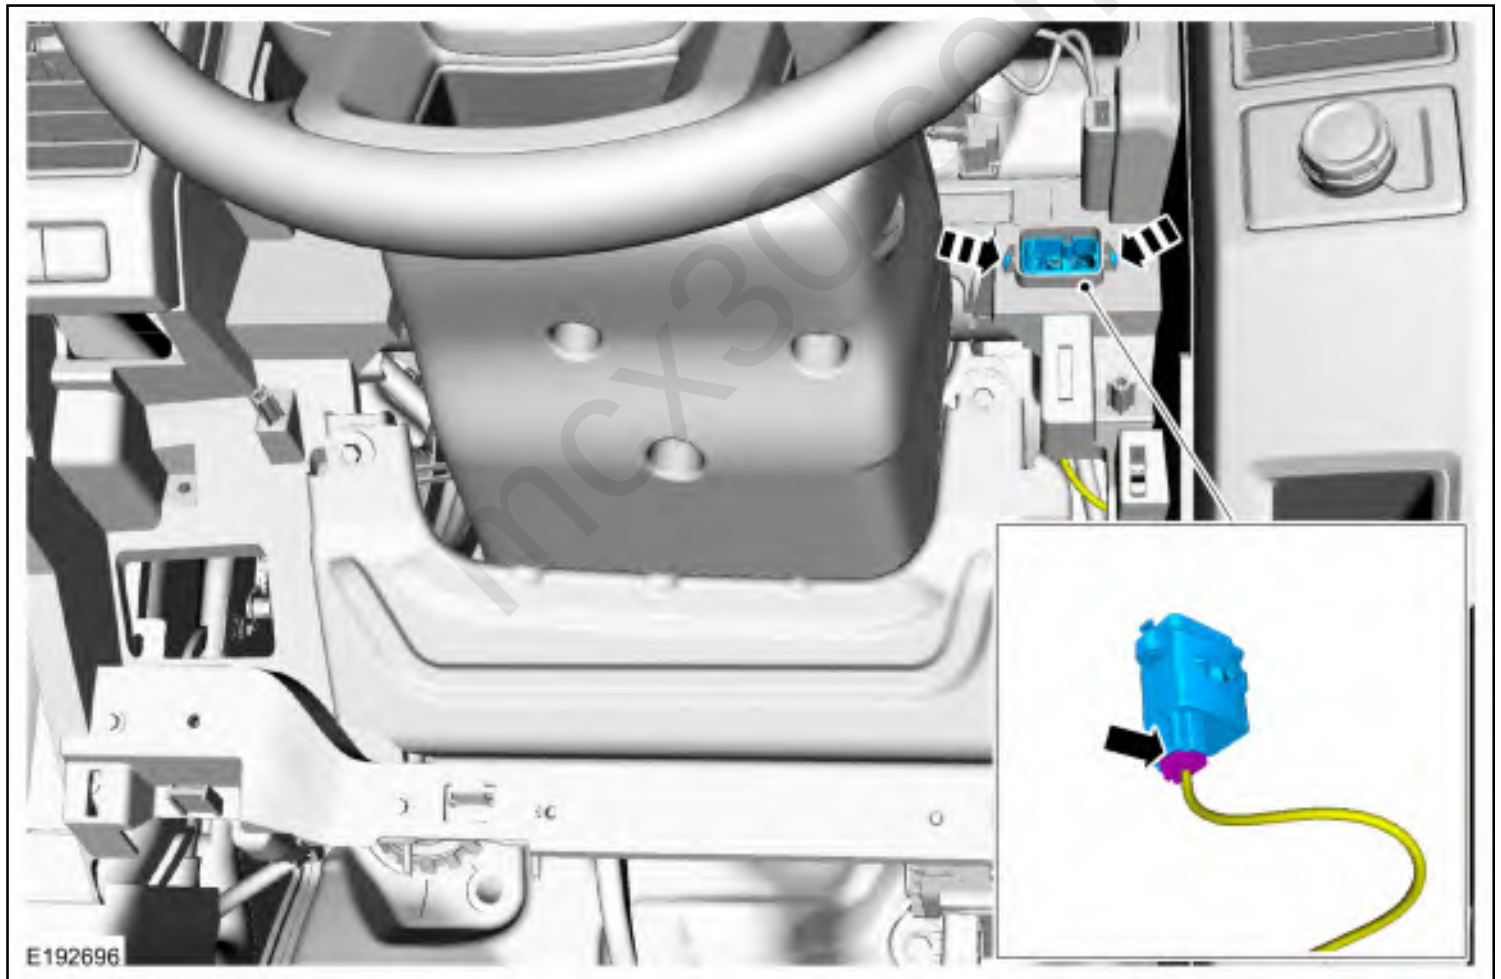

Installation

1. To install, reverse the removal procedure.

mcx30.com