


Temperature Door Actuator

Removal

1. Disconnect the electrical connector, remove the retainers and the temperature door actuator.

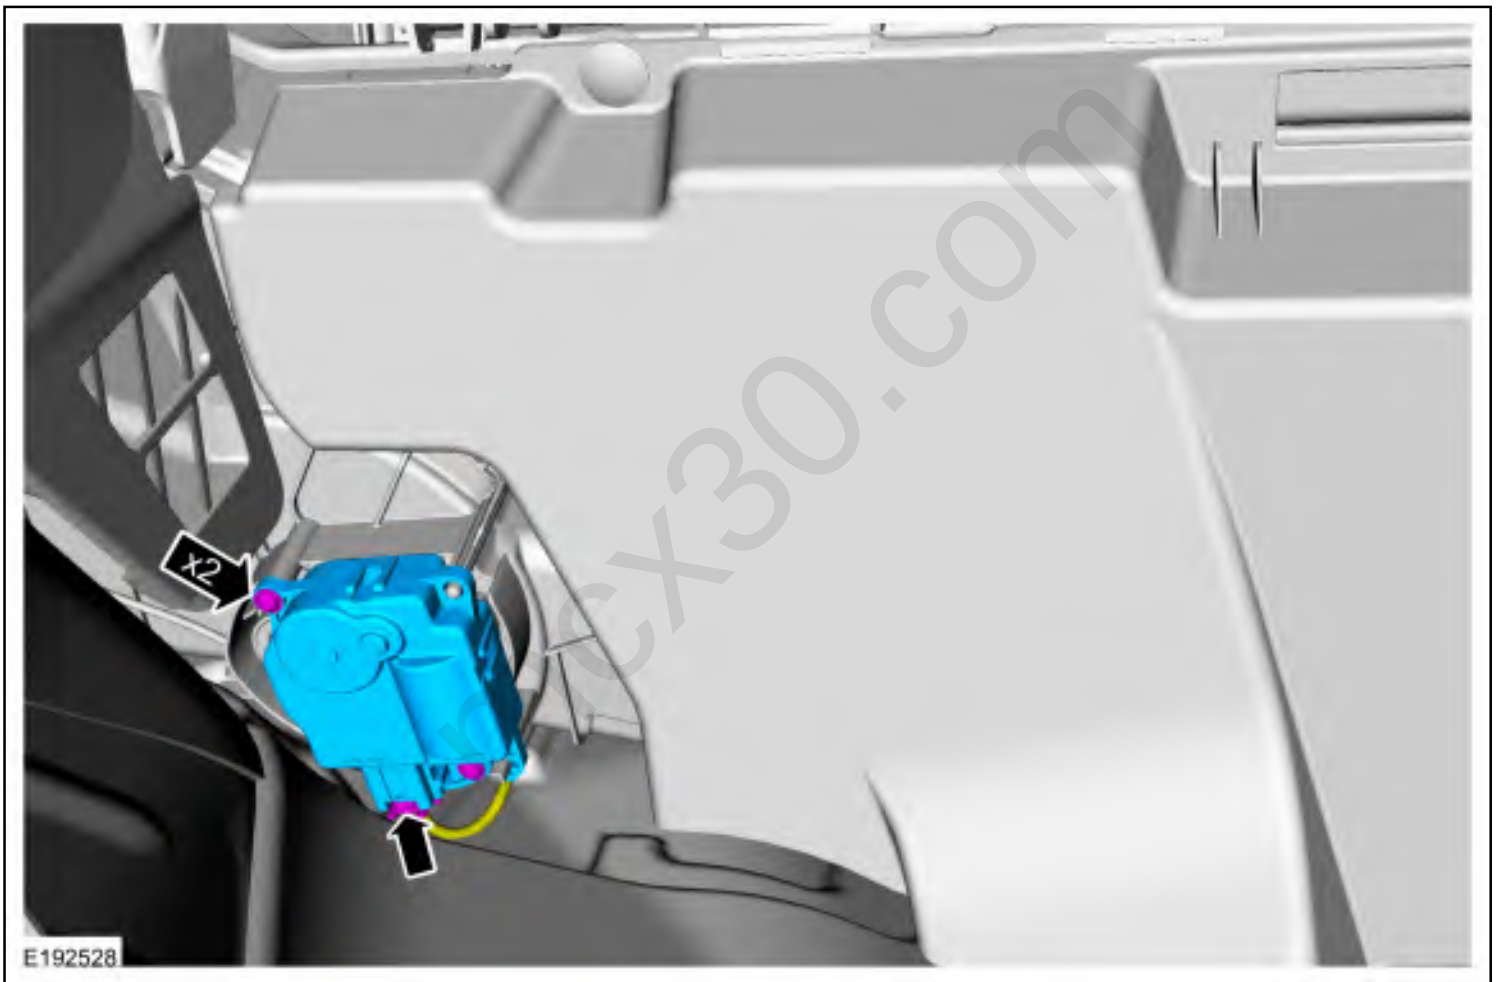

Installation

1. To install, reverse the removal procedure.