


Passenger Side Footwell Air Discharge Temperature Sensor

Removal

1. Remove the climate control housing.
Refer to: Climate Control Housing - Vehicles With: Dual Automatic Temperature Control (DATC) (412-00) .
2. Disconnect the electrical connector and remove the passenger side footwell air discharge temperature sensor.

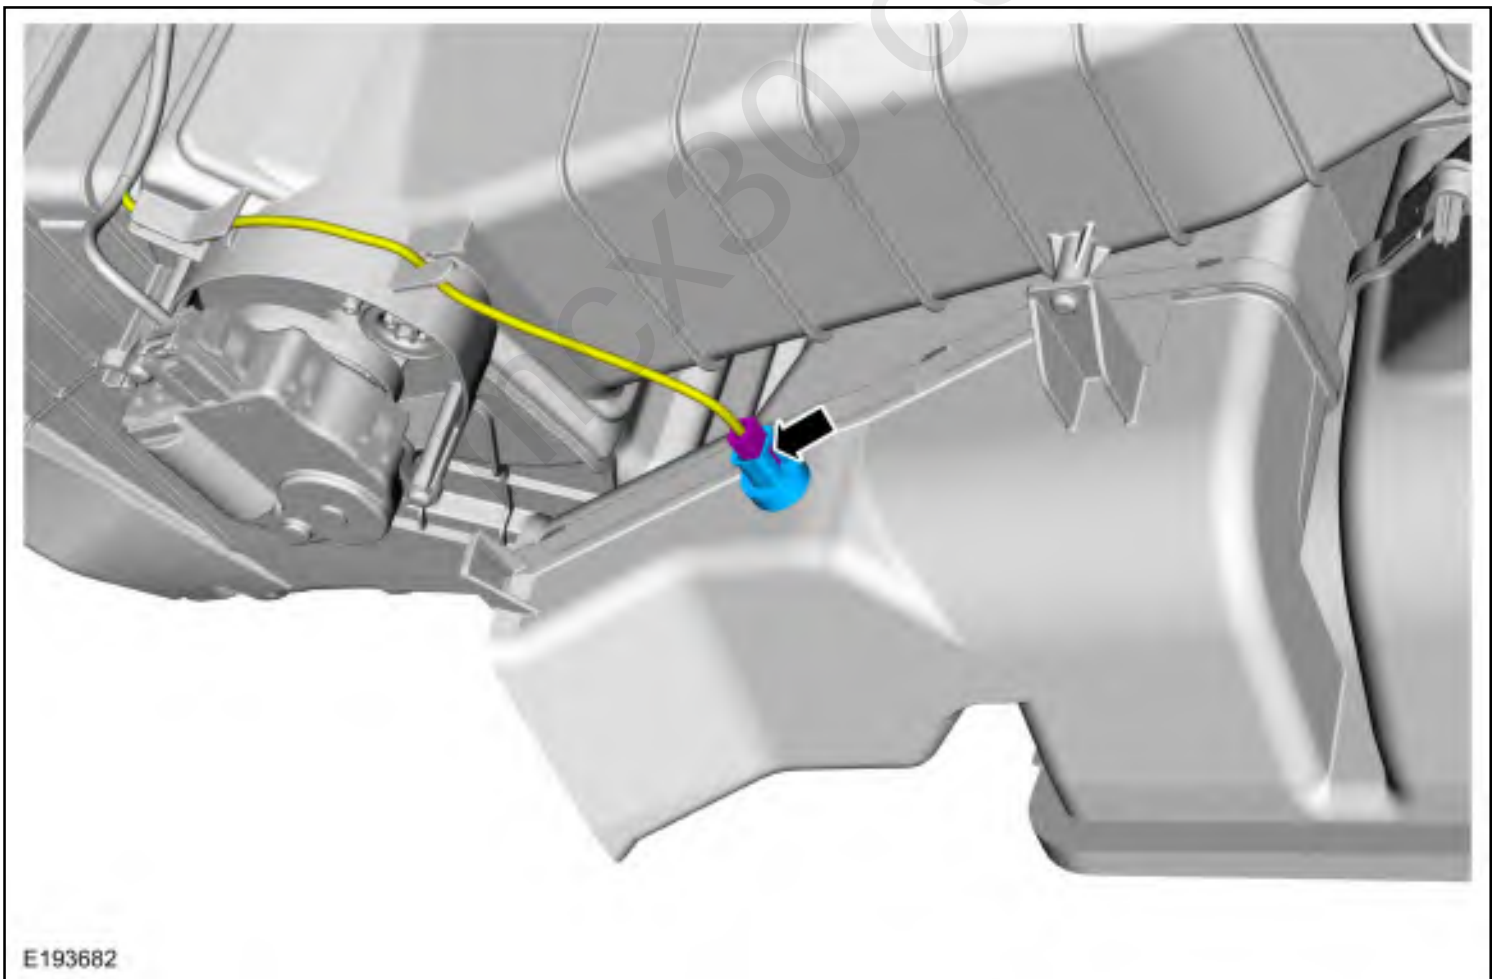

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

mcx30.com

Passenger Side Register Air Discharge Temperature Sensor


Special Tool(s) / General Equipment

Interior Trim Remover

Removal

NOTE: *Removal steps in this procedure may contain installation details.*

1. If equipped, release the clips and remove the instrument panel speaker grille.
Use the General Equipment: Interior Trim Remover

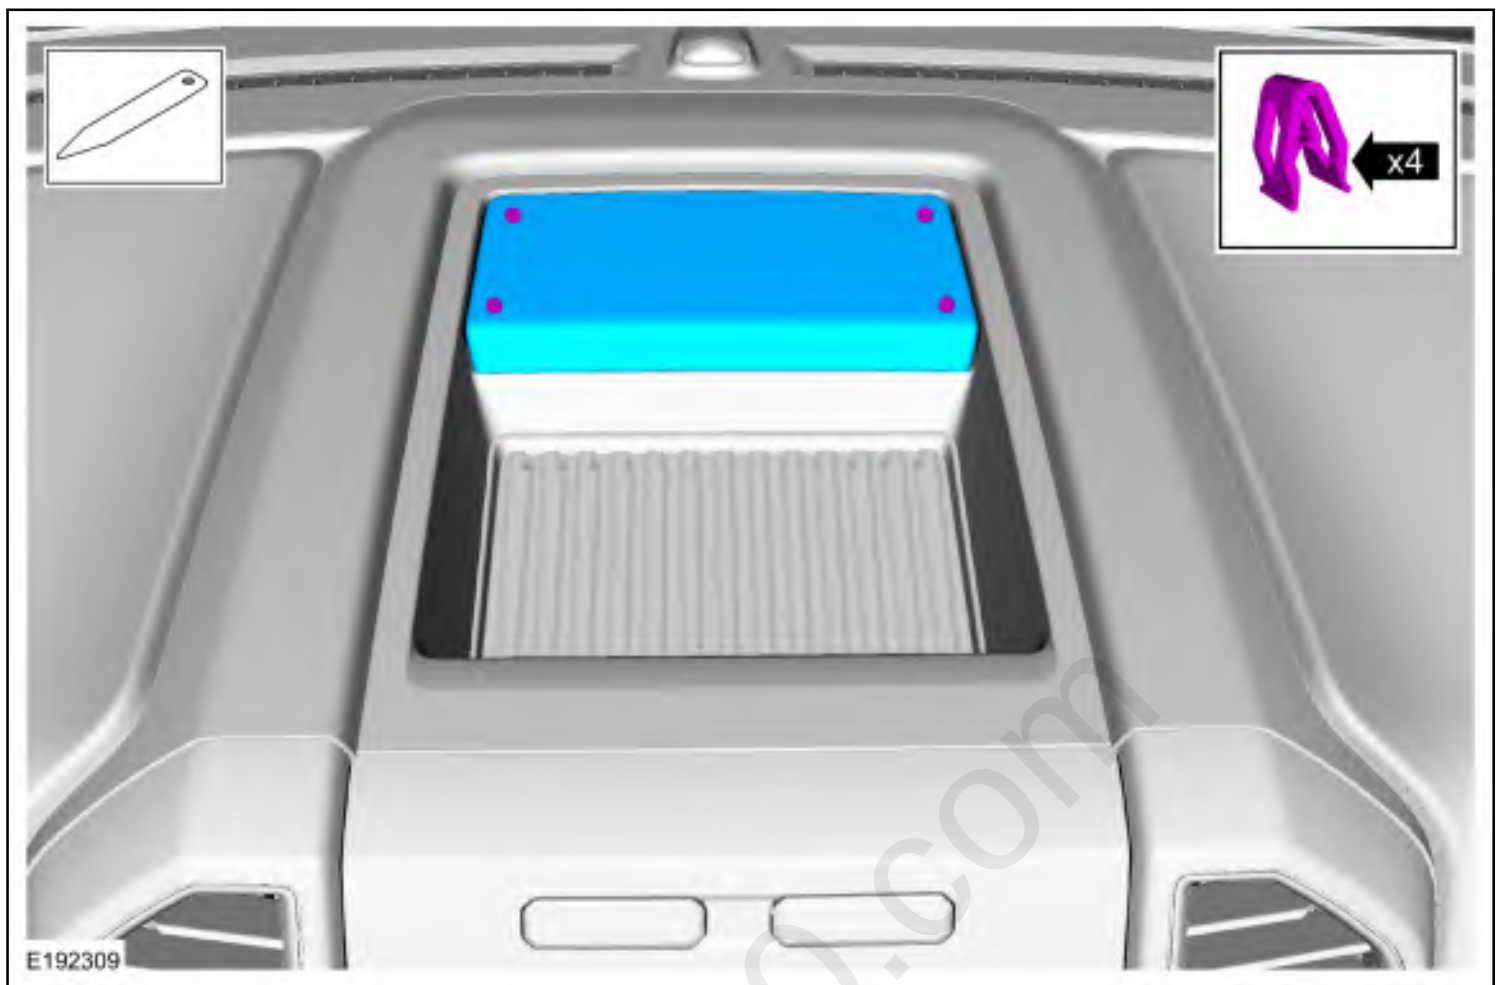


2. **NOTE:** *Vehicle with speaker shown, without speaker similar.*


Remove the bolts, release the clips and remove the instrument panel center upper trim panel.
Disconnect the electrical connector.

Use the General Equipment: Interior Trim Remover

Torque: 18 lb.in (2 Nm)

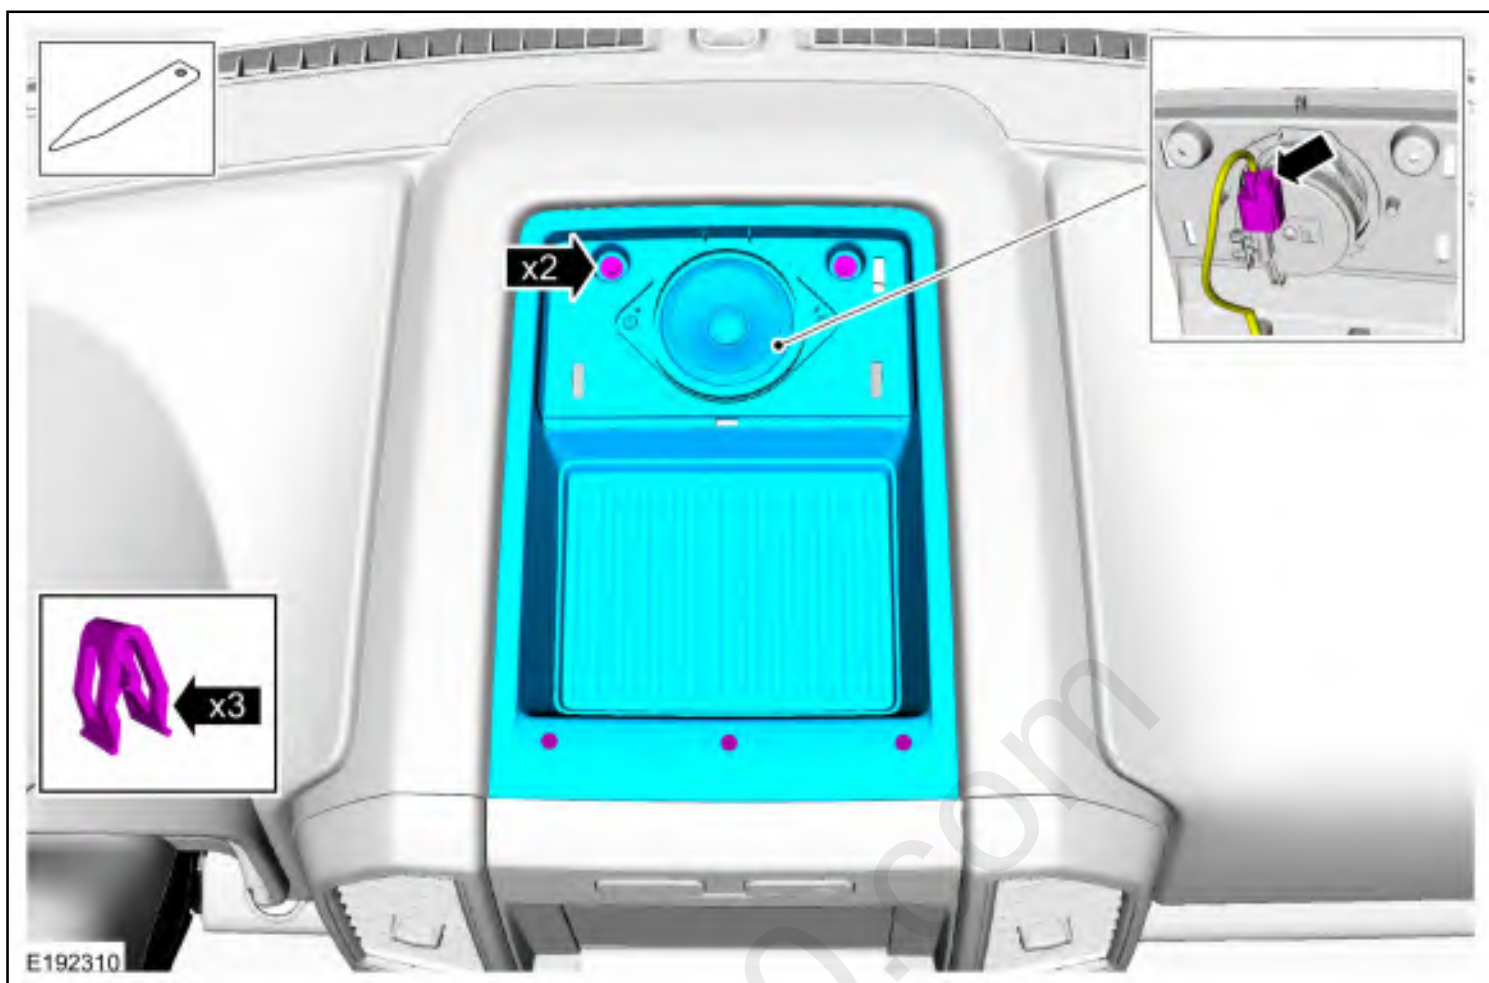

3. Disconnect the electrical connector and remove the passenger side register air discharge temperature sensor.

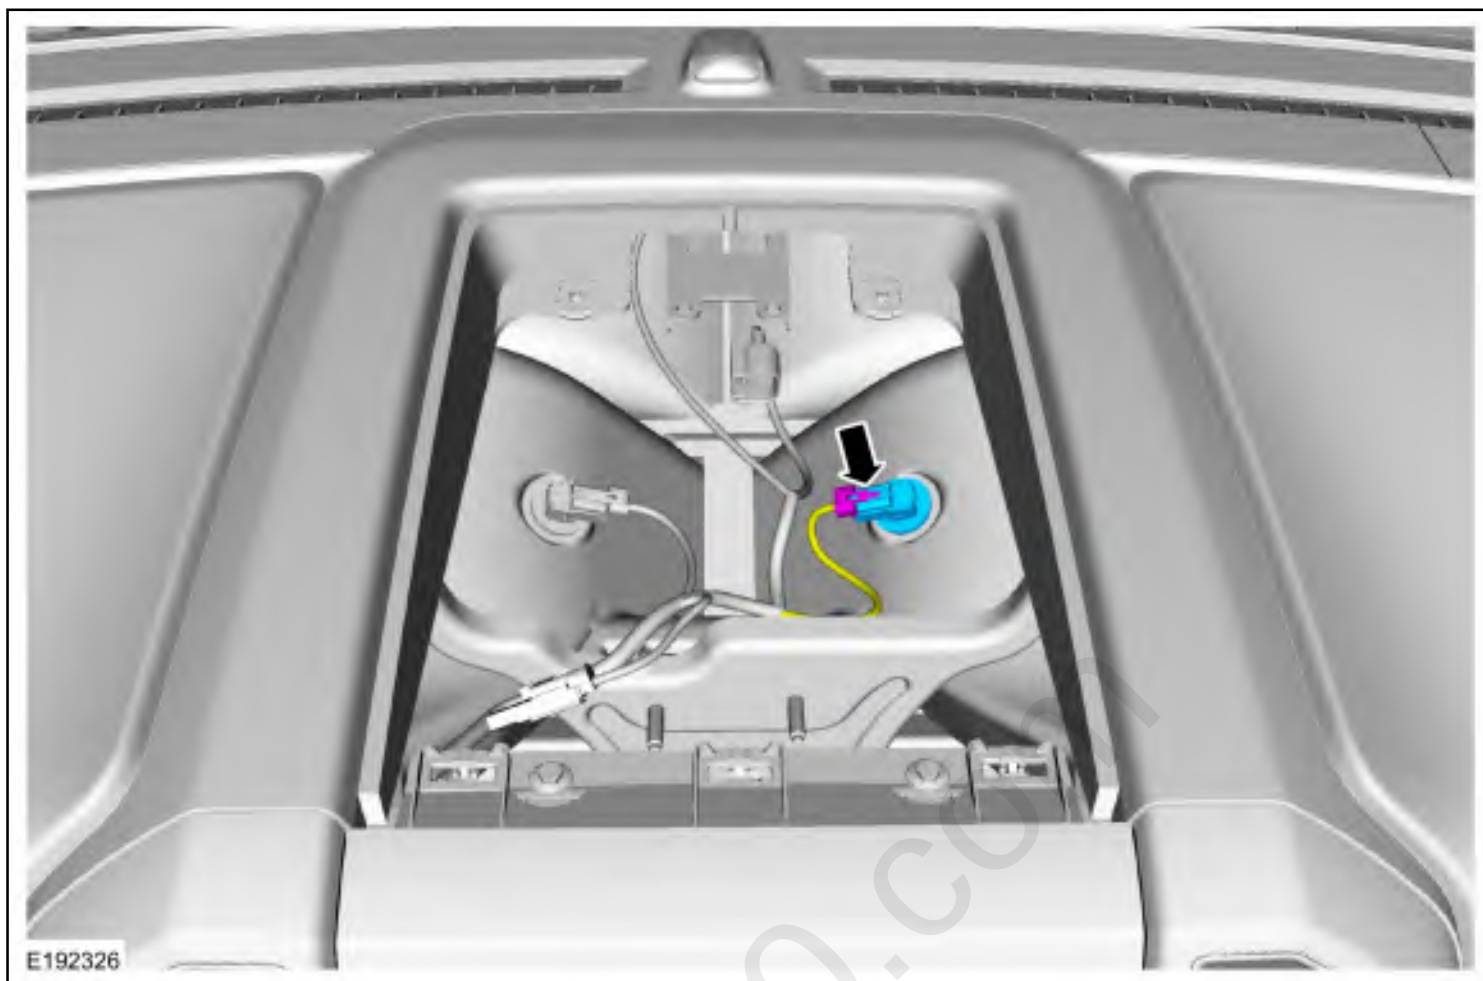

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
